

ATAG

Installation & Servicing Instructions

**XL75F
XL105F
XL125F
XL150F
XL180F
XL210F**



Table of contents

Safety regulations	General regulations	3
	Intended use	3
	Standards and regulations	3
Product description	Functional description - ATAG XL F	4-5
	Hydraulic circuit diagram	6
	Technical data / ERP data	7
	Dimensions.....	8-9
Delivery scope	Standard version / Accessories	10
	Cascade	11
	Cascade exampless	12-14
	Cascade accessories	15-16
Installation	Boiler transport	18
	Installation / Connections	18
	Hydraulics Circulation pumps	19
	Cascade floor standing in line	20
	Cascade floor standing back-to-back.....	21
	Connecting the boiler	22
	Cascade accessories	23
	Single boiler external	24
	Single boiler back-pack	24
	Dimensions headers, low loss headers and bends....	25
	Water and hydraulic system	26
	Heating water quality.....	26
	System water additives	27
	DHW quality	28
	Expansion vessel	28
	Gas line	29
	Condensate connection.....	30
	Hot water supply.....	31
	Air- / flue gas ducts.....	32-35
	Collective flue gas outlet	36-37
	Electrical connection	38-41
	Multi function	42-44
	Temperature sensors.....	45
	External controls.....	46
	eBus2 controls.....	47
	Wiring diagram	48-49
Boiler setting	Boiler setting.....	51
Operation	Description of display	52
	Description of display and keyboard	53
	Structure of the User Menu	54
	Change the settings (expert level).....	55
	Parameter listing	56-71
	Detail parameter description	72
	Function Thermoregulation.....	73
	Time programs Heating	74
	Automatic summer / winter changeover	75
Commissioning	Change the language on the screen	76
	Change the time and date	77
	Parameter adaption to the heating system.....	78-79
	Weather compensation.....	80
	Inspection	81
	Flue gas analysis.....	82-84
	Full load (Step 1/3)	82
	Low load (Step 2/3)	83
	Adjustment on the gas valve (Step 3/3)	84
Maintenance	Decommissioning and maintenance works	85
	Inspection and maintenance interval.....	85
	Maintenance details	86-90
	Maintenance warning	90
	Inspection overview	91
	Maintenance overview.....	92
Errors	Error codes and fault finding	93-95
	Reset a Fault code	96
	View Error code History	97
	Disposal and recycling	98
Appendix	Sensor resistance	99
	Standard schemes	100-103
Declaration of conformity	104

Version:
from sv 1.0
01-2020

Safety regulations

General regulations

Intended use

Standards and regulations

General regulations

This document contains important information with regard to safety and reliability of the installation, its commissioning and the operation of the ATAG XL F boiler. All described activities must be carried out exclusively by authorized technicians.

Only original parts may be used; in contrary cases, our warranty and guarantee provisions are excluded.

Intended use

The ATAG XL F is a condensing and modulating gas boiler, floor standing and is delivered with a pre-mix burner. The maximum target temperature of the boiler is 90°C.

Standards and regulations

All applicable standards (both European and national) must be observed during the installation and operation of the ATAG XL F boiler, including:

- Local building regulations, with regard to the installation of heating facilities and waste gas exhaust systems;
- Regulations about a connection to the electrical utility network (mains);
- Regulations of the local gas utility;
- Standards and regulations concerning safety facilities for heating systems;
- Additional local laws/regulations, which are applicable to the installation and operation of heating systems.
- See the chapter "Commissioning", for those regulations applicable to heating water and warm water quality.

The ATAG XL F boiler is CE-certified and conforms to the following European directives and standards:

- 92 / 42 / EEC
Efficiency of hot water heating systems
- 2016 / 426 / EU
Gas appliance regulation
- 2014 / 35 / EU
Low voltage directive
- 2014 / 30 / EU
EMC directive
- EN 15502-1
Requirements for gas-fired systems – Part 1: General requirements and tests
- EN 15502-2
Requirements for gas-fired systems – Part 2-1: Type C such as B2, B3

and B5 with nominal calorific debit = < 1000 kW

- EN 55014-1 (2011) EMC – Requirements for household appliances, electrical tools and similar equipment – Part 1: Emissions
- EN 55014-2 (2008) EMC – Requirements for household appliances, electrical tools and similar equipment – Part 2: Safety - product family standard
- EN 61000-3-2 (2013)
Electromagnetic compatibility (EMC) - Part 3-2: Framework conditions - framework conditions for current fluctuations (current drain 16 A per phase)
- EN 61000-3-3 (2014)
Electromagnetic compatibility (EMC) - Part 3-3: Framework conditions for voltage fluctuations, voltage loss and flicker in public low-voltage networks, for equipment with a nominal 16 A current per phase, which are not subject to any special connection regulations.
- EN 60335-1 (2011) Household and similar electrical equipment - Safety - Part 1: General requirements
- EN 60335-2-102 (2006/A1-2010)
Household and similar electrical equipment - Safety - Part 1: Special requirements for gas, oil and solid fuel-fired equipment with electrical connections



Incorrect operation can cause damage to the boiler and system components and has the potential to introduce hazards. Only persons with appropriate knowledge and qualifications, should be allowed to make adjustments to the boiler and associated equipment.



The equipment may not be used by children, by persons with a hindrance of bodily, mental or sensory capacities, or which insufficient experience and knowhow, unless they are supervised or have received corresponding instructions.



It must be ensured that children cannot play with the equipment.

It is necessary that the currently valid local normatives will be observed.

UK:

British Standards

- BS 5440 - BS 6644 - BS 6891 -
BS 7074 - BS 8552 -
BS EN 60335 Pt1 - BS EN 12828

IGEM Documents

- IGE/UP/1&1A - IGE/UP/2 -
IGE/UP/10

UK Regulation


- Clean Air Act 1993
- IEE Regulations
- Building Regulations
- Gas Safety (Installation & Use) Reg.

Other Guidance

- ICOM - BSRIA Documents
BG29/2012
- BG50/2013 - CIBSE Guides
(B1, C, F)
- HSE - INDG 436

Product description

ATAG XL F Double Engine

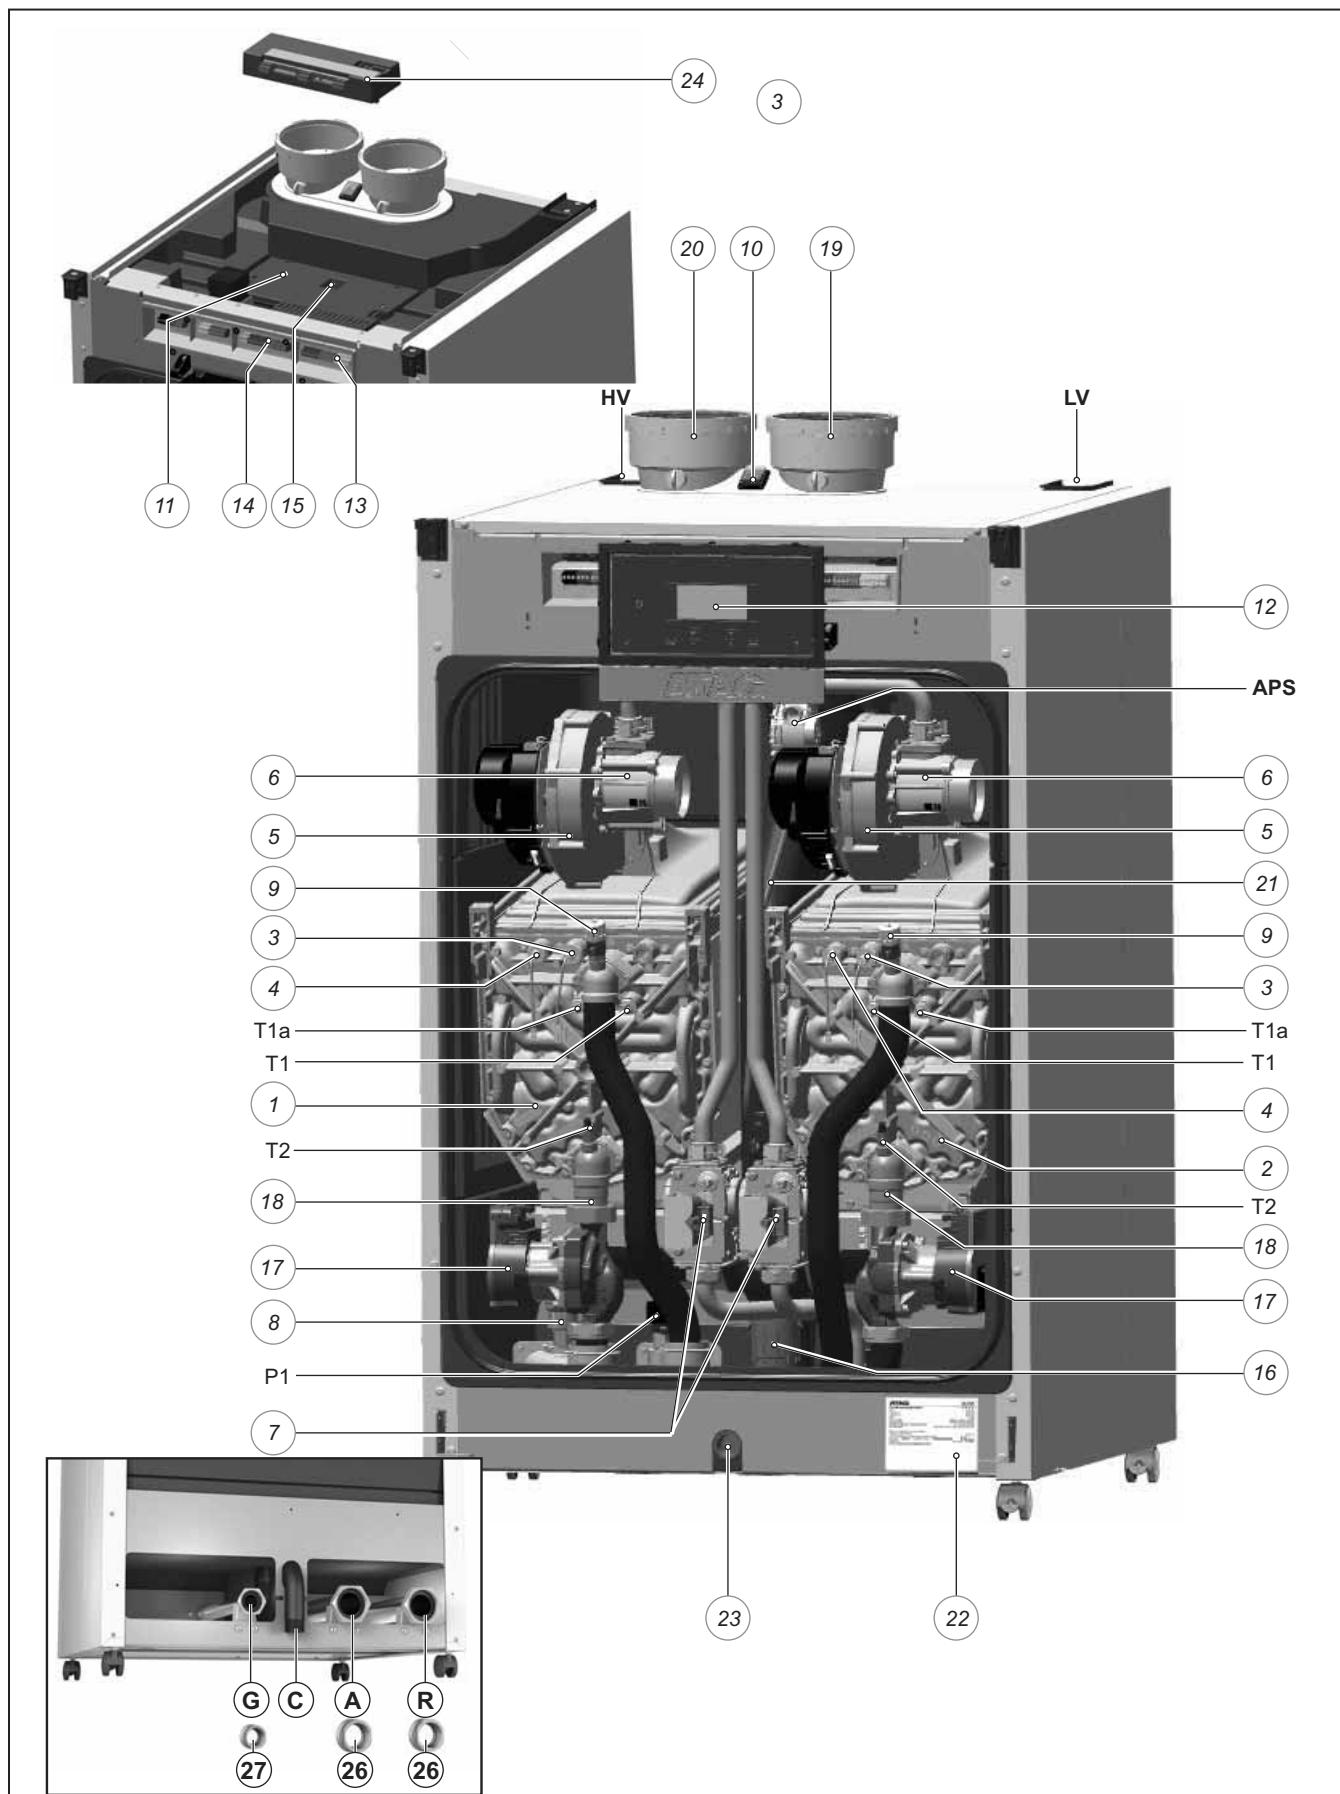

Product description

ATAG XL F

Legend:

1. heat exchanger 1 (see table)
2. heat exchanger 2 (see table)
3. ignition electrode
4. detection electrode
5. fan unit
6. venturi
7. gas valve
8. automatic air vent
9. manual air vent
10. main switch 230V
11. boiler control unit
12. control unit HMI
13. connection terminal
14. connection terminal cascade bus communication
15. connection terminal pc
16. dirt collector
17. circulation pump
18. water no return valve
19. flue connection
20. air supply
21. collective flue pipe
22. data plate
23. drainage cap
24. clip 3 zone (optional)
25. air/flue connection concentric (optional for ATAG XL F 75-105-125-150)
26. water pipe connection 1 1/2" (optional)
27. gas pipe connection 1" (optional)

T1 flow sensor
T1a secondary flow sensor

T2 return sensor

P1 water pressure sensor

APS Air Pressure Switch

HV high voltage electrical supply

LV low voltage electrical supply

G gas pipe
A flow pipe CH
R return pipe CH
C condensate drain pipe

Boiler type	Exchanger 1	Exchanger 2
75	iCon XL1	-
105	iCon XL2	-
125	iCon XL1	iCon XL1
150	iCon XL1	iCon XL1
180	iCon XL2	iCon XL1
210	iCon XL2	iCon XL2

Product description

The ATAG XL F is a condensing and modulating gas boiler with one or two pre-mix burners, floor standing. It is characterized by the following features:

- A large modulation range that guarantees a long burner service life, while minimizing standby losses, start-up emissions and material wear-and-tear.
- Flue gas temperature below 80°C
- Also suitable for room sealed conditions
- Control panel with all operational elements
- Microprocessor, with multi-functional display
- Automated ignition, with repetition and ionization monitoring
- Water pressure monitoring
- Energy-saving pump
- Stainless steel heat exchanger with smooth tube condenser
- Very maintenance-friendly
- Ready for weather-dependent control (accessory)
- Cascadecontroller up to 8 boilers
- External controls (accessory) by on/off, eBus or 0-10V
- Modern metal panelling, stove-enamelled

Functional description

The control unit modifies the heating performance to the current heating requirements, by changing the default values of the fan rotating speed. In this regard, the boiler flow temperature is continually measured via a sensor. In case of a deviation of the actual temperature from the target temperature, the control unit reacts immediately and adjusts the

RPM of the fan, and with that the boiler performance via the gas armature.

A deviation can be due to:

- A changed default value of the boiler temperature, via the boiler heating control unit
- A change on the outdoor temperature
- Request for Domestic Hot Water
- Changed heating curve

By means of the integration of the individual components in a system, and within the control range of the equipment, it is ensured that the boiler performance always corresponds to the actual heating requirements.

Delivery scope

The boiler, which has been assembled at the factory and is ready to use, is delivered in cardboard packaging. The following is contained in the delivery scope of the ATAG XL F:

- Modulating high efficiency gas-fired boiler, 16.5 to 200kW
- High efficiency pump(s)
- Boiler/Cascade controller


Accessories:

- Boiler connection fittings
- Headers for 2 and 3 boilers
- Low loss headers up to 1600kW
- Plate heat exchanger up to 800kW
- Insulation packs
- Boiler frames for free standing units
- Exhaust pipe connection fittings
- Control for 3 extra heating zones
- Open bus interface

For detailed information see the chapter "delivery scope".

Product description

ATAG XL F hydraulic circuit diagram

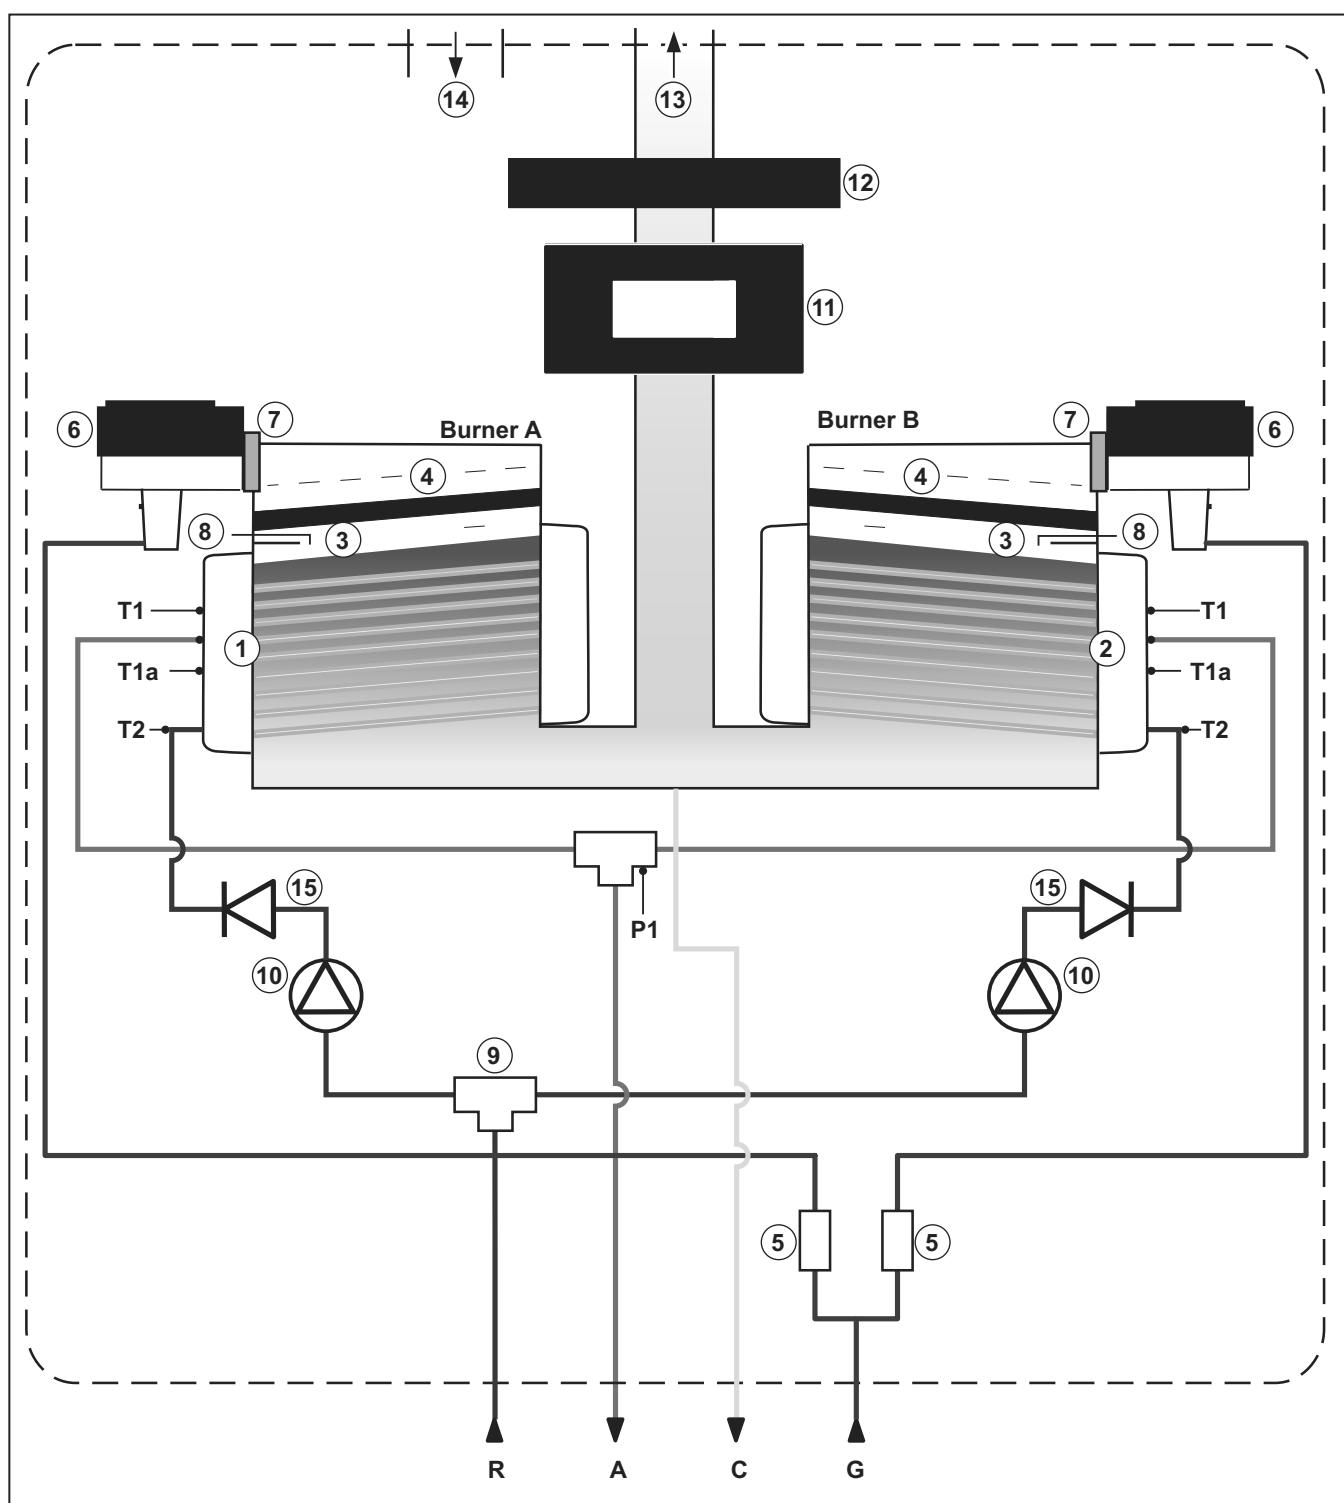

Legend:

- | | |
|-------------------------------|---------------------------|
| 1 heat exchanger 1 = burner A | 8 venturi |
| 2 heat exchanger 2 = burner B | 9 automatic air vent |
| 3 ignition | 10 circulation pump |
| 4 ceramic burner | 11 control unit HMI |
| 5 gas valve | 12 burner control unit |
| 6 fan | 13 flue gas outlet |
| 7 flue non-return valve | 14 air inlet |
| | 15 water non return valve |

- | |
|---------------------------|
| T1 flow sensor |
| T1a secondary flow sensor |
| T2 return sensor |
| P1 water pressure sensor |
| G gas pipe |
| A flow pipe CH |
| R return pipe CH |
| C condensate drain pipe |

Product description


Technical data ErP data

Type ATAG XL F					75	105	125	150	180	210
Permit										
Category										
Heat exchanger type					iConXL1	iConXL2	iConXL1	iConXL1	iConXL1	iConXL2
Output	G20	Full load	80/60°C	kW	65,4	90,2	110,8	130,5	155,5	180,3
		Low load	40/30°C	kW	72,0	99,0	122,2	142,4	170,9	197,4
	G31	Full load	80/60°C	kW	14,6	18,1	14,7	14,6	14,6	18,1
		Low load	40/30°C	kW	16,1	19,9	16,2	16,0	16,1	19,8
		Full load	80/60°C	kW	65,4	90,2	110,8	130,5	155,5	180,3
		Low load	40/30°C	kW	72,0	99,0	122,2	142,4	170,9	197,4
		Full load	80/60°C	kW	23,2	34,3	23,3	23,2	23,2	34,3
		Low load	40/30°C	kW	25,6	37,7	25,7	25,3	25,5	37,6
Input	G20	Full load		kW	66,7	92,3	112,8	133,2	158,8	184,5
		Low load		kW	14,9	18,5	14,9	14,9	14,9	18,5
	G31	Full load		kW	66,7	92,3	112,8	133,2	158,8	184,5
		Low load		kW	23,6	35,0	23,6	23,6	23,6	35,0
Gas consumption	G20	Full load		m³/h	7,06	9,77	11,94	14,10	16,80	19,52
		Low load		m³/h	1,57	1,95	1,57	1,57	1,57	1,95
	G31	Full load		m³/h	2,72	3,76	4,60	5,43	6,47	7,52
		Low load		m³/h	0,96	1,43	0,96	0,96	0,96	1,43
Boiler efficiency		Full load	80/60°C	%	98,0	97,7	98,2	98,0	97,9	97,7
		Full load	40/30°C	%	108,0	107,3	108,3	106,9	107,6	107,0
		Low load	80/60°C	%	98,3	97,9	98,5	98,3	98,2	97,9
		Low load	40/30°C	%	108,4	107,6	108,7	107,3	107,9	107,3
Gas type										Natural gas or Propane gas
CO ₂ natural gas		min./max		Vol. %						8,7 / 9,0
CO ₂ propane gas		min./max		Vol. %						10,2 / 10,8
O ₂ natural gas		min./max		Vol. %						5,3 / 4,8
NOx class					6	6	6	6	6	6
Max. flue gas temperature			80/60°C		61	71	62	61	72	71
Mass flow of flue gas				kg/h	119,8	165,8	202,6	239,3	285,3	331,5
Overpressure at boiler output		max		Pa	156	243	143	200	215	265
Water volume in heating circuit		max		l	9,3	13,9	16,8	16,8	21,3	25,8
Weight				kg	73	80	127	127	132	140
Gas pressure nominal				mbar						20
Gas pressure min / max				mbar						17 / 25
Water pressure		min./max		bar						0,7 / 6
Voltage / frequency		min./max		Volt/Hz						230 / 50
Max power consumption				W	155	250	260	375	428	430
Power consumption part load				W	53	53	55	55	51	51
Power consumption stand-by				W	5	5	6,8	6,8	6,8	6,8
Height/Width/Depth				mm	1100/530/595	1100/530/675		1100/690/595		1100/690/675
Gas Coupling				R						
Flow / Return Coupling				R						
Fluegas Outlet		Diameter		DN	100	100	100	100	130	130
Air inlet		Internal		in mm	100	100	100	100	130	130
Condensate tube		External		in mm	35	35	35	35	35	35

Type ATAG XL F					75	105	125	150	180	210
ErP data according to 2010/30/EU and 811/2013/EU										
Seasonal room-heating energy efficiency class				A						
Nominal heat output		P _n (kW)	65	90	111	131	156	180		
Seasonal room-heating energy efficiency class		η _s (%)	93	93	93	93	93	93		
Annual energy consumption		Q _{HE} (GJ)	202	280	342	404	482	558		
Noise output level, inside		L _{WA} (dB)	65	60	67	70	67	63		
At rated heat output and high-temperature regime (80/60°C)		P4 (kW)	65,3	90,2	110,8	130,6	155,6	180,3		
At 30 % of rated heat output and low-temperature regime (36/30°C)		P1 (kW)	21,8	30,2	37,0	43,7	52,0	60,4		
At rated heat output and high-temperature regime (GCV)		η4 (%)	88,2	87,9	88,4	88,2	88,2	87,9		
At 30 % of rated heat output and low-temperature regime (GCV)		η1 (%)	98,3	98,2	98,4	98,3	98,2	98,2		
At full load		elmax (kW)	0,137	0,120	0,314	0,418	0,464	0,450		
At part load		elmin (kW)	0,045	0,095	0,066	0,071	0,109	0,099		
In standby mode		Psb (kW)	0,005	0,005	0,007	0,007	0,007	0,007		
Standby heat loss		Pstby (kW)	0,086	0,075	0,079	0,079	0,100	0,141		

Product description

Dimensions of ATAG XL F single engine

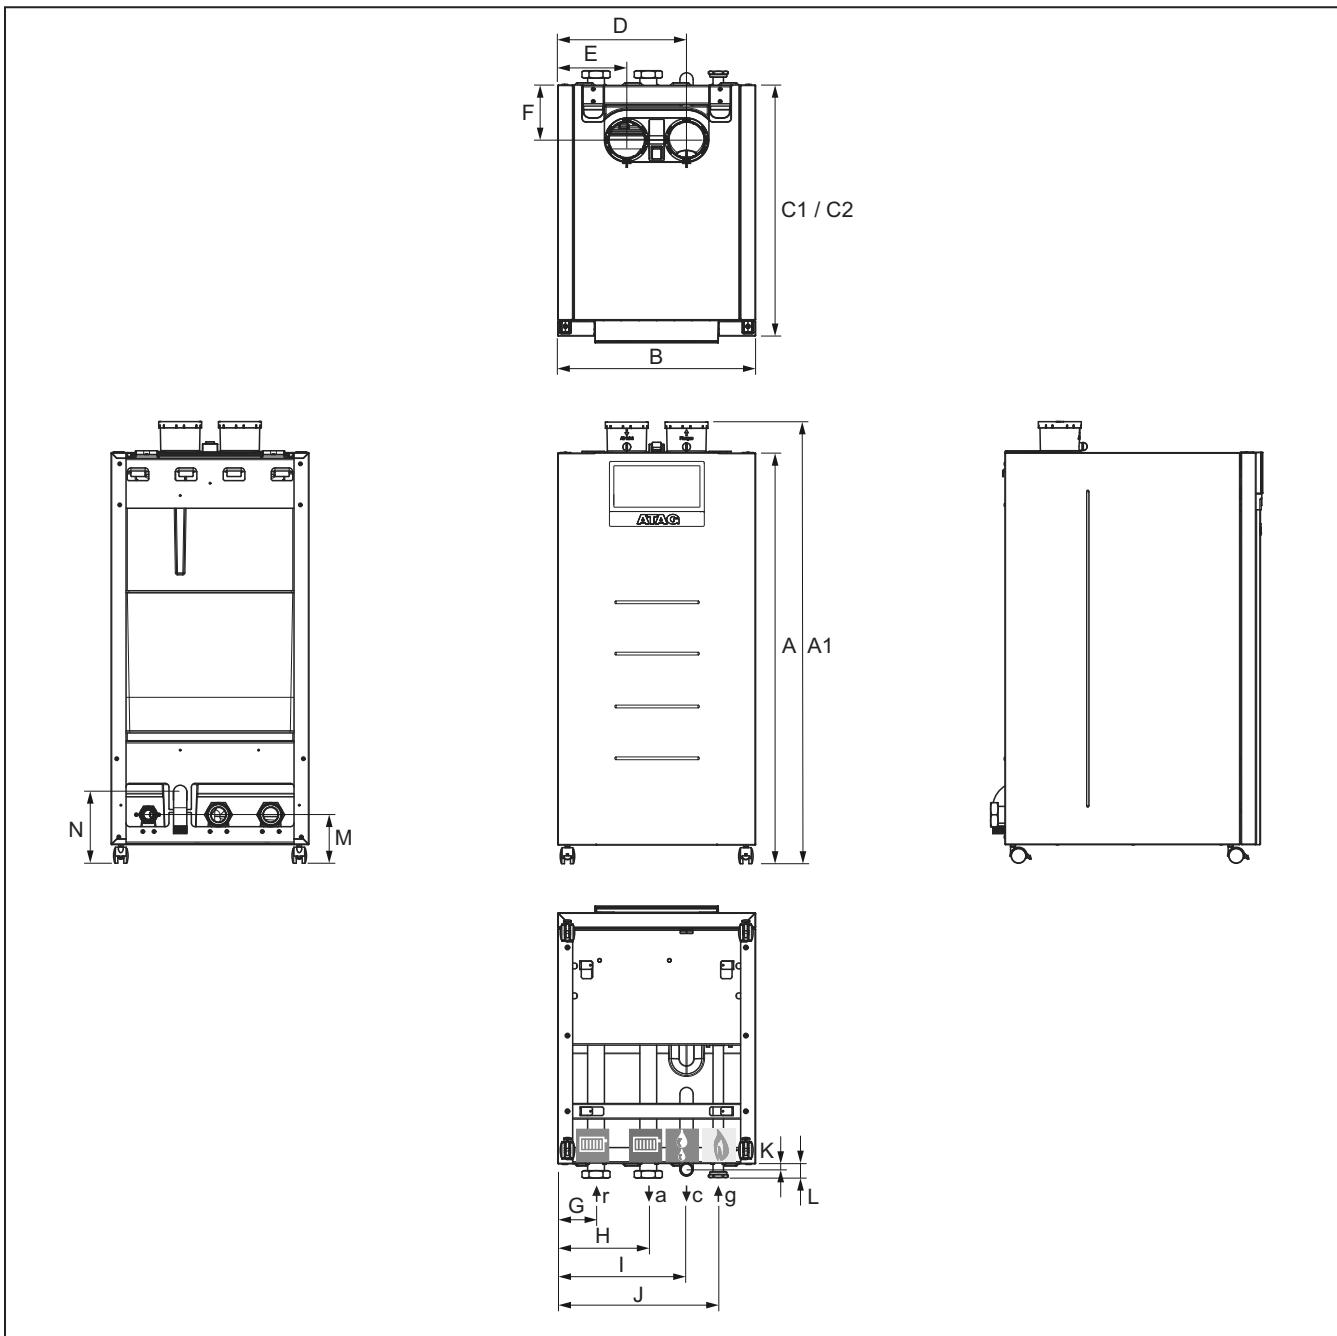

	Type ATAG XL F	75	105
A	Boiler height	mm	1100
A1	Boiler height with flue connection	mm	1185
B	Boiler width	mm	530
C1 / C2	Boiler depth	mm	595
D	Flue gas nozzle parallel	mm	185
E	Air intake parallel	mm	345
F	Flue gas nozzle	mm	150
G	Boiler return connection	mm	103
H	Boiler flow connection	mm	243
I	Condensate connection	mm	345
J	Gas connection	mm	430
K	Condensate connection	mm	15
L	Boiler return-flow-gas	mm	35
M	Boiler return-flow-gas	mm	130
N	Condensate connection	mm	190


Boiler connections				
	Type ATAG XL F	75	105	
	Flue gas nozzle concentric	mm	100*	100*
	Air supply connector concentric	mm	150*	150*
	Parallel connection	mm	2x100	2x100
g	Gas connection		1 1/4"	1 1/4"
	Gas connection**		1" **	1" **
c	Condensate connection	mm	35	35
a	Boiler flow connection		2"	2"
	Boiler flow connection**		1 1/2" **	1 1/2" **
r	Boiler return connection		2"	2"
	Boiler return connection**		1 1/2" **	1 1/2" **

* with concentric adaptor (optional)

** with water/gas connection reduction kit (optional)

Product description

Dimensions of ATAG XL F double engine

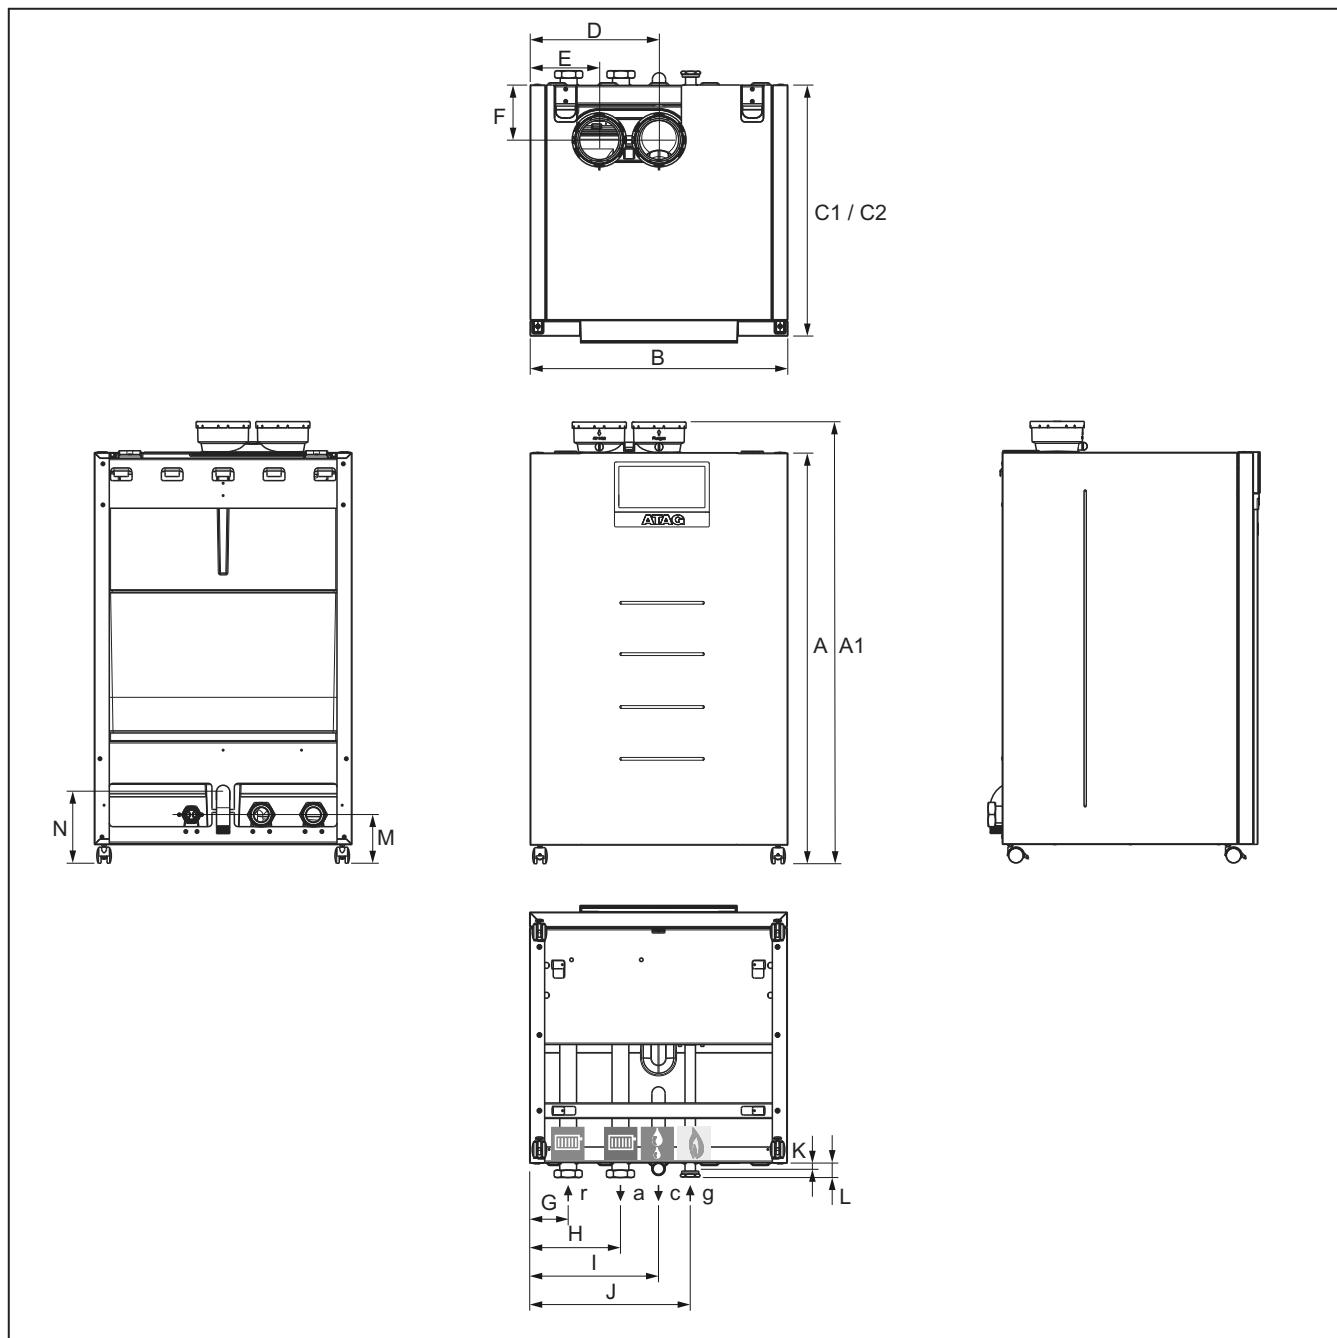

	Type ATAG XL F		125-150	176-210
A	Boiler height	mm	1100	1100
A1	Boiler height with flue connection	mm	1185	1185
B	Boiler width	mm	690	690
C1 / C2	Boiler depth	mm	595	675
D	Flue gas nozzle parallel	mm	185	185
E	Air intake parallel	mm	345	345
F	Flue gas nozzle	mm	150	150
G	Boiler return connection	mm	103	103
H	Boiler flow connection	mm	243	243
I	Condensate connection	mm	345	345
J	Gas connection	mm	430	430
K	Condensate connection	mm	15	15
L	Boiler return-flow-gas	mm	35	35
M	Boiler return-flow-gas	mm	130	130
N	Condensate connection	mm	190	190

Boiler connections				
	Type ATAG XL F		125-150	175-210
	Flue gas nozzle concentric	mm	100*	-
	Air supply connector concentric	mm	150*	-
	Parallel connection	mm	2x100	2x130
g	Gas connection		1 1/4"	1 1/4"
	Gas connection**		1" **	1" **
c	Condensate connection	mm	35	35
a	Boiler flow connection		2"	2"
	Boiler flow connection**		1 1/2" **	1 1/2" **
r	Boiler return connection		2"	2"
	Boiler return connection**		1 1/2" **	1 1/2" **

* with concentric adaptor (optional)

** with water/gas connection reduction kit (optional)

Delivery scope

Standard version Accessories and Cascade

Standard version

The delivery scope of a boiler consists of the following components:

Components		Packaging type
Completely assembled and tested boiler	1	In cardboard box
Roll off rail	2	In boiler packaging
Installation manual ATAG XL F	1	
ERP label (only ATAG XLF75)	1	In document bag in boiler packaging
condense pipe	1	

Accessories

The following accessories can be ordered:

- Flue gas pipes
- Air filter
- Cascade hydraulics (see following pages)
- Boiler frames (see following pages)
- diverter valve set
- Outdoor sensor, tank sensor
- T10 flow sensor
- Control for 3 extra heating zones
- Modbus/LON/BACNET/KNX bus interface
- Water/gas connection kit
- Gas filter
- Min gas pressure switch
- LPG conversion kit
- Plate heat exchanger kit
- Low loss header kit

Listed accessory parts have been constructed or selected especially for the ATAG XL F boiler, which means they are very easy to install (plug and play). You can compose your own system solution, by selecting the accessory combination that fits your needs. For details and prices, please contact ATAG.

In case of cascade configuration, accessories that require an electrical connection should be connected with Master boiler (with the exception of tank probe and Clip in, that can be connected also to other boiler).

Cascade

In principle any combination is possible. The selection can include models with different outputs, if this meets the installation requirements. Including boilers with common outputs assists with sharing load and run times of individual appliance.


The capacity of the flow and return header, gas line and low loss header are adjusted to the selected overall demand.

When installing a single ATAG XL F boiler the use of a low loss header is strongly recommended.

When installing cascaded ATAG XL F boilers: the use of a low loss header adjusted to the set demand is mandatory; the realization of an additional bypass is not allowed; flow and return header should be realized in a the dimension of DN65 or DN100 (according to cascade output). ATAG supplies low loss header versions, which are suitable for a maximum demand of 1600kW.

Product description

ATAG XL F Cascade

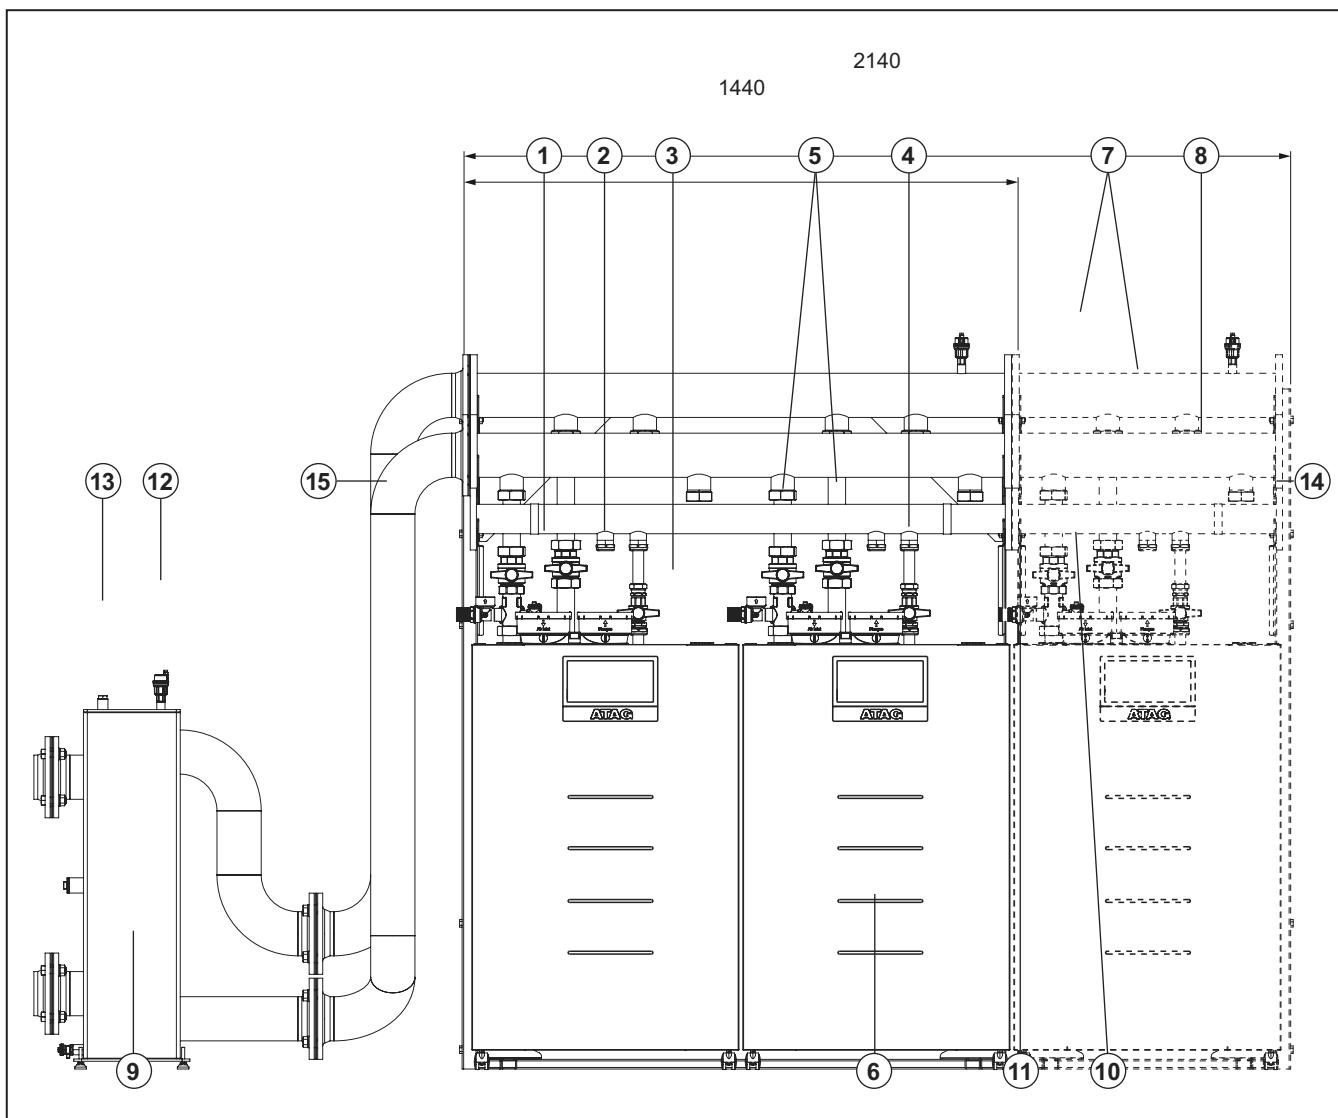

Legend:

1. Air supply
2. Flue/Air supply
3. Cascade manager

Accessories:

4. Gas isolation valve
5. Flow and return isolation valves
6. Non-return valve
7. Flow/return header
8. Gas line
9. Low loss header
10. Safety valve 3 or 6 bar
11. Drain valve
12. Automatic air vent low loss header
13. Pocket for temperature sensor T10
14. Frame
15. LLH connection pipe LEFT or RIGHT side*

Cascade possibilities

The ATAG XL F cascade can be mounted in 2 ways:


- **Floor-standing in line**
All boilers standing alongside one another.
- **Floor-standing back-to-back**
All boilers standing back-to-back

*Low loss header can be installed on left or right side of the cascade using proper left or right connection pipe kit.


Product description

ATAG XL F Cascade examples floor standing in line


ATAG XL F 2 boilers floor standing in line

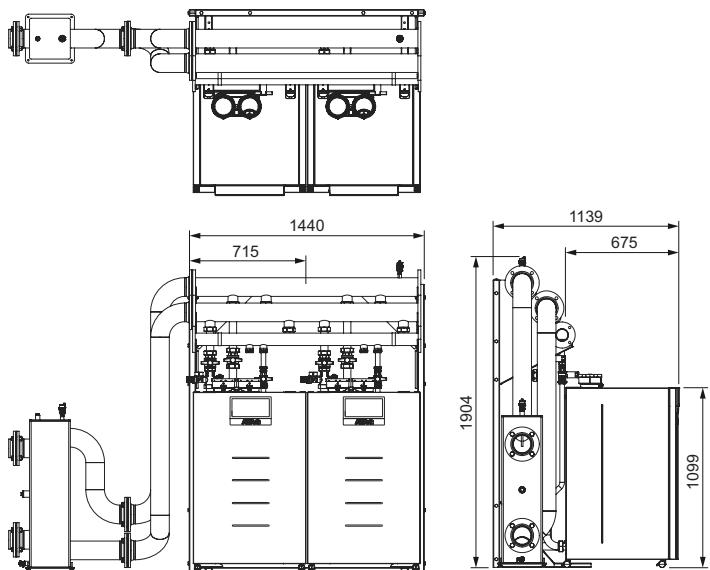


ATAG XL F 3 boilers floor standing in line

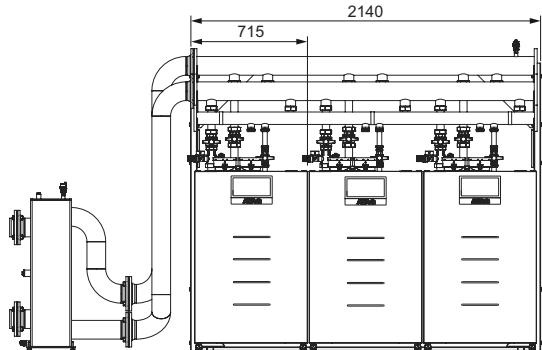

ATAG XL F 5 boilers floor standing in line

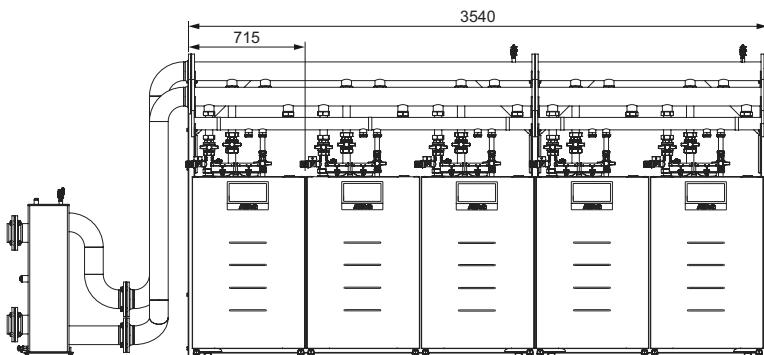


ATAG XL F 8 boilers floor standing in line

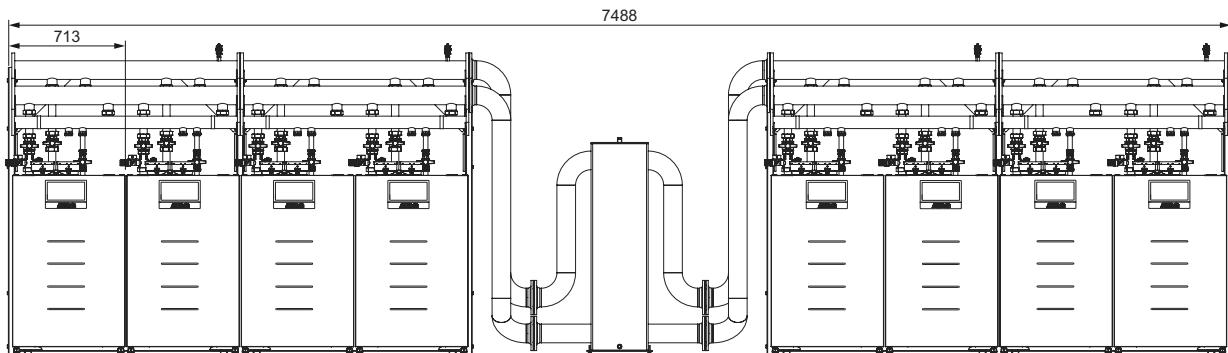


Product description

ATAG XL F Cascade examples floor standing back-to-back


ATAG XL F 3 boilers floor standing back-to-back

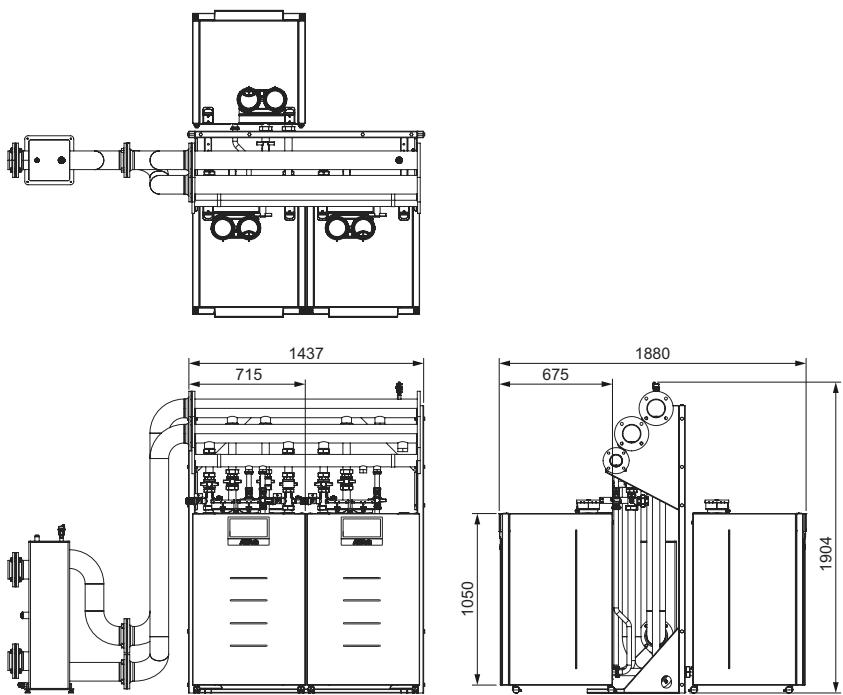


ATAG XL F 4 boilers floor standing back-to-back

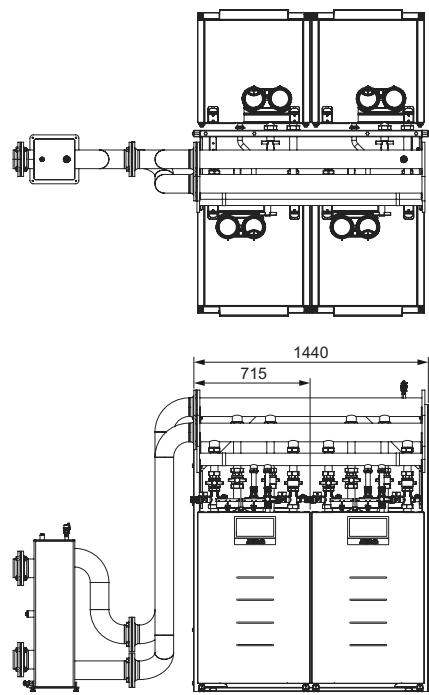

ATAG XL F 6 boilers floor standing back-to-back (Max. 1000kW)

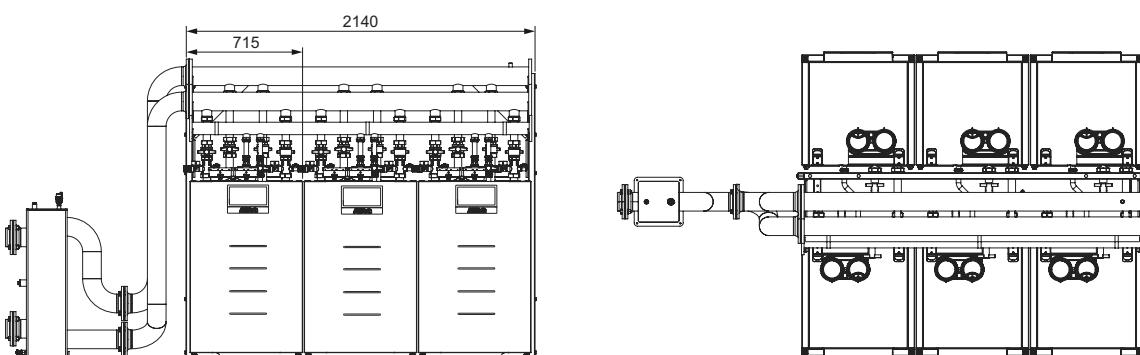

ATAG XL F 8 boilers floor standing back-to-back

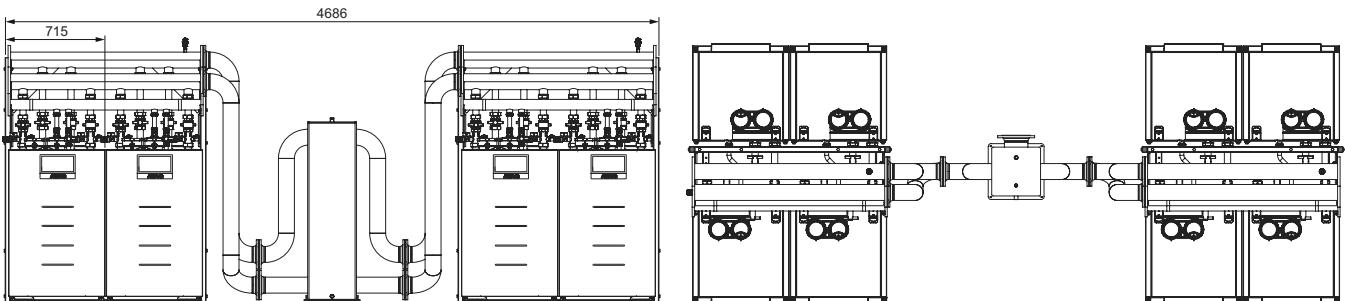

Product description

ATAG XL F Cascade accessories

FG codes	Description	Single		Boiler			Cascade FS in line	Cascade FS B2B	Power size
		75	105	150	180	210			
3905101	MIN. GAS PRESSURE SWITCH - BOILER	x	x	x	x	x			
3905102	MIN. GAS PRESSURE SWITCH - CASCADE						x	x	0-1600
3905103	ROOM FAN + EXT. GAS VALVE	x	x	x	x	x			
3905104	GAS FILTER 70-100-140	x	x	x	x				
3905105	GAS FILTER 170-200	x				x	x		
3905115	AIR FILTER Ø100	x	x	x	x				
3905116	AIR FILTER Ø130	x				x	x		
3905117	WATER-GAS CONNECTION KIT	x	x	x	x	x	x		
3905118	LPG kit 70	x	x		x	x			
3905119	LPG kit 100	x		x		x	x		
3905120	REMOCON MODBUS-LON	x	x	x	x	x	x	x	0-1600
3905121	REMOCON MODBUS-BACNET	x	x	x	x	x	x	x	0-1600
3905122	REMOCON MODBUS	x	x	x	x	x	x	x	0-1600
3905123	REMOCON MODBUS-KNX	x	x	x	x	x	x	x	0-1600
3905124	CLIP IN ZONE MANAGER	x	x	x	x	x	x	x	0-1600
3905045	Low loss header-DHW sensor	x	x	x	x	x	x	x	0-1600
3905127	Outdoor sensor	x	x	x	x	x	x	x	0-1600
3905128	Zone sensor	x	x	x	x	x	x	x	0-1600
3905136	INSULATION COLLECTOR DN65/DN100 (L=1B)						x	x	0-1600
3905137	CASCADE DEAREATOR						x	x	0-1600
3905138	GAS FILTER DN65						x	x	0-1600
3905026	FLANGE KIT DN65 WATER						x	x	0-465
3905027	FLANGE KIT DN100 WATER						x	x	0-1600
3905029	FLANGE KIT DN65 GAS						x	x	0-1600
3905038	LASFLENS SET DN100 A/R + GAS DN 65						x	x	0-1600
3905126	welding flange DN150 water+DN65 gas						x	x	0-1600
3905150	KIT BOILER CH	x	x	x	x	x	x		
3905151	KIT BOILER DHW	x	x	x	x	x	x		
3905164	CONNECTION KIT FS CH FRONT							x	0-1600
3905165	CONNECTION KIT FS CH BACK							x	0-1600
3905166	CONNECTION KIT FS DHW						x		0-1600
3905168	COLLECTOR ASM FLOW/RETURN DN100 2B LINE/4B B2B FS						x	x	0-1600
3905169	COLLECTOR ASM FLOW/RETURN DN100 3B LINE/6B B2B FS						x	x	0-1600
3905171	BACK PACK SE Low loss header dT10-20K FS	x	x	x					
3905172	BACK PACK DE Low loss header dT10-20K FS	x			x	x	x		
3905173	BOILER Low loss header dT10-20K	x	x	x	x	x	x		
3905175	Insulation BOILER Low loss header dT10-20K	x	x	x	x	x	x		
3905034	Low loss header DN100						x	x	0-960
3905036	Bend 90° DN100						x	x	0-1600
3905174	Insulation Bend 90° DN100						x	x	0-1600
3905176	Low loss header DN100 DUO kit						x	x	960-1600
3905177	Insulation LLH header DN100						x	x	0-960
3905178	Connection kit FS cascade LLH LEFT						x	x	0-1600
3905179	Connection kit FS cascade LLH RIGHT						x	x	0-1600
3905180	BACK PACK SE Plate HEAT EXCH. dT10K	x	x	x					
3905181	BACK PACK DE Plate HEAT EXCH. dT10K	x			x	x	x		
3905182	BACK PACK SE Plate HEAT EXCH. dT15K	x	x	x					
3905183	BACK PACK DE Plate HEAT EXCH. dT15K	x			x	x	x		
3905184	BACK PACK SE Plate HEAT EXCH. dT20K	x	x	x					
3905185	BACK PACK DE Plate HEAT EXCH. dT20K	x			x	x	x		
3905186	BOILER SE Plate HEAT EXCH. dT10K	x	x	x					
3905187	BOILER DE Plate HEAT EXCH. dT10K	x			x	x	x		
3905188	BOILER SE Plate HEAT EXCH. dT15K	x	x	x					
3905189	BOILER DE Plate HEAT EXCH. dT15K	x			x	x	x		
3905190	BOILER SE Plate HEAT EXCH. dT20K	x	x	x					
3905191	BOILER DE Plate HEAT EXCH. dT20K	x			x	x	x		
3905192	BOILER Connection kit Plate heat exch.	x	x	x	x	x	x		
3905193	BOILER Expansion vessel kit	x	x	x	x	x	x		
3905194	CASCADE Plate HEAT EXCH. dT10K		x	x	x	x	x	x	
3905195	CASCADE Plate HEAT EXCH. dT15K		x	x	x	x	x	x	
3905196	CASCADE Plate HEAT EXCH. dT20K		x	x	x	x	x	x	

Product description

ATAG XL F Cascade accessories

FG codes	Description	Single		Boiler			Cascade FS in line	Cascade FS B2B	Power size
		75	105	150	180	210			
3905197	CASCADE PHE Connection kit						x	x	0-1600
3905265	CASCADE PHE Connection kit DN100						x	x	0-1600
3905198	CASCADE FLUE KIT DN150 LINE	x	x	x			x	x	
3905199	FLUE SIPHON SET DN150	x	x	x			x	x	
3905200	CASCADE FLUE KIT DN200 LINE	x	x	x			x	x	
3905201	FLUE SIPHON SET DN200	x	x	x	x	x	x	x	
3905202	CASCADE FLUE KIT DN150 B2B	x	x	x			x	x	
3905203	CASCADE FLUE KIT DN200 B2B	x	x	x			x	x	
3905204	FLUE PIPE PP 100MM L=0.5M	x	x	x	x				
3905205	FLUE PIPE PP 100MM L=1.0M	x	x	x	x				
3905206	FLUE BEND PP 90 DEGR 100MM	x	x	x	x				
3905207	FLUE BEND PP 45 DEGR 100MM	x	x	x	x				
3905208	FLUE SUPPORT ELBOW PP 90 DEGR 100MM	x	x	x	x				
3905209	FLUE T-PIECE PP 100MM + COVER	x	x	x	x				
3905210	FLUE SIPHON SET DN100	x	x	x	x				
3905211	FLUE EXPANDER PP 100-150MM	x	x	x	x				
3905212	FLUE CHIMNEY CAP + AIR VENT 100MM	x	x	x	x				
3905213	FLUE WALL BRACKET 100MM	x	x	x	x				
3905214	FLUE WALL PLATE 100MM	x	x	x	x				
3905215	FLUE VENTILATION GRATE 100MM-200MM	x	x	x	x				
3905216	FLUE PIPE PP 150MM L=0.5M	x	x	x	x	x	x	x	x
3905217	FLUE PIPE PP 150MM L=1.0M	x	x	x	x	x	x	x	x
3905218	FLUE BEND PP 90 DEGR 150MM	x	x	x	x	x	x	x	x
3905219	FLUE BEND PP 45 DEGR 150MM	x	x	x	x	x	x	x	x
3905220	FLUE BEND PP 15 DEGR 150MM	x	x	x	x	x	x	x	x
3905221	FLUE EXPANDER PP 100-200MM	x	x	x	x	x	x	x	x
3905222	FLUE EXPANDER PP 150-200MM	x	x	x	x	x	x	x	x
3905223	FLUE T-PIECE PP 150MM + COVER	x	x	x	x	x	x	x	x
3905224	FLUE WALL BRACKET 150MM	x	x	x	x	x	x	x	x
3905225	FLUE WALL PLATE 150MM	x	x	x	x	x	x	x	x
3905226	FLUE SUPPORT ELBOW PP 90 DEGR 150MM	x	x	x	x	x	x	x	x
3905227	FLUE SUPPORT STRIP	x	x	x	x	x	x	x	x
3905228	FLUE SPACER BRACKET 150MM 2PCS	x	x	x	x	x	x	x	x
3905229	FLUE CHIMNEY CAP + AIR VENT 150MM	x	x	x	x	x	x	x	x
3905230	FLUE CHIMNEY CAP EXT. 150MM	x	x	x	x	x	x	x	x
3905231	FLUE ROOF TERMINAL PP 150MM	x	x	x	x	x	x	x	x
3905232	WEATHER SLATE FLAT ROOF 150MM	x	x	x	x	x	x	x	x
3905233	FLUE PIPE PP 200MM L=0.5M	x	x	x	x	x	x	x	x
3905234	FLUE PIPE PP 200MM L=1.0M	x	x	x	x	x	x	x	x
3905235	FLUE BEND PP 90 DEGR 200MM	x	x	x	x	x	x	x	x
3905236	FLUE BEND PP 45 DEGR 200MM	x	x	x	x	x	x	x	x
3905237	FLUE BEND PP 15 DEGR 200MM	x	x	x	x	x	x	x	x
3905238	FLUE T-PIECE PP 200MM + COVER	x	x	x	x	x	x	x	x
3905239	FLUE WALL BRACKET 200MM	x	x	x	x	x	x	x	x
3905240	FLUE WALL PLATE 200MM	x	x	x	x	x	x	x	x
3905241	FLUE SUPPORT ELBOW PP 90 DEGR 200MM	x	x	x	x	x	x	x	x
3905242	FLUE SPACER BRACKET 200MM 2PCS	x	x	x	x	x	x	x	x
3905243	FLUE CHIMNEY CAP + AIR VENT 200MM	x	x	x	x	x	x	x	x
3905244	FLUE CHIMNEY CAP EXT. 200MM	x	x	x	x	x	x	x	x
3905245	FLUE ROOF TERMINAL PP 200MM	x	x	x	x	x	x	x	x
3905246	WEATHER SLATE FLAT ROOF 200MM	x	x	x	x	x	x	x	x
3905247	FLUE ROOF TERMINAL CONC. PP 100/150MM	x	x	x	x				
3905248	FLUE PIPE PP CONC 100/150MM L=0.5M	x	x	x	x				
3905249	FLUE PIPE PP CONC 100/150MM L=1.0M	x	x	x	x				
3905250	FLUE BEND PP 90 DEGR CONC 100/150MM	x	x	x	x				
3905251	FLUE BEND PP 45 DEGR CONC 100/150MM	x	x	x	x				
3905252	FLUE SUPPORT ELBOW PP 90 DEGR CONC 100/150MM	x	x	x	x				
3905253	FLUE T-PIECE PP CONC 100/150MM + COVER	x	x	x	x				
3905254	FLUE SIPHON SET CONC 100/150MM	x	x	x	x				
3905255	FLUE CHIMNEY CAP + AIR VENT CONC 100/150MM	x	x	x	x				
3905256	FLUE WALL BRACKET CONC 100/150MM	x	x	x	x				
3905257	FLUE WALL PLATE CONC 100/150MM	x	x	x	x				

Product description

ATAG XL F Cascade accessories

FG codes	Description	Single		Boiler			Cascade FS in line	Cascade FS B2B	Power size
		75	105	150	180	210			
3905259	FLUE WALL TERMINAL PP CONC 100/150MM	x	x	x					
3905260	FLUE ADAPTER PAR - CONC 100/100-100/150	x	x	x	x				
3905261	ADAPTOR Ø100-110 FLUE/AIR	x	x	x	x				
3905262	FLUE EXPANDER 130-150MM	x			x	x	x	x	
3905263	FLUE EXPANDER 130-200MM	x			x	x	x	x	
3905264	FLUE REDUCER 130-100MM	x			x	x			

Installation

Boiler transport

The ATAG XL F is a fully equipped compact heating system, which has been pre-set and tested at the factory. The package dimensions for all appliances are:
Width 750mm
Height 1200mm
Depth 800mm
This makes it possible to transport all models in one piece through a normal door.

The boiler can be moved using a fork-lift or pallet truck. Unpacking instructions are printed on the cardboard box. Please follow the proposed steps.








Disassembly of panelling

The appliance casing panels can be easily removed and this is recommended while the appliance is being installed. This limits the potential for damage to occur.

Handling and carrying precautions:

- Wear protective clothing and gloves to protect from any sharp edges.
- The boiler should be handled with its pallet using a fork lifter, wheels can be used for final positioning.



Panelling should be attached and secured with the supplied screw, after assembly of the boiler, or after maintenance works.

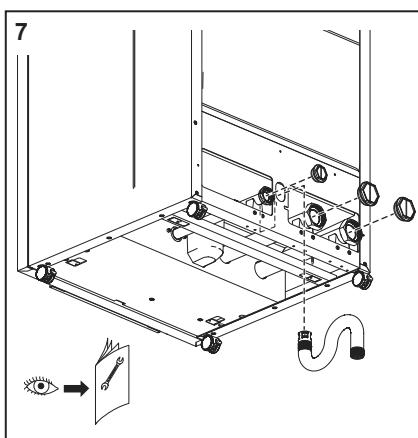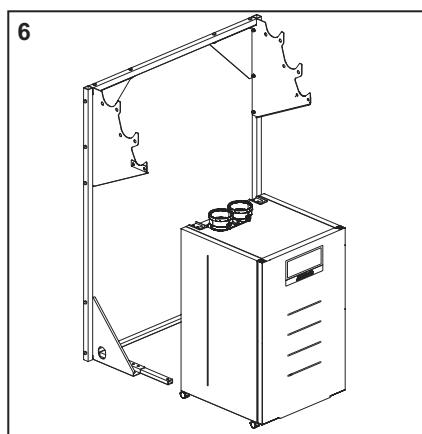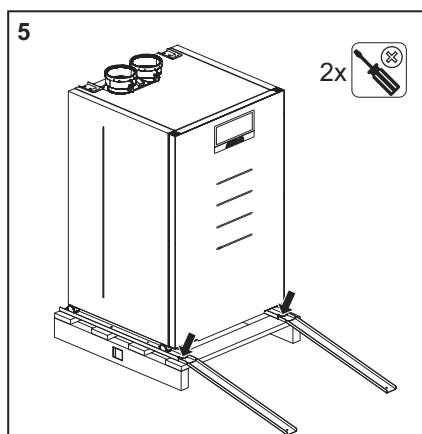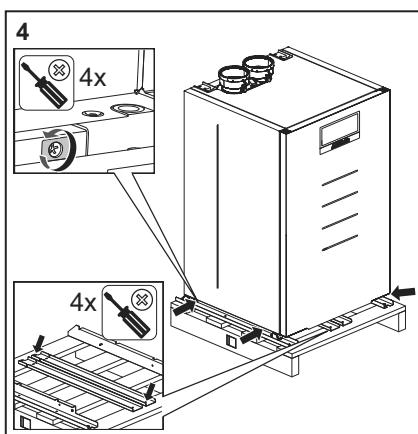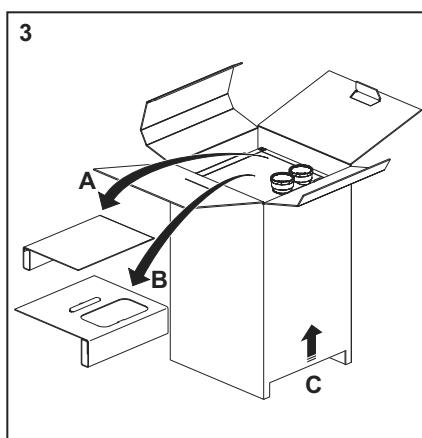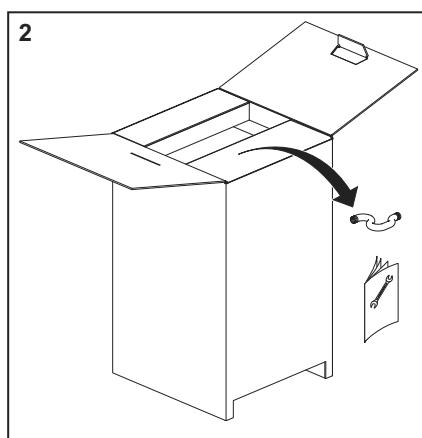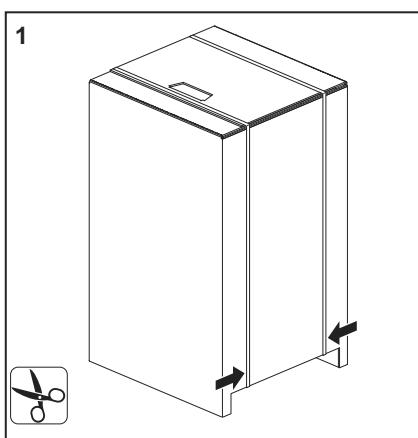

1. Remove the plastic strip.
2. Open the 4 upper folders, and remove the documentation and the condense pipe.
3. Remove the cardboard inserts, remove the cardboard box.
4. Remove the 4 screws from the bottom part of the boiler and from the roll off rails on the pallet.
5. Position and fix the roll off rail on the pallet, push the boiler forward along the roll off rail to the ground.
6. Move the boiler to the connection or to the cascade rack.
7. Remove the water and gas plastic cap, connect the condense pipe, and follow the installation manual.
8. When the boiler is connected, push the four brakes to block it.

Installation

Installation Connections

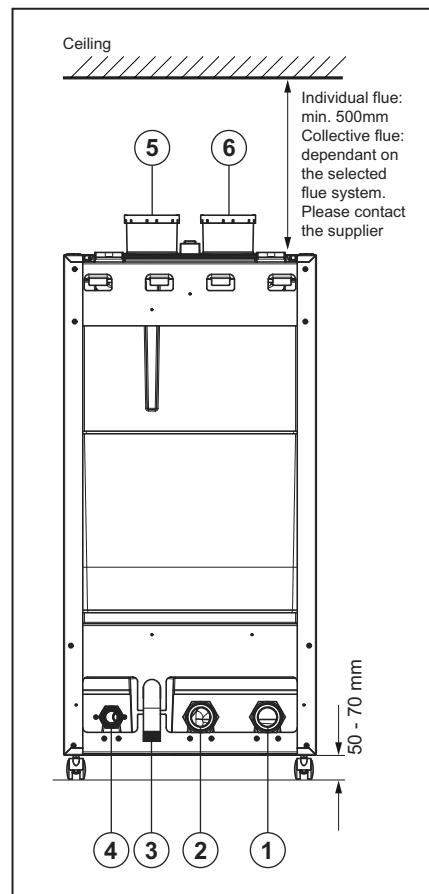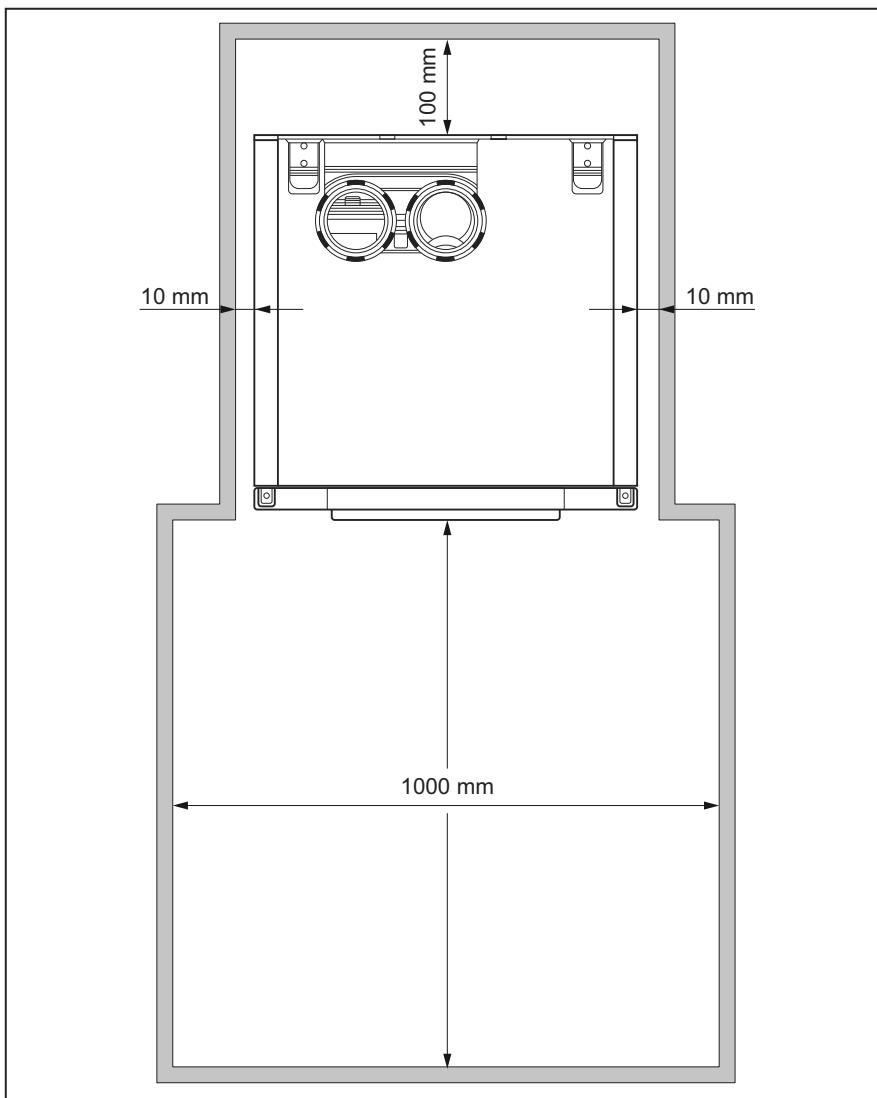

The installation location of the CH-boiler(s) has to be, and remain, frost-free.

It is NOT necessary to have a purpose provided air vent providing a twin pipe or concentric room sealed flue system is used in the room or internal space in which the boiler is installed.

Neither is normally required a provision for general cooling due to the very low heat loss from the boiler heat exchanger and casing.

The floor should be flat and level and have sufficient deadweight capacity for the complete (filled) installation. Wheels can be adjusted +/-10mm to compensate eventual floor irregularity.

The ATAG XL F cascade can be mounted in 2 ways:

- **Floor standing in line**

All boilers standing alongside one

another in a floor standing frame. Refer to page 12.


- **Floor standing back-to-back.** All boilers standing back-to-back on a floor standing frame. Refer to page 13.

General guidelines:

Pay attention to the minimum distance required between the boilers, walls and ceiling for installing and removing the housing (refer to above) for commissioning and servicing and installing the flue system (refer to chapter 7).


If you have opted to build the hydraulic part yourself, then ATAG recommends using "Connection set ATAG XL F as single boiler" for each boiler.

1. Boiler return connection
2. Boiler flow connection
3. Condensate drain
4. Gas
5. Flue gas outlet
6. Air supply

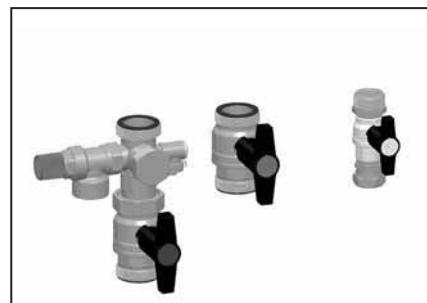

Installation

Hydraulics Circulation pumps

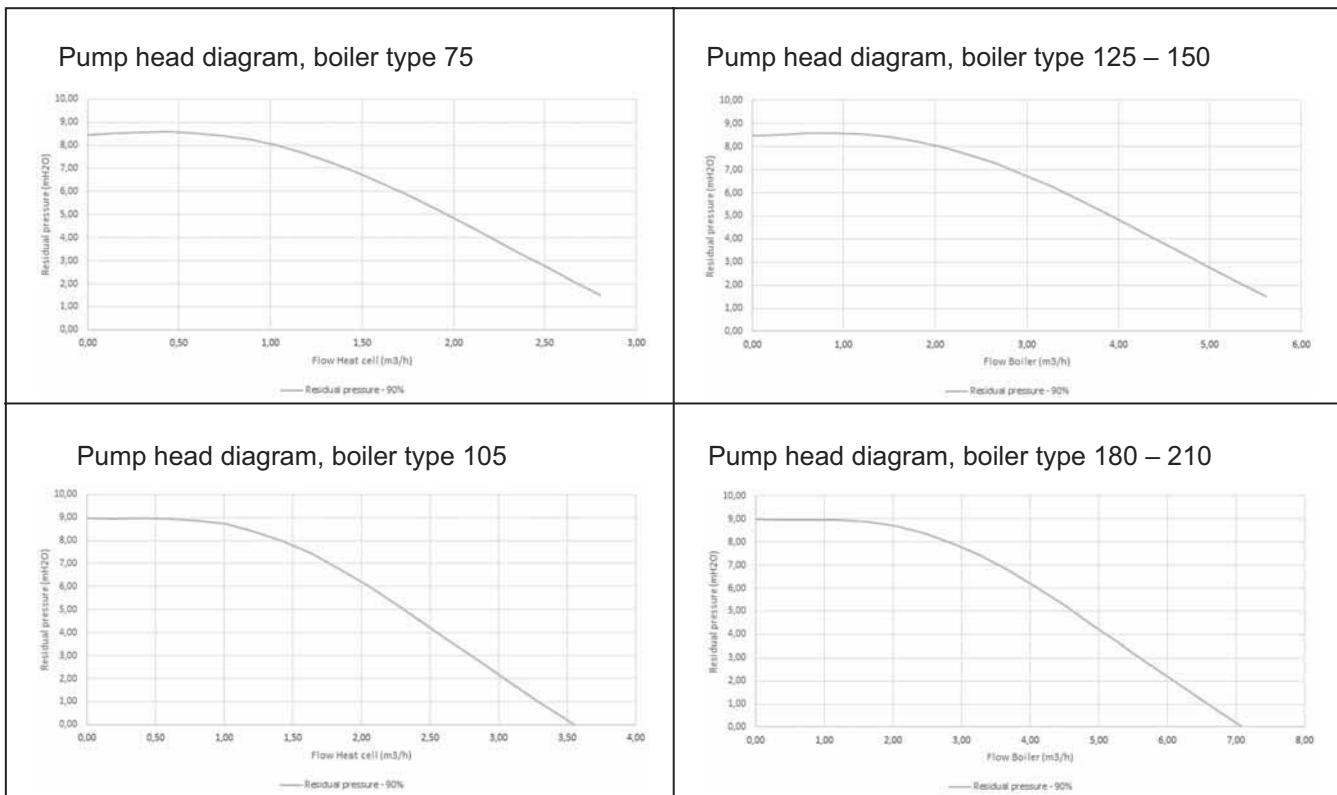

Boiler type	Pump type	Circulating water volume heat cell (m ³ /h - l/min)		Residual head (mH ² O - mbar - kPa)	
		ΔT20 (K)	ΔT25 (K)	ΔT20 (K)	ΔT25 (K)
XL75F	1 x WILO PARA 8	2,8 - 46,7	2,2 - 37,4	1,5 - 150 - 15	4,0 - 400 - 40
XL105F	1 x WILO PARA 9	3,8 - 64,7	3,1 - 51,7	-	2,0 - 200 - 20
XL125F	2 x WILO PARA 8	2x 2,4 - 40,6	2x 1,9 - 32,5	3,3 - 330 - 33	5,4 - 540 - 54
XL150F	2 x WILO PARA 8	2x 2,8 - 46,7	2x 2,2 - 37,4	1,5 - 150 - 15	4,0 - 400 - 40
XL180F	2 x WILO PARA 9	2x 3,8 - 64,7	2x 3,1 - 51,7	-	2,0 - 200 - 20
XL210F	2 x WILO PARA 9	2x 3,8 - 64,7	2x 3,1 - 51,7	-	2,0 - 200 - 20

For single boiler installation the connection to a low velocity header and secondary circuit pump is strongly recommended.

For installation of cascaded boilers the connection to a low velocity header and secondary circuit pump is mandatory.

Temp differential nominal

The WILO PARA 8 or 9 circulation pump, which is installed at the factory in the boiler, operates continuously and adapts its pump speed to heat requirements (ΔT).








The boiler electronics continues to control the boiler's output such that the boiler temperature setpoint is maintained.

Pump speed control controls the boiler pump's speed in a way that the parameterized nominal temperature differential of boiler return and boiler flow is maintained.

If the effective differential is greater than the nominal differential, the pump's speed is increased, otherwise it is decreased.

Installation

Cascade floor standing in line

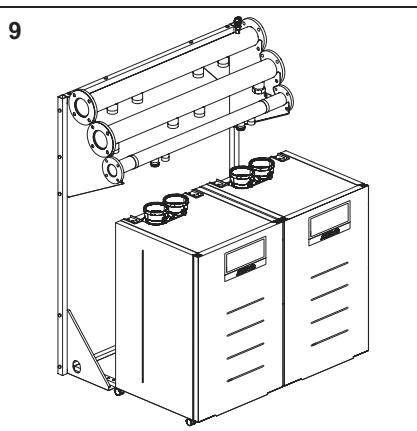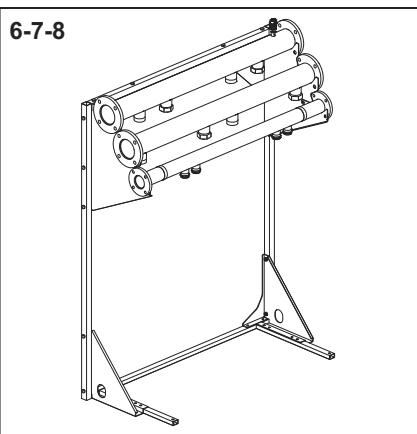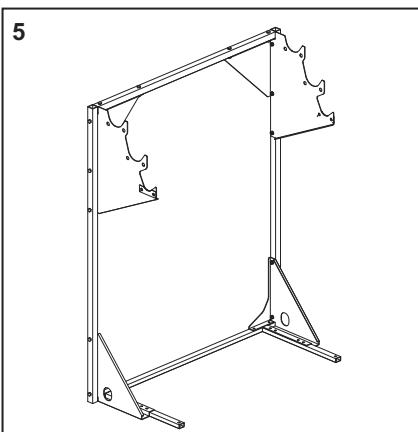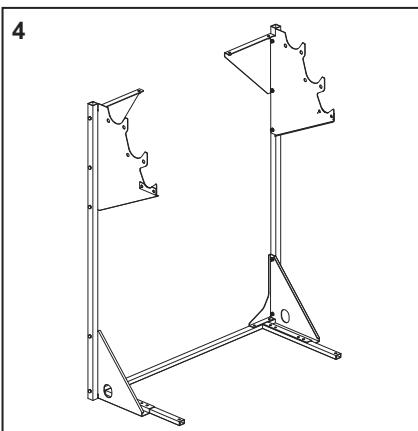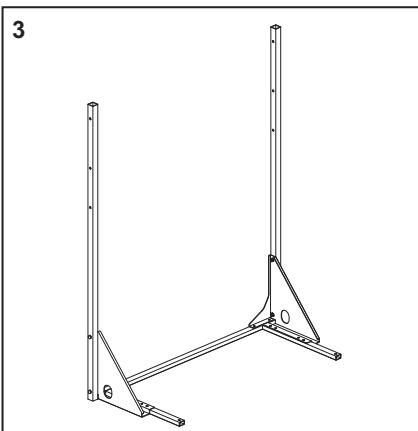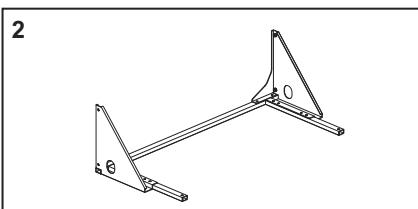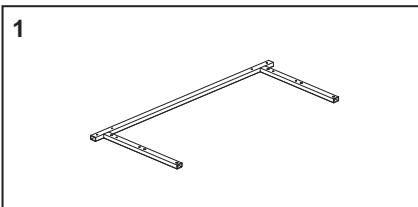

Collector assembly

6. Place the flow water collectors in the upper space.
7. Place the return water collectors in the middle recess. Connect the water lines using the supplied DN100 gaskets, M16 bolts, spring washers and nuts.
8. Place the gas collectors in the lower recess. Connect the gas lines using the supplied DN65 gaskets, M12 bolts, spring washers and nuts.

Boiler positioning

9. Move the boiler in front of the floor standing rack. Once connected the boiler with dedicated connection kit, push the four brakes to block it.








Floor standing rack assembly

1. Position the lower beam on the ground in the required location.
2. Fit the lower brackets on the lower beam using the supplied M8 bolts, spring washers and nut.
3. Fit the vertical columns on the lower bracket using the supplied M8 bolts, spring washers and nut.
4. Fit the upper brackets on the vertical pale using the supplied M8 bolts, spring washers and nut.
5. Fit the upper beam on the upper brackets using the supplied M8 bolts, spring washers and nut.

Attention: once in the correct and final position, the floor standing rack has to be fixed on the ground.

Installation

Additional cascade floor standing

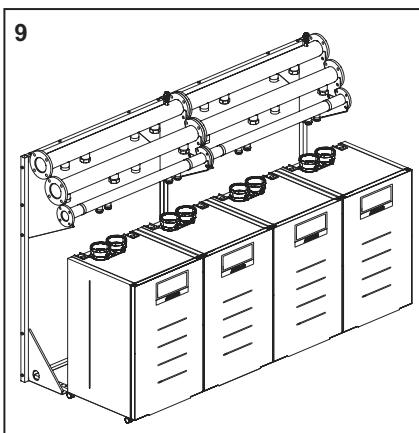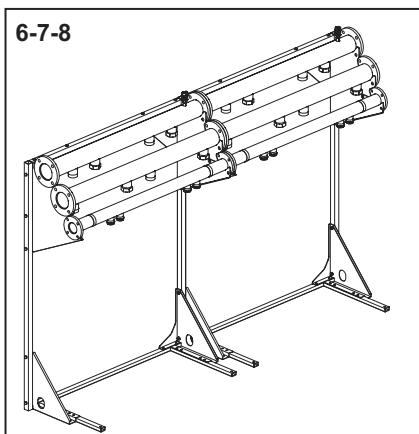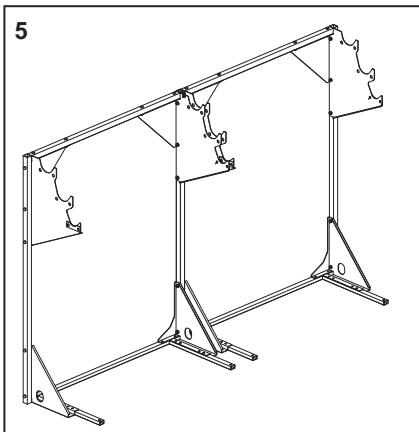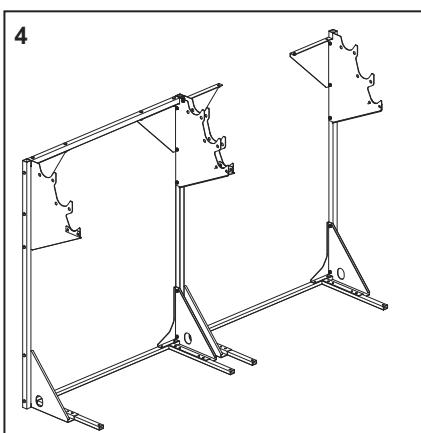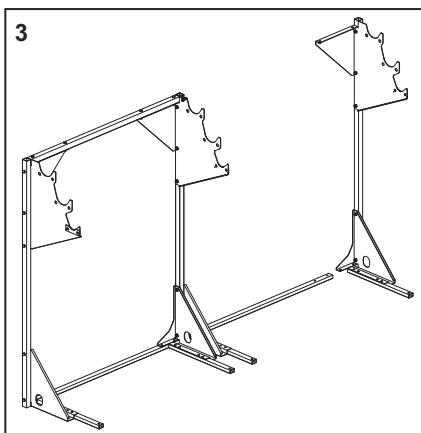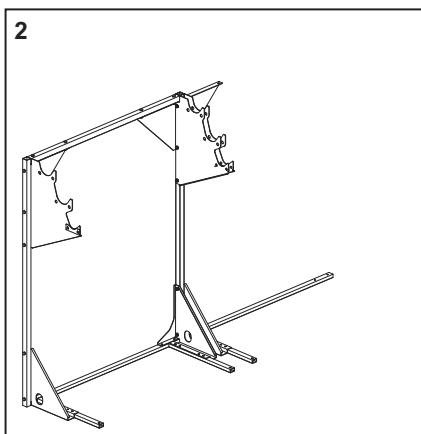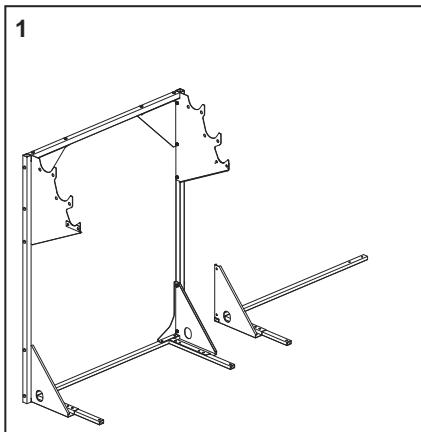

- Fit the upper beam on the upper brackets using the supplied M8 bolts, spring washers and nut.

Attention: once in the correct and final position, the floor standing rack has to be fixed on the ground.

Collector assembly

- Place the flow water collectors in the upper space.
- Place the return water collectors in the middle recess. Connect the water lines using the supplied DN100 gaskets, M16 bolts, spring washers and nuts.
- Place the gas collectors in the lower recess. Connect the gas lines using the supplied DN65 gaskets, M12 bolts, spring washers and nuts.

Boiler positioning


- Move the boiler in front of the floor standing rack.
Once connected the boiler with dedicated connection kit, push the four brakes to block it.

Floor standing rack assembly

- Position the additional lower beam on the ground, next to the existing cascade. Fit the lower brackets on the lower beam using the supplied M8 bolts, spring washers and nut.
- Fit the additional lower beam and the upper bracket with existing vertical columns using the supplied M8 bolts, spring washers and nut.
- Preassembly (on the other side) the vertical column with lower and upper beam.
- Fit the preassembled vertical column with lower beam.

Installation

Connecting the boiler

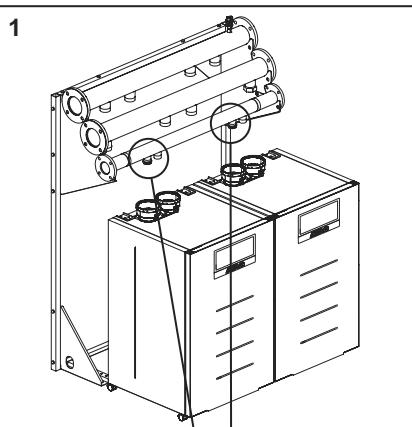

- 1-2. Keep the cap on the connections that are not used on the flow and return headers:

Flow and return: 2" blind cap with gasket (2 items/boiler).
Gas: 1 1/4" blind cap with gasket (1 item/boiler).

For connections, use the supplied gaskets. Check all connections for leakage and gas-tightness.


3. Connect the valves to the flow and return headers:

Flow: 45mm pipe pieces with 2" flat coupling, 2" flat coupling isolation valve with red handle.
Return: 45mm pipe pieces with 2" flat coupling, 2" flat coupling fitting cross union with fill/drain valve and isolation valve with blue handle.

The boiler is supplied with a 3 and 6 bar safety valve.
ATAG recommends fitting the 6 bar safety valve due to the control settings shutting the boiler off at 6 bar.
Gas: 28mm short gas pipe with 1 1/4" flat sealing and 28mm compression fitting with 1 1/4" gas isolation valve.

Dirty test water may be released when removing the plastic caps on the boiler flow and return.

For connections, use the supplied gaskets. Check all connections for leakage and gas-tightness.

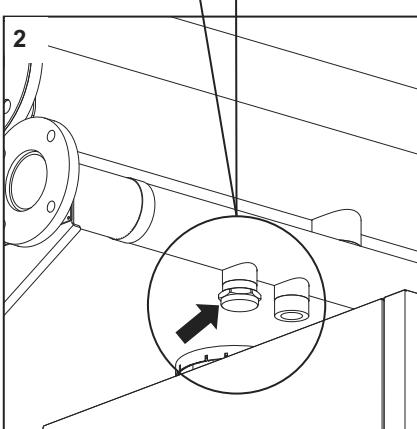

4. Connect the pipes to the boiler:
Flow: 45mm pipe pieces with 2" flat coupling.

Return: 45mm pipe pieces with 2" flat coupling.

Gas: 28mm pipe piece with 1 1/4" flat coupling.


5. Connect the pipes to the valves

Flow: 45mm pipe pieces with 2" flat coupling.

Return: 45mm pipe pieces with 2" flat coupling.



Gas: 28mm pipe piece with 1 1/4" flat coupling.

For connections, use the supplied gaskets. Check all connections for leakage and gas-tightness.

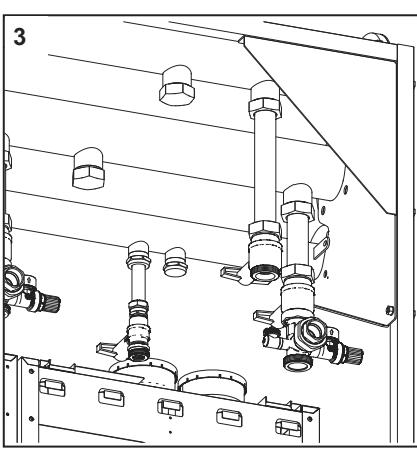


Dirty test water may be released when removing the plastic caps on the boiler flow and return.

For connections, use the supplied gaskets. Check all connections for leakage and gas-tightness.

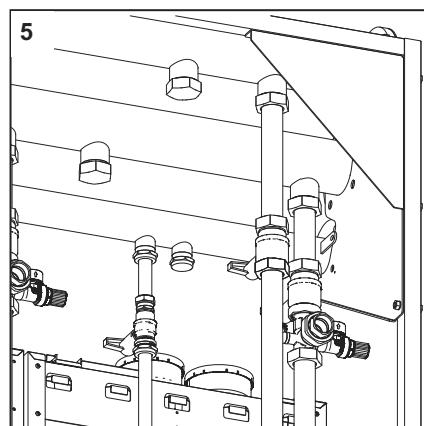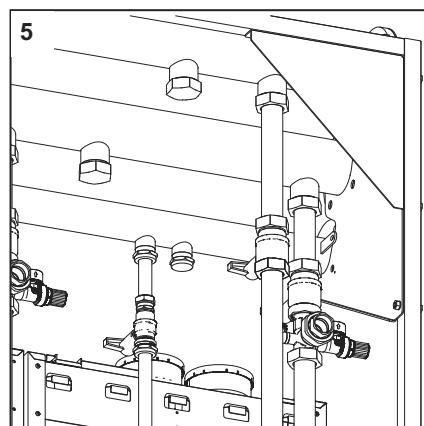


Installation

Cascade accessories

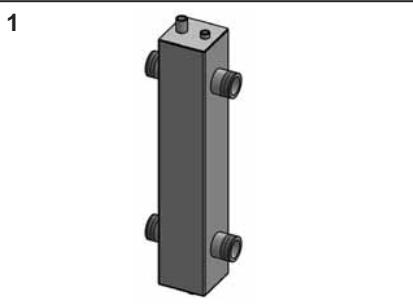

The flow and return headers are available in the dimension DN100 and are connected to one another by the flange couplings, M12 or M16x55 bolts, spring washers and nuts. The low loss header and the complete installation can then be connected to it.

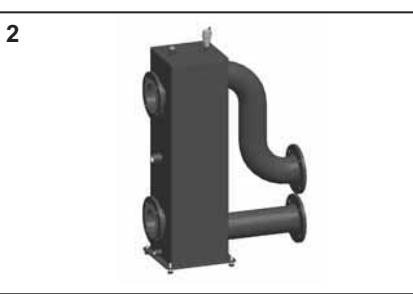

1.2.3. Low loss header

There are 3 low loss headers available:

- Low loss header for 1 ATAG XL F to max. 200kW supplied with automatic air vent, drain valve and pocket for temperature sensor T10. Boiler connections are 2x 2", installation connections are 2x 2".
The low loss header MUST be connected between the boiler[s] and the system pumps.
- Low loss header DN100 to 1000kW
- Low loss header DN100 DUO to 1600kW.



The low loss header comes standard with adjustable feet, automatic air vent, drain valve, pocket for temperature sensor T10, M12 or M16x55 bolts, spring washers and nuts.



4. Flow and return header connection pipe

Connection pipes for flow and return headers are available in the dimension DN100 in two versions, for a connection on the LEFT or on the RIGHT side of the cascade. They come standard with M16x55 bolts, spring washers, nuts and sealings.



5. Flow temperature sensor T10

Every system with more than 1 ATAG XL F-boilers must be provided with a flow temperature sensor T10 and must be connected on the master boiler (MTS1-T10). The flow sensor must be placed in the pocket of the low loss header.



6. Set of bends

The low loss header can be positioned at a 90° angle. A set of bends may be used for that purpose.

- Bends set DN100 flow/return



7. Blanking flanges

The ends of the flow and return headers have to be fitted with blanking flanges.

The blanking flanges come standard with a fully configured delivery, including bolts, spring washers, gaskets and nuts.

- Blanking flange set DN100 flow/return 2 items

8. Welded-on flanges

Upon request, welded-on flanges are available to connect CH-pipe lines to the secondary side of the low loss header and to connect the gas line.

- Welded-on flange set DN100 flow/return 2 items + DN65 gas 1 item


For complete overview on available accessories please refer to paragraph "ATAG XL F Cascade accessories".

Required components that are not supplied by ATAG:


- The installation pump;
- The condensate discharge system
- The installation water filter;
- Air and dirt separator;
- Hot water supply;
- Regulation valve;
- Expansion vessel(s).

Installation

Accessories Single boiler external

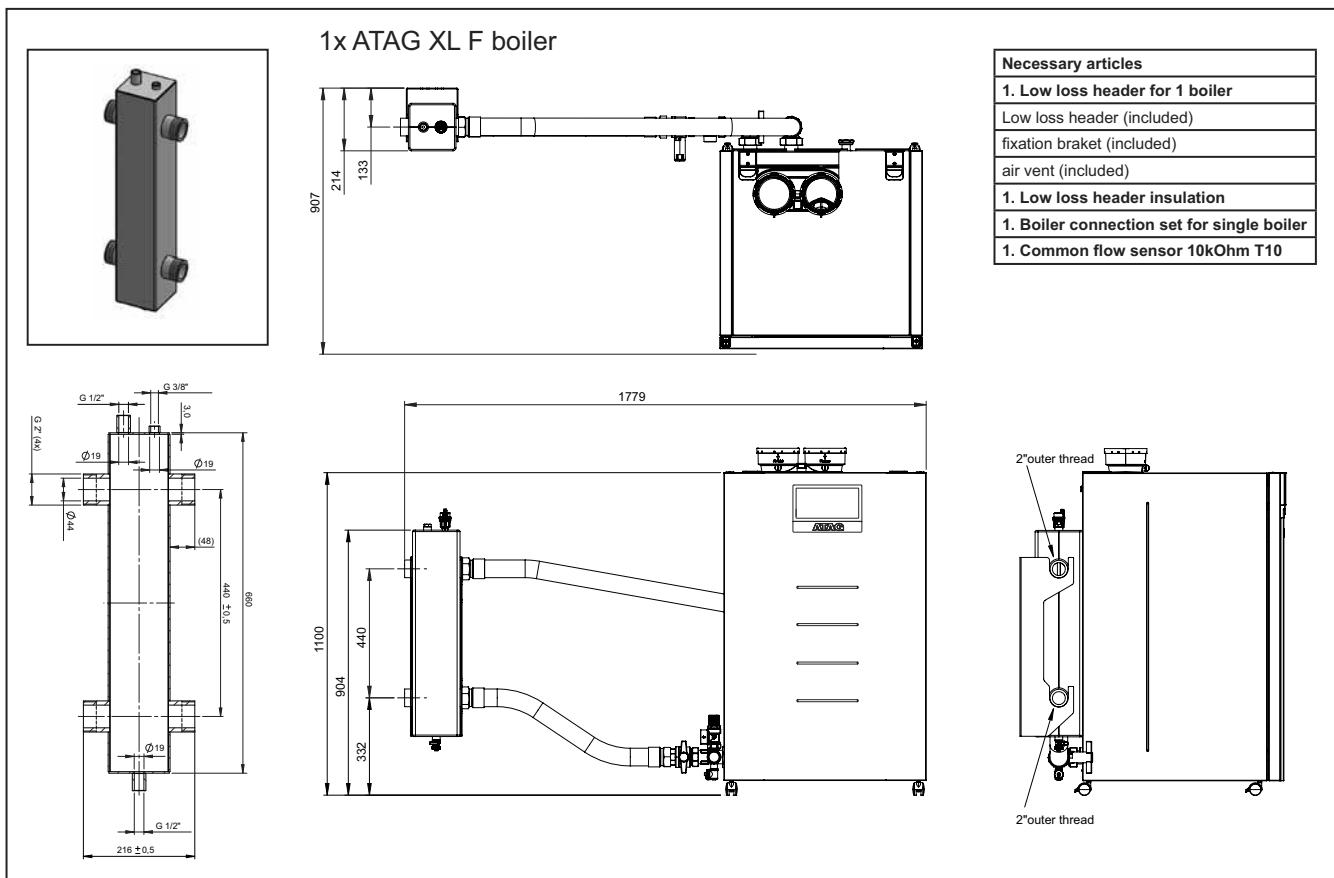

Accessories Single boiler back-pack

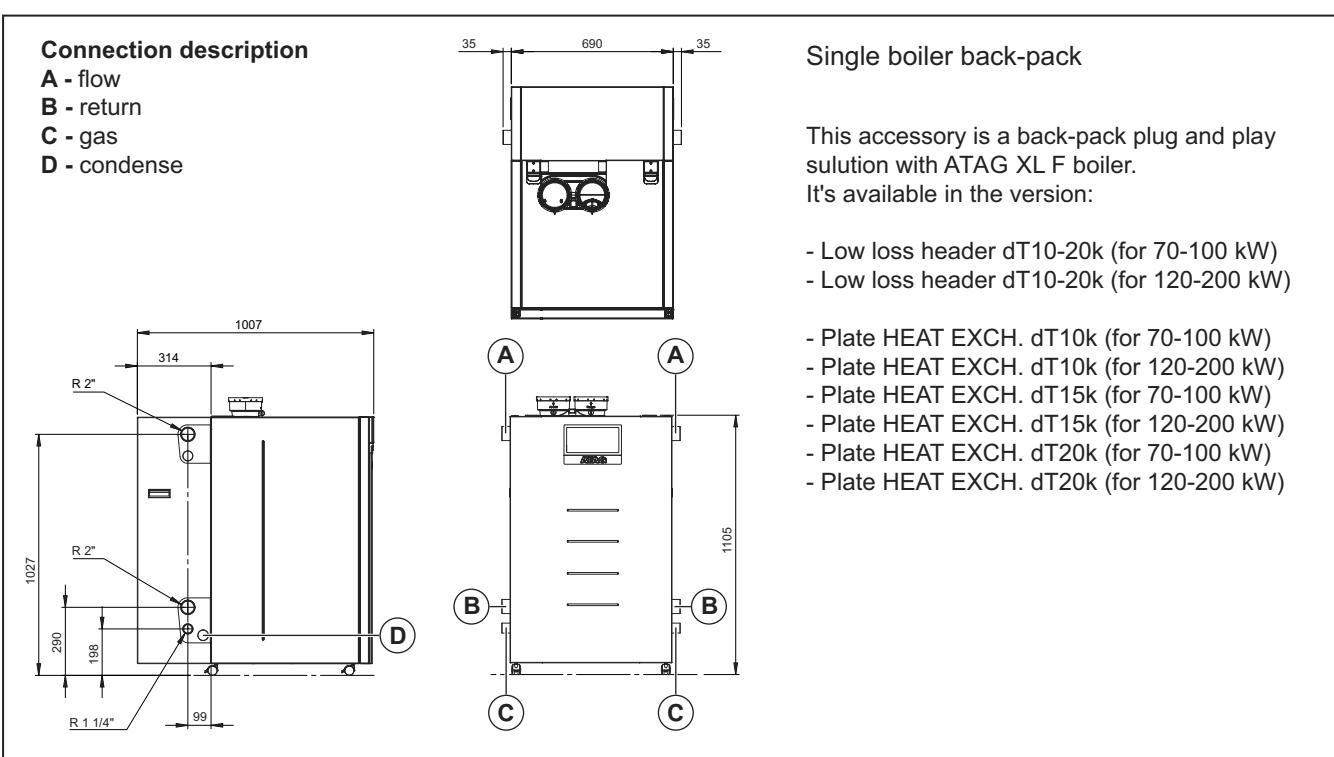


Installation


Cascade accessories

Dimensions headers, low loss headers and bends


Dimensions low loss header DN100 up to 1000kW

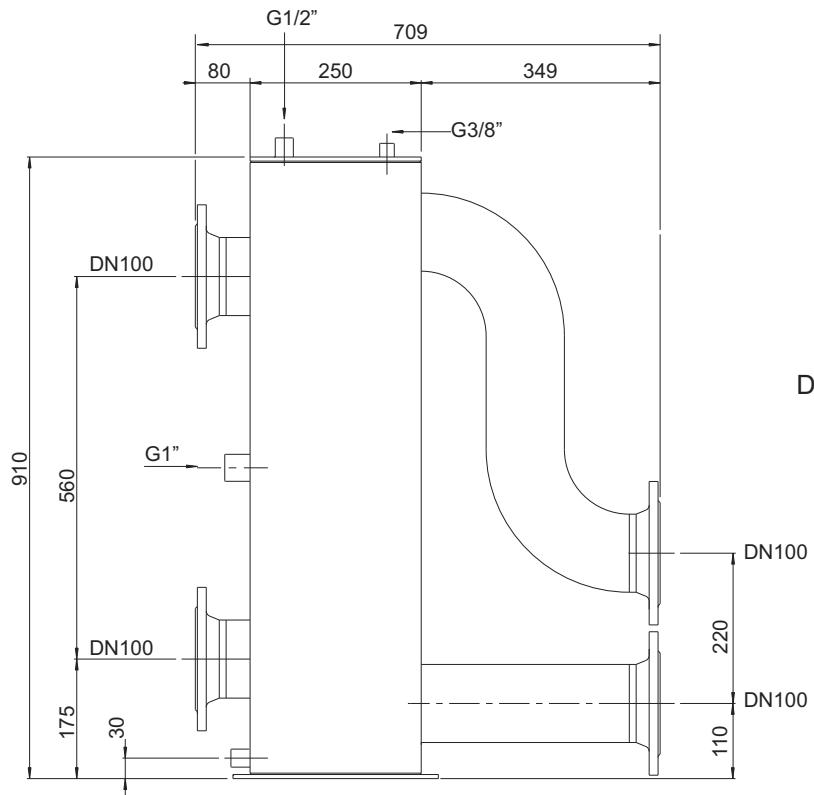



Dimensions pipe headers DN100

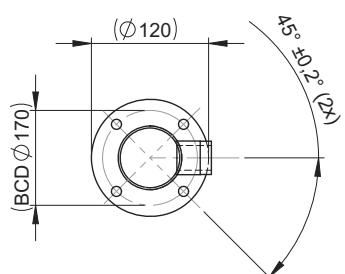

Dimensions bend DN100

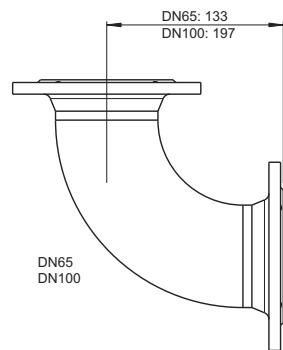

Dimensions low loss header DN100 up to 1600kW

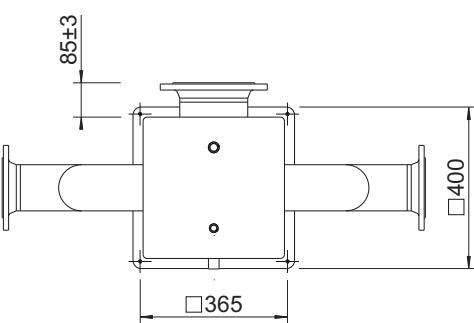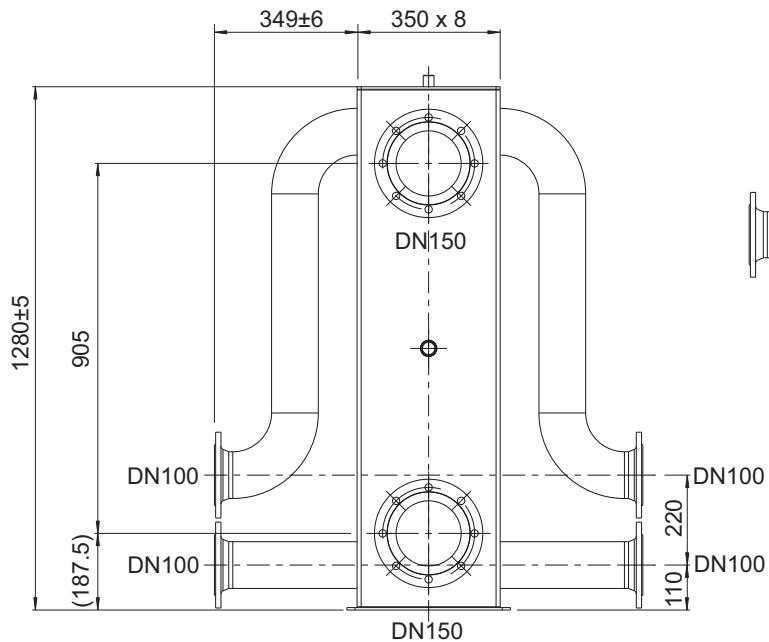

Installation

Water and hydraulic system Heating water quality

Fill the installation with drinking water.

In most cases, a central heating installation can be filled with water according to the nationally valid regulations, whereby a treatment of the water is not necessary.

To avoid problems, the quality of the filling water must meet the requirements in Table 1.

If the filling water should not meet these requirements, then it is recommended to treat the water correspondingly (see VDI2035).

Warranty claims become invalid if the system has not been flushed during installation, or if the filling water quality does not meet the ATAG requirements (see Table 1).

If anything should not be clear, or in case of deviations, always get in touch with ATAG first. The warranties lapse, if any changes are made without an prior agreement/release by ATAG.

Installation:

- The use of groundwater, demineralized water and distilled water, is not permitted (an explanation of these terms can be found on the next page).
- If the drinking water quality lies

within the limits of the values in Table 1, then one can proceed with the installation of the system and the flushing of the equipment.

- Residues of corrosion products (magnetite), assembly materials, cutting oil and other undesirable products, must be removed during the flushing operation.
- Another possibility for removing dirt is the use of a filter. The filter type must meet the system-specific requirements and the type of contamination. ATAG recommends the use of a filter. In such a case, one should make sure to take the entire system into consideration.
- The central heating installation must be de-aerated properly, before it is taken into operation. Please check the Chapter "Commissioning" in this regard.
- If a regular topping up of water is required (> 5% per year), then there is a problem with the system that must be rectified by a certified technician. Regular topping up with fresh water adds oxygen and lime to the system, which leads to deposits.
- If an anti-freeze agent or other

additives are used, then it must be regularly checked to ensure that the filling water quality meet the ATAG requirements.

- Inhibitors may only be used after consultation with ATAG.
- The use of such agents must be protocollled.

Floor heating

When a floor heating system is connected that uses plastic pipes, it must be ensured that it meet the standard DIN 4726-4729. If the system does not fulfil the standard, then a system separation must be used.

If the regulations with regard to plastic piping are not met, then warranty claims become null and void (see the warranty conditions).

Parameters	Value
Water type	Drinking water Softened water
pH	6.0-8.5
Conductivity (at 20°C in µS/cm)	Max. 2500
Iron (ppm)	Max. 0.2
Hardness (°dH / °fH)	
Installation volume/performance <20 l/kW	1-12
Installation volume/performance ≥20 l/kW	1-7
Oxygen	Oxygen diffusion is not permitted during operations. Max. 5% of the system volumes may be topped up annually.
Corrosion inhibitors	See the Chapter "System water additives (inhibitors)"
pH raising or lowering agents	See the Chapter "System water additives"
Anti-frost additives	See the Chapter "System water additives"
Other chemical additives	See the Chapter "System water additives"
Solid substances	Not permitted
Residues in the heating water, which are not a component of the drinking water are	Not permitted

Table 1

Installation

System water additives

The system water additives, which are listed in the table, have been released by ATAG and take into consideration the indicated dosage quantities.

In case of a wrong use, and if the maximum concentration quantities are exceeded, then the guarantee for all components that come in contact with heating water are null and void.

Additive type	Supplier and specifications	Max. concentration	Application
Corrosion inhibitors	Sentinel X100 Corrosion protection agent of CH systems Kiwa certified	1-2 l/100 litres CH water content	Aqueous solution of organic and inorganic agents preventing corrosion and scale forming
	Fernox F1 Protector Corrosion protection agent of CH systems Kiwa certified KIWA-ATA K62581, Belgaqua certified Cat III	500 ml can or 265 ml Express / 100 litres CH water content	Preventing corrosion and scale forming
Anti-freeze	Kalsbeek Monopropyleneglycol / propane-1,2-diol + inhibitors AKWA-Colpro KIWA-ATA Nr. 2104/1	50% w/w	Anti-freeze
	Tyfocor L Monopropyleneglycol / propane-1,2-diol + inhibitors	50% w/w	Anti-freeze
	Sentinel X500 Monopropyleneglycol + inhibitors Kiwa certified	20-50% w/w	Anti-freeze
	Fernox Alpha 11 Monopropyleneglycol + inhibitors Kiwa certified KIWA-ATA K62581, Belgaqua certified Cat III	25-50% w/w	Anti-freeze in combination with F1 Protector
System cleaners	Sentinel X300 Solution of phosphate, organic heterocyclic compounds, polymers and organic bases Kiwa certified	1 litre / 100 litres	For new CH installations Removes oils/grease and flow control agents
	Sentinel X400 Solution of synthetic organic polymers	1-2 litres / 100 litres	For cleaning existing CH-installations Removes sediments.
	Sentinel X800 Jetflo Aqueous emulsion of dispersants, moistening agents and inhibitors	1-2 litres / 100 litres	For cleaning new and existing CH-installations Removes iron and lime-related sediments.
	Fernox F3 Cleaner Liquid pH neutral universal cleaner for pre-commissioning new systems	500 ml / 100 litres	For cleaning new and existing CH-installations Removes sludge, limescale and other debris.
	Fernox F5 Cleaner, Express pH neutral universal cleaner concentrate for pre-commissioning new systems	295 / 100 litres	For cleaning new and existing CH-installations Removes sludge, limescale and other debris.

Installation

Water and hydraulic system DHW quality

Definition of water types

Drinking water

- Tap water, in conformity with the European Drinking Water Directive: 98/83/EC, dated 3 November 1998.

Softened water

- Water, from which calcium and magnesium ions have been partially removed.

Demineralized water

- Water, from which almost all salts have been removed (very low conductivity).

Distilled water

- Water, in which no more salts are present.

Expansion vessel

Expansion vessel

The CH-installation has to be fitted with an expansion vessel. The expansion vessel used has to comply with the water contents of the installation.

It is not necessary to install an expansion vessel to each boiler. One single, central installed expansion vessel is sufficient. When using a single expansion vessel the handles of the valves on the flow and return pipes below the boiler have to be removed whilst open.

A boiler expansion vessel can be connected on the cross union inside

the return pipe to each boiler, if required. The connection is fitted with a 3/4" male thread blanking cap.


Expansion DHW cylinder circuit

When applying a DHW cylinder connected directly to the boiler (ATAG cylinder connection with use of diverter valve) the circuit between the diverter valve and the DHW cylinder should be provided of an expansion tank. See also page 34.

For installation in UK, please refer to UK standards.

Installation

Gas line

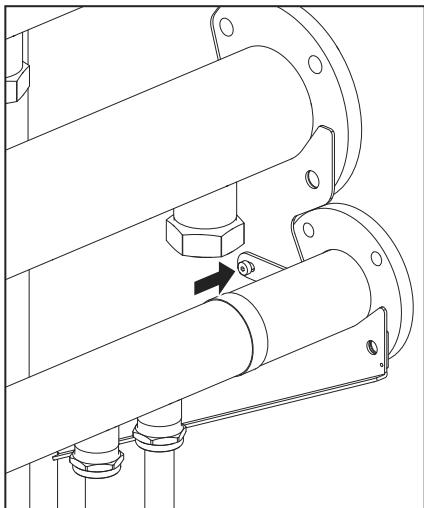

The gas line leading to the installation has to be calculated to the maximum capacity to determine the diameter of the supply pipe.

The gas line has to be placed on the allocated openings of the upper bracket of the cascade rack and secured on all flange plates by the special M6x8x16 close tolerance bolts.

Pressure loss for a newly installed natural gas line may be 1.0 mbar max. This value is to be measured in between the operational gas meter and the CH-boilers.

For correct functioning of the boilers, it is necessary that the gas dynamic inlet pressure must be at least 19 mbars. This value is to be measured in front of the gas flange connection.

With regard to new lines in particular, ensure that the gas line does not contain any residual pollution.

ATTENTION:

For use with propane gas, the LPG conversion kit has to be installed, see separate conversion instructions. Following maintenance tasks always check all gas carrying components for leakages by using of leakage detection fluid (LDF).

Installation

Condensate connection



HAZARD:

Danger of death due to poisoning! If the siphon is not filled with water, or if any connections are open, then escaping waste gas can pose a hazard of death for people.

For condensate drainage, only corrosion-resistant and certified materials may be used. The drainage must be carried out in a frost-free space. The drainage pipe should have a slope, so as to avoid a backwash of the condensate.

Condensate connection

For every m³ of natural gas that is burned, between 0.7 and 1.0 litres of water can accumulate, due to a very high energy efficiency. Condensate, which accumulates in the boiler, in the flue gas pipe or in the chimney, must be drained to the public sewage system.



In this regard, country-specific regulations must be taken into account. A neutralization of the condensate may be required. It must be possible for the condensate to visibly drain into a funnel-siphon (2) at the installation site. A fixed connection to the public sewer system is not permitted.

Filling of the siphon

Before the boiler is taken into operation, the build in siphon (1) must be filled with water, so as to prevent an emission of waste gas from the condensate connection. Filling is carried out most easily by pouring approximately 0.5 litres of water into the flue gas pipe (3).

Once each year the flue gas connections have to be checked for leakproofness and the siphon filled with water.



All PLUS floor standing gas fired condensing boilers contain a siphonic condensate trap to collect and release condensate.

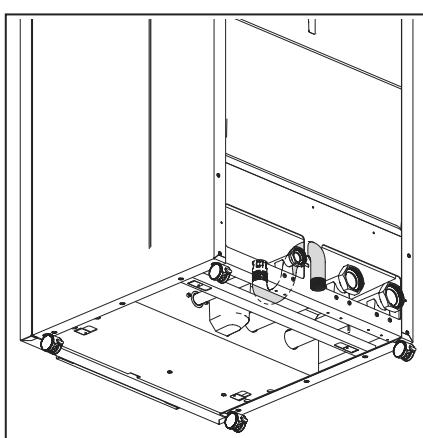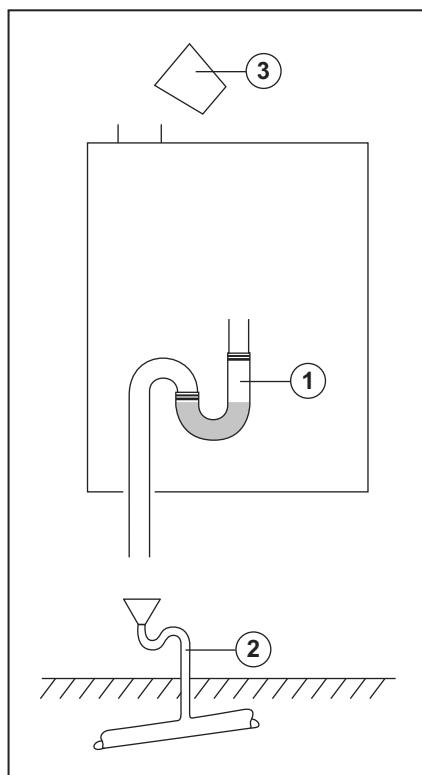

The amount of condensate formed is determined by the type of boilers and the water temperature produced by the boiler.

Condensate pipework.

Press the supplied plastic ribbon tube onto the condensate drain at the bottom of the boiler. Connect the tube to the main condensate drain (minimum diameter= 40mm) by means of an open connection to avoid sewage gasses coming into the boiler.

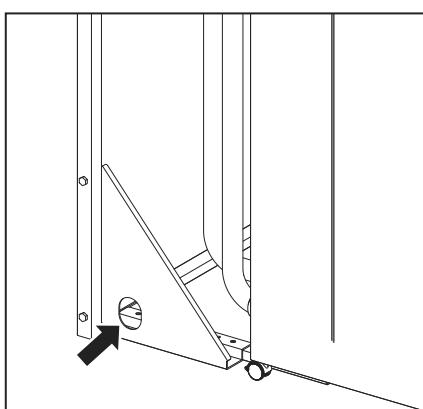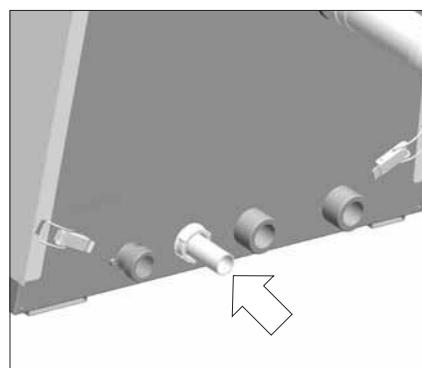


Fit a pipe for the condensate drain behind the hydraulic system. For that purpose, the lower brackets have holes allowing the installation of a PVC drain of Ø40mm max. Use this drain to connect the individual condensate drains of each boiler.

The siphon of a flue gas system can also be connected, if required, by means of an open connection.

Installation

Hot water supply

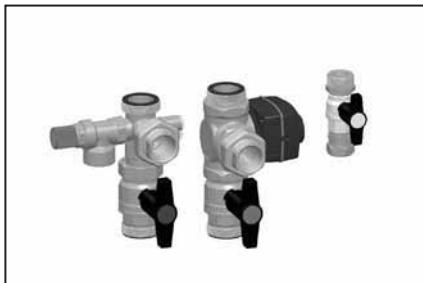


The DHW control can be connected to the ATAG XL F. For connection and settings refer to the Boiler Control chapter.

Expansion DHW cylinder circuit

When connecting a DHW cylinder to the boiler before the low velocity header an ATAG diverter valve is recommended.


The circuit between the diverter valve [1] between the boiler and cylinder should be provided with an expansion vessel [2].

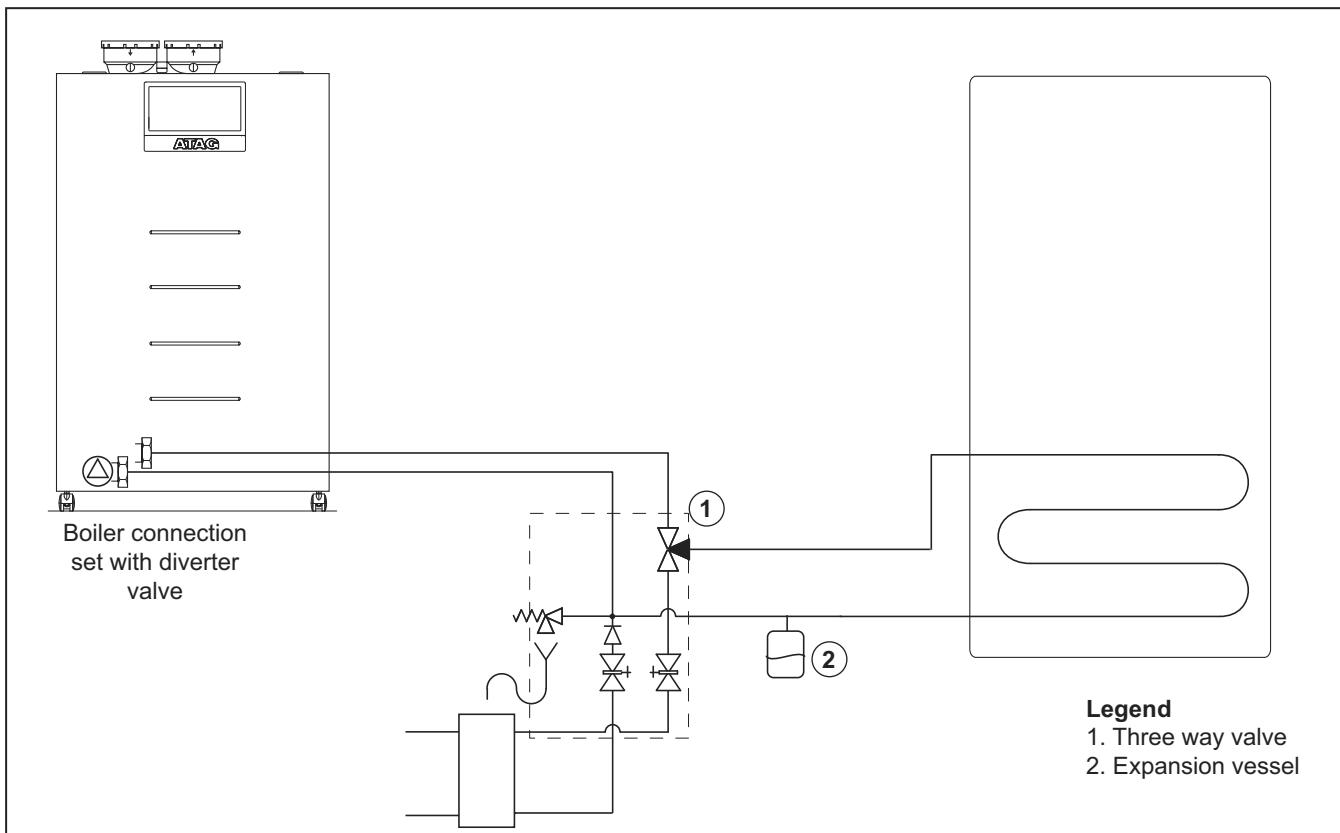

Installation

Connections Air- / flue gas ducts for individual boilers

All boiler models have a parallel flue connection.

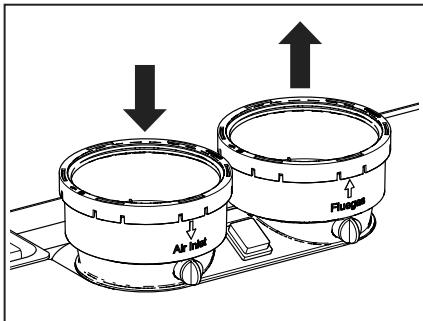

Flue gas connection

We recommend the use of ATAG comprehensive range of flue gas components.

For further information, please see the installation instructions:

- wall terminals
- roof terminals
- flue pipe components, both individual pipes and concentric tubes.

Regulations about the construction and installation of flue gas systems are different from country to country. It must be ensured that all national regulations with regard to chimney systems are observed.

It is not necessary to install a separate condensate drain for the flue gas system, since the condensate will be flushed out via the boiler and into the siphon. Please observe the following recommendations:

- Only use corrosion-resistant material
- The diameter must be calculated and selected according to the national regulations.
- The length of the flue gas system must be kept as short as possible (and must not exceed the maximum permitted length, see the table below)
- Horizontal flue gas tubes must have an inclination of at least 3° back towards the boiler.

Air supply connection

If required, a separate room sealed air supply tube may be connected. The diameter must be calculated in conformity with national regulations and in combination with the flue gas system. The overall resistance of the air supply and flue gas tubes may not exceed the maximum supply pressure of the Fan at any time. (Also see the Chapter "Technical data" and the table below)

Notes

The tables below give guidance on the maximum lengths of air and flue gas tubes that may be connected. If a room sealed installation is being made utilising separate air and flue gas tubes, the lengths of both tubes must be added together and not exceed the relevant value given in the tables.

The radius of any bend used in the flue gas system must not exceed 87.5°.

Walls that are sensitive to heat should be insulated.

Construct the flue system in such way that no recirculation may take place.


Dimensioning (reference value)

	Ø tubes (open or parallel tubes room sealed installation)	Maximum length in metres			
Changes of direction		0	2	3	4
XL75F	Ø100 mm	60	56	54	52
XL105F		34	30	28	26
XL125F		20	16	14	12
XL150F		16	12	10	8
XL180F	Ø130 mm	35	30	27	25
XL210F		30	25	22	20
	Ø tubes (concentric room sealed installations)	Maximum length in metres			
Changes of direction		0	2	3	4
XL75F	Ø100/150 mm	23	19	17	15
XL105F		13	9	7	5
XL125F		10	6	4	2
XL150F		8	5	3	1

Required minimum (flue enclosure) shaft cross-section		
Diameter flue duct	Square shafts	Round shafts
100 mm	140 x 140 mm	160 mm

Installation

Connections Air- / flue gas ducts for individual boilers

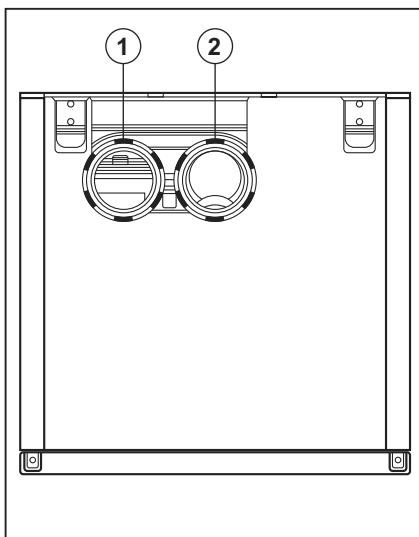

Boiler type	Air duct - flue gas diameter
XL75F	100 - 100
XL105F	100 - 100
XL125F	100 - 100
XL150F	100 - 100
XL180F	130 - 130
XL210F	130 - 130

Fan settings correction

By setting parameter (21-2-4) it is possible to compensate for a higher flue gas pressure difference. It is required to have a pressure drop calculation of the applied flue gas system.

According the calculated pressure drop, the correct value for parameter (21-2-4) has to be chosen from the table below.

For setting parameters see the applicable chapter.


Parallel boiler connection

The boiler comes as standard with a parallel connection for the flue gas outlet and air supply system. For the air supply opening (1) diameter and the flue gas outlet connection (2), see table below. The air supply channel can be connected to it, or, if it is installed as an "open device" (Drainage category B), an air filter is recommended.

Concentric boiler connection

The boilers 75-105-125-150 can be converted into a concentric connection using the parallel/concentric adapter 100/150 (optional) and carrying out the following tasks:

- Open and remove the front panel and the top panel (follow the instruction on page 42).
- Lift the parallel connection.
- Disconnect the main switch 230V connection and remove it.
- Replace the parallel connection with parallel concentric adapter.
- Connect and fit the main switch 230V according to previous configuration.

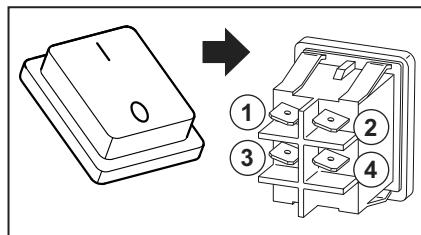

The air supply opening has a diameter of ø150mm.

The flue gas outlet connection has a diameter of ø100mm.

The flue gas outlet-/air supply system is then connected to the concentric connection component.

The ATAG XL F-boilers can be used both in an "open" and in "room sealed" system.

Open system

The required combustion air is taken from the immediate environment (boiler room). For this purpose, please comply with the applicable boiler room ventilation regulations.

When using boiler category B23 or B33 as an 'open boiler', the protection degree of the boiler will be IPX0D instead of IPX4D.

An air filter or a grid is recommended on the air intake of the boiler (available as an accessory on pages 15-17).

Room sealed system

The required combustion air is sucked in from the outside through a duct. This improves installation possibilities within a building. In general, outside air is cleaner than air from the boiler room.

When the boiler is working, it produces a white plume of water vapour. This plume is harmless but may cause some inconvenience, particularly in the case of wall terminal. As a result, roof terminals are preferred.

In a room sealed installation, roof terminals should be at the same height preventing flue gas from being sucked in by an other boiler (recirculation). Outlets in recesses and near erected walls may also bring about flue gas recirculation. Recirculation has to be prevented at all times.










For installation in UK please refer to installation guidance in BS6644 and IGE UP10.

Flue Gas System pressure drop							
Parameter (21-2-4)		XL75	XL105	XL125	XL150	XL180	XL210
	0 - 600	156	243	143	200	215	265
	700	204	295	177	230	280	321
	800	224	350	207	275	313	370
	900	250	405	240	300	375	-
	1000	278	457	260	304	375	-

Installation

Connections

Air- / flue gas ducts - installation variants for individual boilers

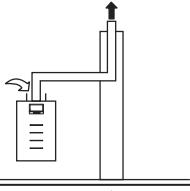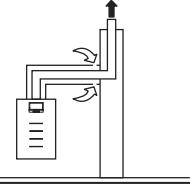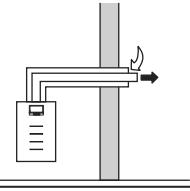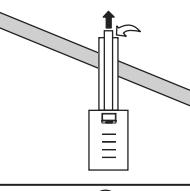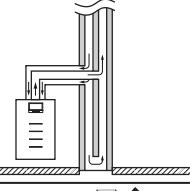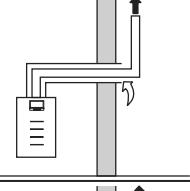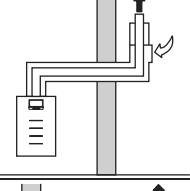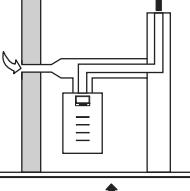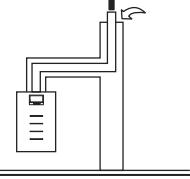Ambient combustion air		
B23	Flue gas duct into the chimney, aspiration of air from the surroundings. End section of the waste gas duct above the roof.	
B33	Flue gas duct into the chimney, aspiration of air from the surroundings. End section of the waste gas duct above the roof.	
Combustion air taken from the surroundings		
C13	Flue gas duct and suction air over the outer wall, must be in the same square area.	
C33	The flue gas and suction air ducts via the roof terminal, must be in the same square area.	
C43	Suction air and waste gas duct via the chimney system, which is integrated in the building.	
C53	Section the air and waste gas exhaust to the outside, in areas with different pressures. Vertical end section of the waste gas duct.	
C63	Specially developed equipment, for connection to certified air-/waste gas systems that operate separately from one another.	
C83	Air suction on the outside of the building, waste gas duct via the chimney.	
C93	Air and waste gas piping to the waste gas chimney, via installation in the roof and in a humidity-resistant waste gas chimney.	

Installation

Connections

Air- / flue gas ducts - installation variants for multiple boilers

Opting for a collective flue gas outlet is determined by:

- The position of the boilers with regard to their outlet area
- Sufficient space above the boilers
- Number of boilers

You may opt for:

- Collective flue gas outlet under-pressure
- Collective flue gas outlet over-pressure


In many situations, flue gases cannot be vented individually because the

installation is indoors. For such situations, we recommend collective venting by means of under-pressure or over-pressure using a flue gas outlet system. The air supply may also be supplied collectively, but if the boiler room is suitable for that purpose it may also be obtained from the boiler room ('open device' Boiler category B).

If you install a common duct providing combustion air to more than one appliance, there is a risk that combustion air would be drawn from another appliance.

This may then be subject to a negative pressure.

In the case of collective venting of flue gases, the flue gas-venting outlet always has to end up in the open area (outlet area 1).

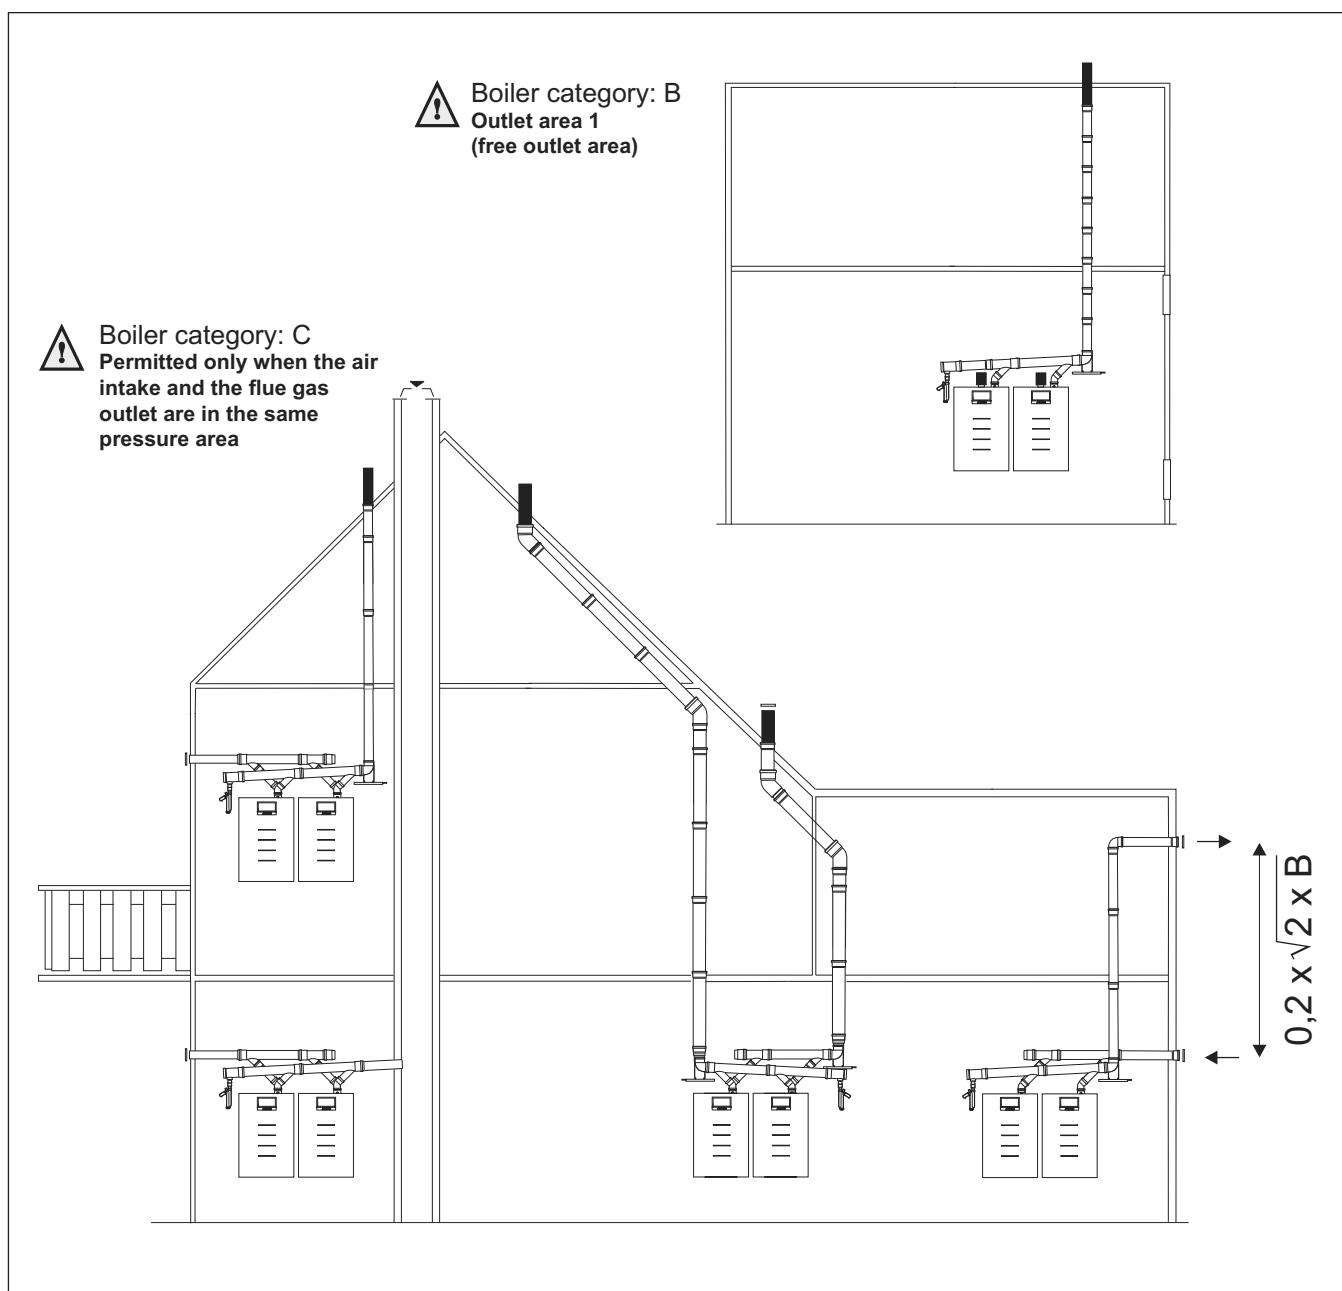

Installation


Connections Collective flue gas outlet under-pressure

Diameter and venting lengths of the flue gas outlet/air supply:

- Open system, with under-pressure (calculated with thermal draft) under atmospheric circumstances.

NOTE!


1. IPX0D at flue category B₂₃ and B₃₃

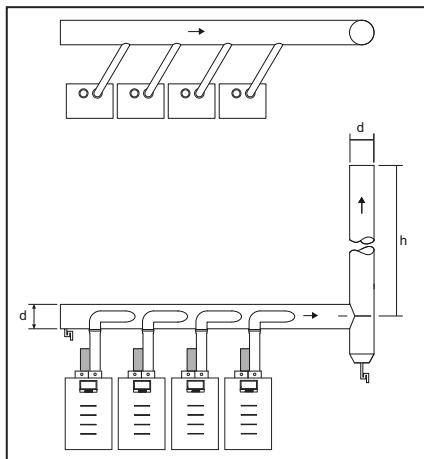

Dimensions cascade flue ATAG XL F					
Open system, underpressure					
Output (80/60)		d = minimum diameter Ø in mm			
[kW]		h = 2 - 5	h = 5 - 9	h = 9 - 13	h = 13 - 17
114	-	240	210	200	190
240	-	360	300	270	260
360	-	480	360	330	310
480	-	600	440	380	360
600	-	720	470	420	400
720	-	840	550	470	430
840	-	960	600	510	470

Diameter and venting lengths of the flue gas outlet/air supply:

- Room sealed system, with under-pressure (calculated with thermal draft)

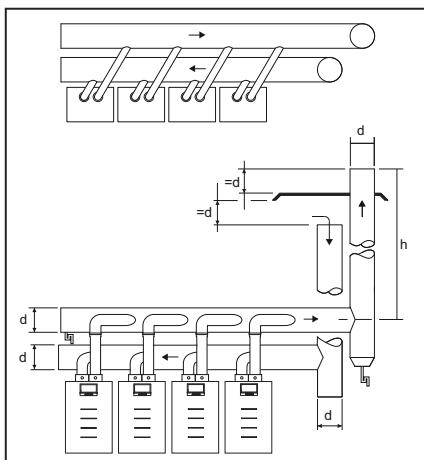

Dimensions cascade flue ATAG XL F					
Room sealed system, underpressure, parallel					
Output (80/60)		d = minimum diameter Ø in mm			
[kW]		h = 2 - 5	h = 5 - 9	h = 9 - 13	h = 13 - 17
114	-	240	240	220	220
240	-	360	330	300	290
360	-	480	390	370	350
480	-	600	460	410	390
600	-	720	500	460	440
720	-	840	550	500	470
840	-	960	600	540	510

Installation

Connections Collective flue gas outlet over-pressure

Diameter and venting lengths of the flue gas outlet/air supply:


- Open system with over-pressure.

NOTE!

1. IPX0D at flue category **B₂₃** and **B₃₃**
2. Only with bus cable connected!
3. Adjust parameter 102 to 2

NOTE!

1. IPX0D at flue category **B₂₃** and **B₃₃**
2. Only with bus cable connected!
3. Adjust parameter 102 to 2

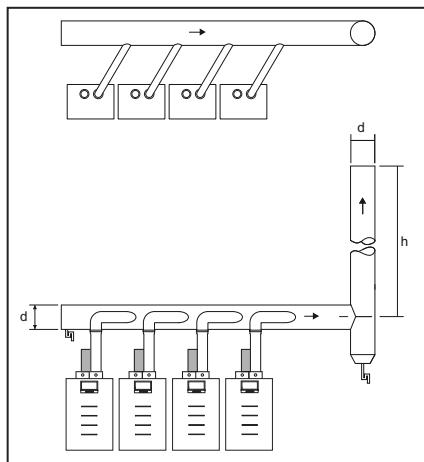


Dimensions cascade flue ATAG XL F						
Open system, overpressure						
Output (80/60)		d = minimum diameter Ø in mm				
[kW]		h = 2 - 5	h = 6 - 10	h = 11 - 15	h = 16 - 20	
114	-	240	150	150	150	150
240	-	360	150	150	180	180
360	-	480	180	180	180	200
480	-	600	200	220	220	220
600	-	660	230	230	250	250
660	-	872	260	260	260	260
872	-	960	280	280	280	300
960	-	1200	280	280	280	300

Diameter and venting lengths of the flue gas outlet/air supply:

- Room sealed system with over-pressure.

Please contact ATAG.

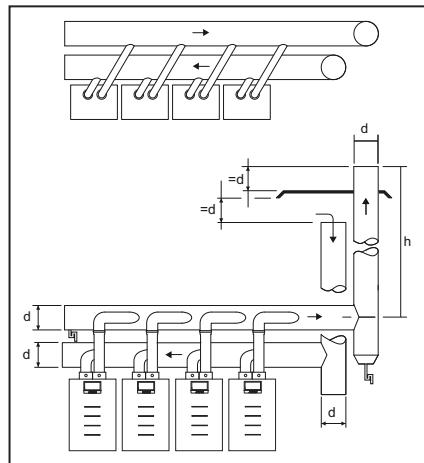

Dimensions cascade flue ATAG XL F						
Room sealed system, overpressure, parallel						
Output (80/60)		d = minimum diameter Ø in mm				
[kW]		h = 2 - 5	h = 6 - 10	h = 11 - 15	h = 16 - 20	
114	-	285	150	150	150	150
285	-	524	200	200	200	200
524	-	1440	300	300	300	300

Installation

Electrical connection

Electrical connections must be carried out by an authorized electrical technician, and in conformity with valid national and local standards and regulations. An insulated mains switch must be used for the power supply, with at least 3 mm contact openings. It must be mounted inside of the boiler room. The mains switch is used for switching off the power supply during maintenance works.

All cables are passed through the cable guide at the top of the boiler, and are led to the electronics panel at the front of the boiler.

The electric diagram must be observed during all electrical connection works (see the following pages).

A 230V -50Hz mains electrical supply is required fused externally at 16A.

A deviation on the grid of 230V (+10% or -15%) and 50Hz


The following additional regulations also apply:

- The boiler's wiring is not allowed to be changed;
- All connections have to be made to the terminal block.

Installation of outdoor sensor

If an outdoor sensor is connected to the boiler, then the sensor must be positioned in conformity with the drawing on the left.

If an outdoor sensor is NOT connected please refer to PADIN configuration in External control.

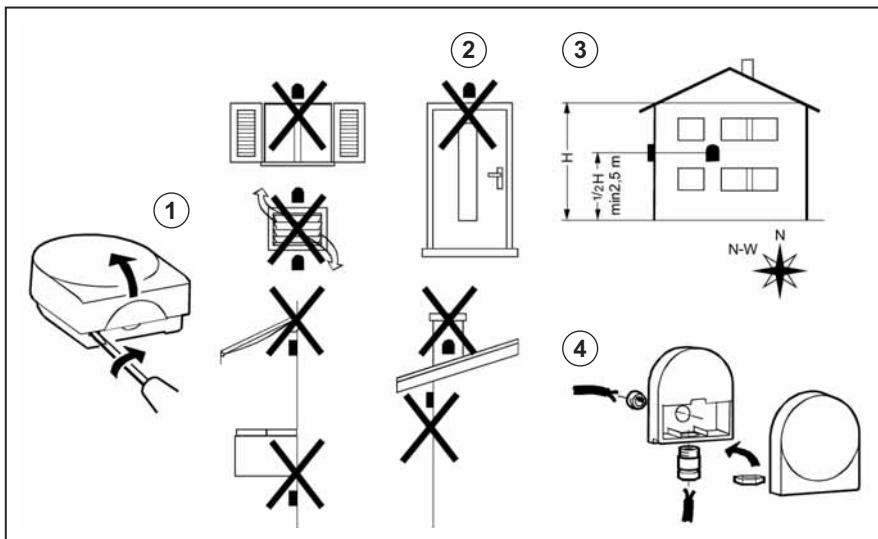

Installation

Electrical connection



The boiler has 4 socket blocks for all electrical connections:

1. High voltage supply (230V)
2. Volt free switches (230V relays)
- 3-4. Low voltage sensors and I/O
5. Communication bus for cascaded ATAG XL F boilers



Caution:


After removing the panels 230V parts can be reached.
Electrical connections are only to be carried out by qualified people

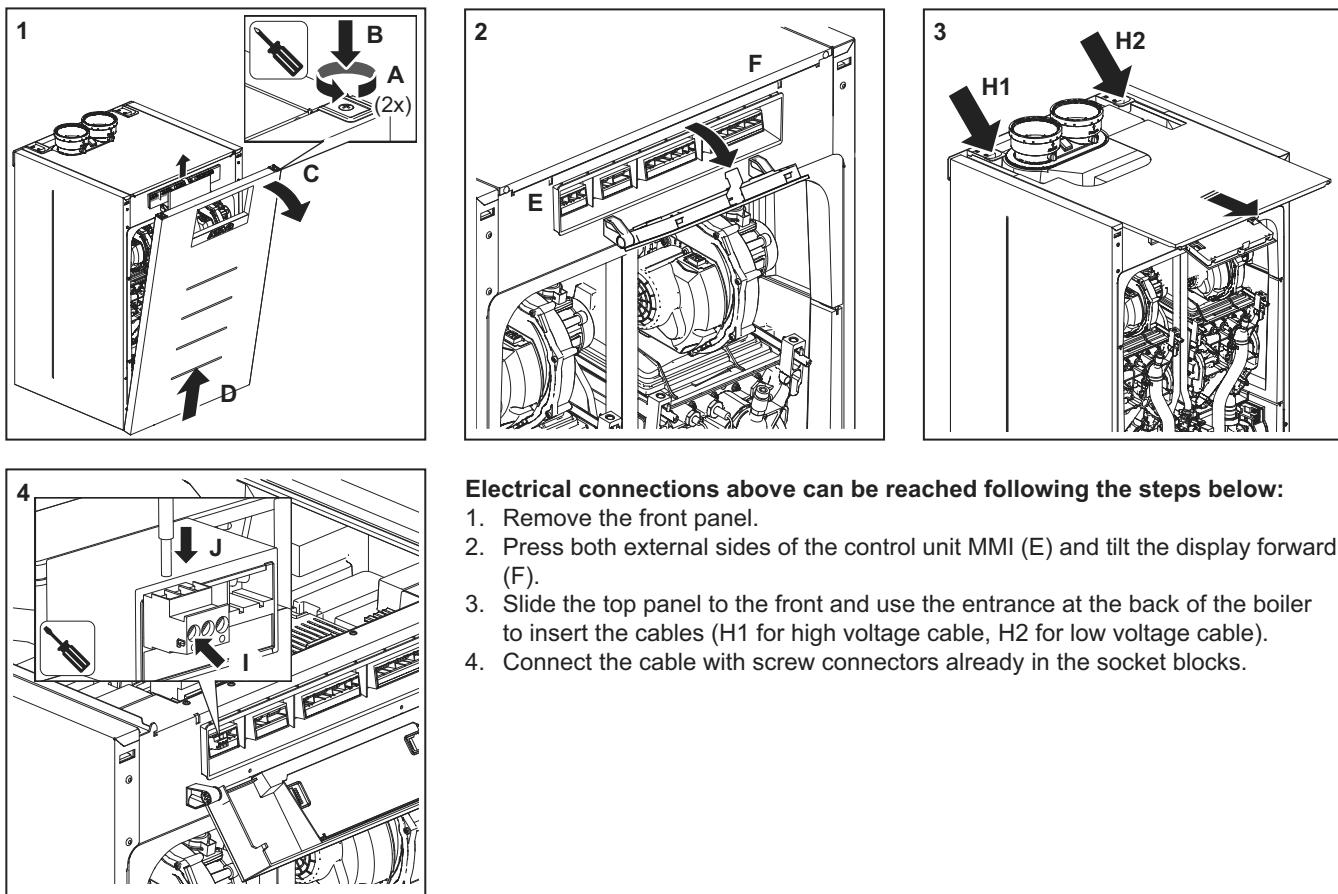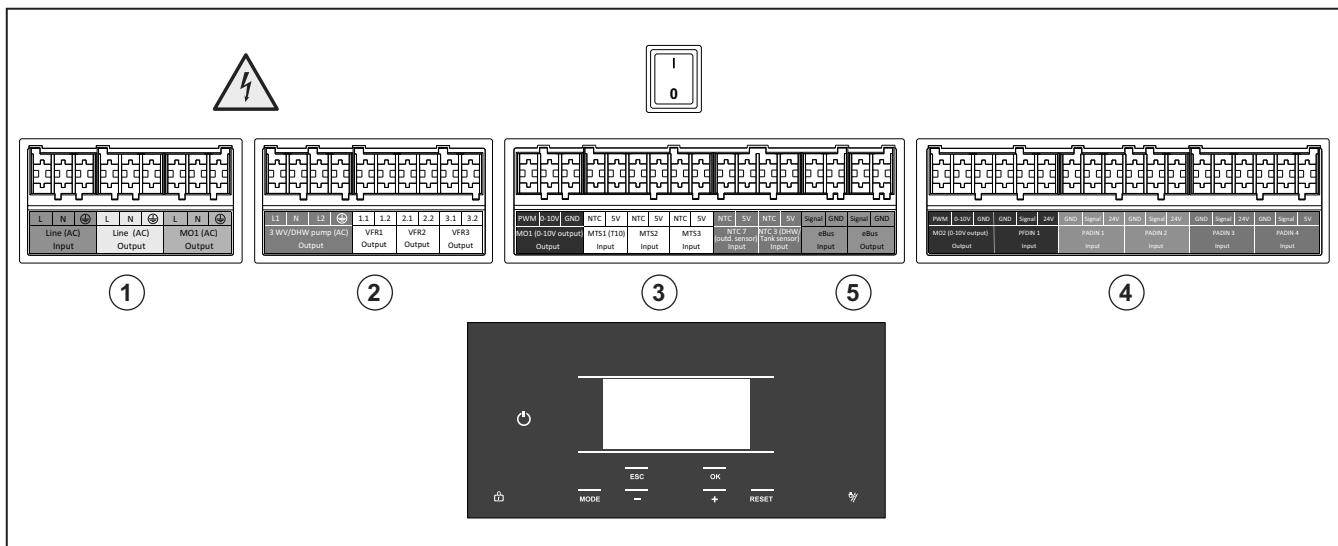

Installation

Electrical connection


1

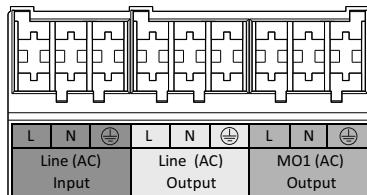

Contact	Line Type		Name	Function Description	Electrical Description
1	Line	Line (AC)	Main input	The Main Power supply to the boiler	230V (+10%; -15%) @50Hz
2	Neutral				
3	Earth				
4	Line	Line (AC)	Main Output	Output of the main power input, Live when the switch of the boiler is on	Same as Input
5	Neutral				
6	Earth				
7	Line	MO1 (AC)	MO1 System pump	will run with the boiler pump of the master	230/120VAC; 1A max (80A inrush max); Live switched
8	Neutral				
9	Earth				

See tables on pages 42-44.

2

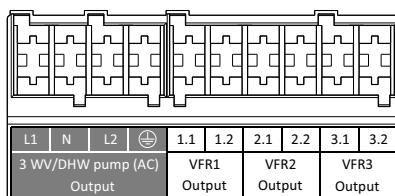


Contact	Line Type		Name	Function Description	Electrical Description
1	Line	3 WV/DHW pump	3 way Valve	Active CH	230/120 VAC; 1A max Fused
2	Neutral		3 way Valve/P2		
3	Line		P2 / 3 way valve	Active for DHW	230/120 VAC; 1A max 80A inrush max fused
4	Earth		Protective Earth		
5	1.1	VFR3 VFR2 VFR1	Volt Free Contact 1	a.i. HC1 pump	230VAC 2A max 80A inrush max not fused relay
6	1.2		Volt Free Contact 2		
7	2.1		Volt Free Contact 2		
8	2.2			a.i. Alarm Output	230VAC 1A max (cos phi > 0.8) not fused relay
9	3.1			a.i. Lpg shutoff valve	230VAC 1A max (cos phi > 0.8) not fused relay
10	3.2				

See tables on pages 42-44.

Installation

Electrical connection


3 & 5

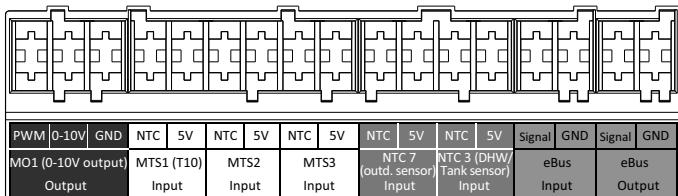

Contact	Line Type		Name	Function Description	Electrical Description
1	PWM	MO1	Multifunctional Output 1	DHW pump modulator	PWM: 0,1÷4 kHz; Vhigh= 12V; Vlow≤ 0,7V; Ihigh ≤ 10 mA
2	0-10 Volt			System Pump Modulator	0..10 Volt
3	GND			Tank Filling pump Modulator	
4	NTC input	MTS1 MTS2 MTS3 MTS7	Multifunctional Temperature Input 1	T10	NTC 10k β=3977
5	5 Volt			i.a. Buffer tank top/bottom DHW circulation sensor*	NTC 10k β=3977
6	NTC input		PMultifunctional Temperature Input 2	i.a. Buffer tank top/bottom DHW charging sensor*	NTC 10k β=3977
7	5 Volt			i.a. Buffer tank top/bottom DHW charging sensor*	NTC 10k β=3977
8	NTC input		Multifunctional Temperature Input 3	Dedicated temperature sensor for outdoor	NTC 1k β=3977
9	5 Volt			Dedicated temperature for DHW temperature	NTC 10k β=3977
10	NTC input	NTC3 NTC7	Outdoor sensor (T4)	Communication bus for i.a. cascade communication / thermostat / club-in	
11	5 Volt			Communication bus for i.a. thermostat / club-in	
12	NTC input	eBus Input	eBus2		
13	5 Volt				
14	Signal	eBus Output	eBus2		
15	GND				
16	Signal	eBus Output	eBus2		
17	GND				

See tables on pages 42-44.

4

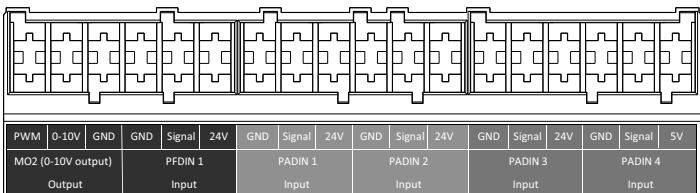

Contact	Line Type		Name	Function Description	Electrical Description
1	PWM	MO2	Multifunctional Output 2	System Pump Modulator	PWM: 0,1÷4 kHz; Vhigh= 12V; Vlow≤ 0,7V; Ihigh ≤ 10 mA
2	0-10 Volt			Tank Filling pump Modulator	0..10 Volt
3	GND			0..10 Volt feedback to BMS*	
4	GND	PADIN 1	Programmable Frequency Digital Input		GND
5	Signal			Digital: close with +24Vdc; Frequency 0÷24V; max 400 Hz	
6	24 Volt		Programmable Analog Digital Input 1	Power supply: +24Vdc, 10mA max	
7	GND			GND	
8	Signal			Digital: close with +24Vdc; Analog: 0÷10V	
9	24 Volt		Programmable Analog Digital Input 2	Power supply: +24Vdc, 10mA max	
10	GND			GND	
11	Signal			Digital: close with +24Vdc; Analog: 0÷10V	
12	24 Volt		Programmable Analog Digital Input 3	Power supply: +24Vdc, 10mA max	
13	GND			GND	
14	Signal			Digital: close with +24Vdc; Analog: 0÷10V	
15	24 Volt		Programmable Analog Digital Input 4	Power supply: +24Vdc, 10mA max	
16	GND			GND	
17	Signal			Digital: close with +5Vdc; Analog: 0÷5V	
18	5 Volt			Power supply: +5Vdc, 10mA max	

See tables on pages 42-44.

Installation

Electrical connection Multi function

MO1 OUTPUT (AC)

ECU I/O	Menu display parameter
MO1	Multi Out HV 24.7.0 (Commercial Boiler); 26..32.7.0 (Commercial Boiler – Slave 1..7);

Function	Function value
None	0
System Pump	1
HC1 Pump	2
Circulating Pump	3
DHW intermediate circuit pump	4
BUF Filling pump	5
Storage tank transfer pump	6
Heat gen shutoff valve	7
Heat request	8

VFR 1

ECU I/O	Menu display parameter
VFR1	Volt free Contact 1 24.7.1 (Commercial Boiler); 26..32.7.1 (Commercial Boiler – Slave 1..7);

Function	Function value
None	0
System Pump	1
HC1 Pump	2
Circulating Pump	3
DHW intermediate circuit pump	4
BUF Filling pump	5
Storage tank transfer pump	6
Heat gen shutoff valve	7
Heat request	8
Alarm output	9
Lpg/Room Supply Fan	11

VFR 2-3

ECU I/O	Menu display parameter
VFR2	Volt free Contact 2 24.7.2 (Commercial Boiler); 26..32.7.2 (Commercial Boiler – Slave 1..7);
VFR3	Volt free Contact 3 24.7.3 (Commercial Boiler); 26..32.7.3 (Commercial Boiler – Slave 1..7);

Installation

Electrical connection Multi function

Function	Function value
None	0
Heat gen shutoff valve	1
Heat request	2
Alarm output	3
Lpg/Room Supply Fan	5

MO1 OUTPUT (0-10V)

ECU I/O	Menu display parameter
MO1_LV	Multi Out PWM 1 24.7.4 (Commercial Boiler); 26..32.7.4 (Commercial Boiler – Slave 1..7);

Function	Function value
None	0
System pump modulator	1
DHW Pump modulator	2
Circulating pump modulator	3
BUF Filling pump modulator	4
boiler power feedback	5

MTS 1-2-3

ECU I/O	Menu display parameter
MTS1	Multi In Temp 1 24.6.0 (Commercial Boiler); 26..32.6.0 (Commercial Boiler – Slave 1..7);
MTS2	Multi In Temp 2 24.6.1 (Commercial Boiler); 26..32.6.1 (Commercial Boiler – Slave 1..7);
MTS3	Multi In Temp 3 24.6.2 (Commercial Boiler); 26..32.6.2 (Commercial Boiler – Slave 1..7);

Function	Function value
None	0
Common flow sensor	1
DHW storage tank bottom	2
DHW circulation sensor	3
DHW charging sensor	4
Buffer storage tank top	5
Buffer storage tank bottom	6
Flue gas temp sensor	7

Installation

Electrical connection Multi function

MO2 OUTPUT (0-10V)

ECU I/O	Menu display parameter
MO2_LV	Multi Out PWM 2 24.7.5 (Commercial Boiler); 26..32.7.5 (Commercial Boiler – Slave 1..7);

Function	Function value
None	0
System pump modulator	1
DHW Pump modulator	2
Circulating pump modulator	3
BUF Filling pump modulator	4
boiler power feedback	5


PADIN 1-2-3-4

ECU I/O	Menu display parameter
PADIN1	Multi In AD 1 24.6.4 (Commercial Boiler); 26..32.6.4 (Commercial Boiler – Slave 1..7);
PADIN2	Multi In AD 2 24.6.5 (Commercial Boiler); 26..32.6.5 (Commercial Boiler – Slave 1..7);
PADIN3	Multi In AD 3 24.6.6 (Commercial Boiler); 26..32.6.6 (Commercial Boiler – Slave 1..7);
PADIN4	Multi In AD 4 24.6.7 (Commercial Boiler); 26..32.6.7 (Commercial Boiler – Slave 1..7);

Function	DGTO val
None	0
Room thermostat HC1	1
Room thermostat HC2	2
Room thermostat HC3	3
0-10V Input request	4
DHW Timer Input	5
Heat generation lock	6
External consumer request	7
Gas Pressure Switch	9
CH Timer Input	10

Installation

Electrical connection Temperature sensors

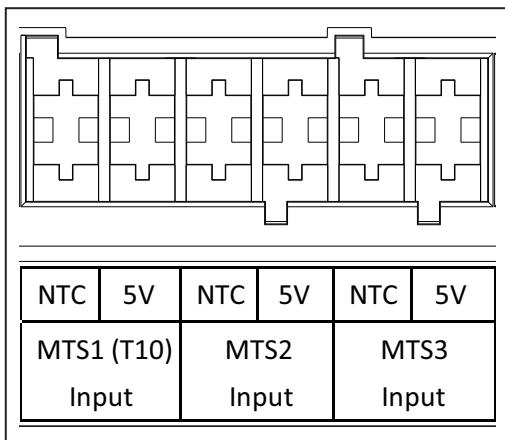

Common flow sensor


When a Common flow sensor is used (for cascade mandatory) it should be addressed on MTS1.

DHW Tank Setting

There are several schemes for hot water preparations see pages 42-45.

Flue gas Sensor

Sensors can also be used as flue gas sensor. With a setting for max temp and system has to switch off or a set temp where system has to reduce the power.

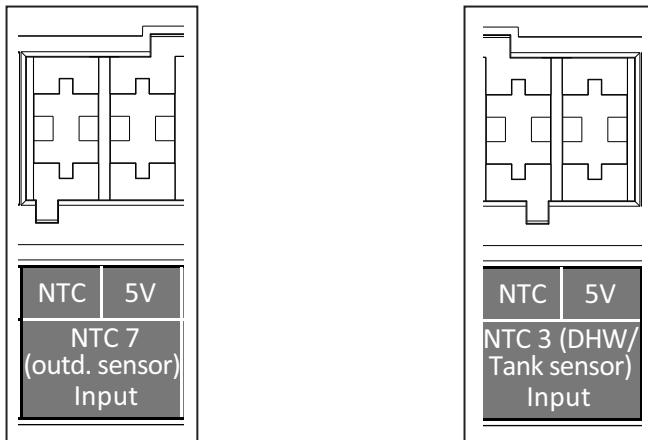

Weather dependent regulation


When WDR is used an outdoor sensor is needed. Keep in account this is a 1K sensor. This control setting has to be selected and is not auto detect.

Basis DHW preparation

For basic DHW preparation there is a dedicated Tank sensor. For the other regulations the tank sensor is the Top Sensor. Take in account this is a 10K sensor.

Installation

Electrical connection External controls


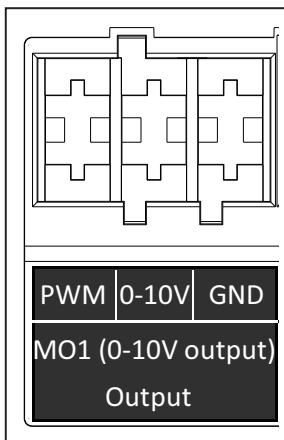


BMS Feedback

For giving feedback to the BMS system this output gives a 0-10 Volt signal as indication of Load.

Pump modulation

This output can be set as a controller for several pump types. For types, see scheme on pages 42-44.

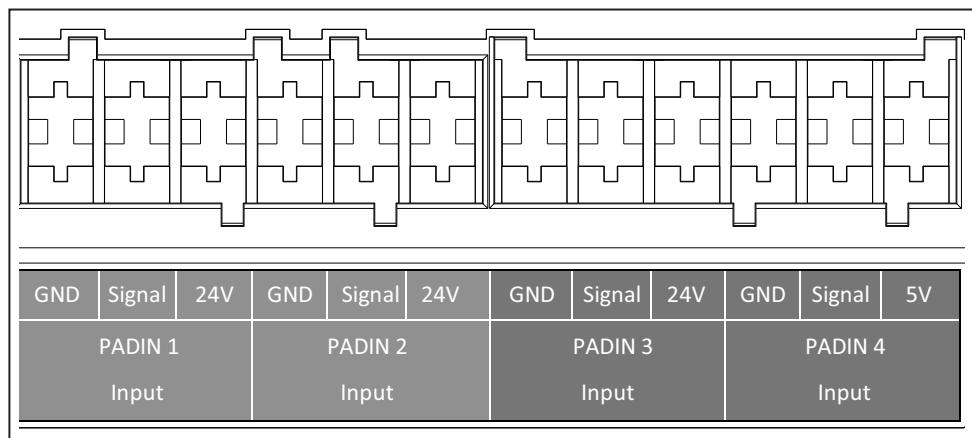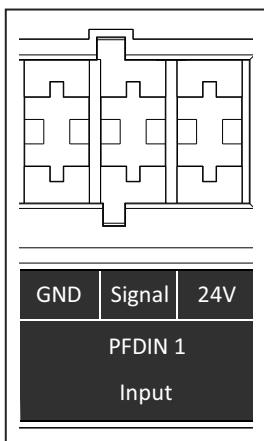

DHW flow sensing

For sensing the amount of water flow. Or set as a flow switch.

Menu display parameter	
24.6.3	
26..32.6.3	

On/Off heat request

Input can be used for on/off control up to 3 zones.

0-10 Volt input (Padin 1-2-3)

Load and temp control via an 0-10 Volt dc input. When 0-10 Volt is selected the system can only be controlled with this system.

Heat Generation Lock

As long as the input is Open all heat requests are blocked.

Padin 4

Take in account PADIN 4 is 5 Volt max where 1, 2 & 3 are 24 Volt.


Function	Function value
None	0
DHW flow meter	1
DHW flow switch	2

HCs + DHW changeover

External controller selects if the system can only be active for DHW or for CH and DHW

Installation

Electrical connection eBus2 controls

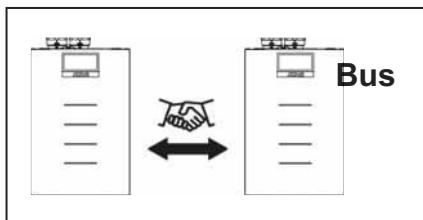


Cascade connection

The connection between boilers in a cascade is done via the eBus2 in and output.


Accessories

To connect accessories like zone clip-in, solar manager, cube etc., use the eBus2 connection.

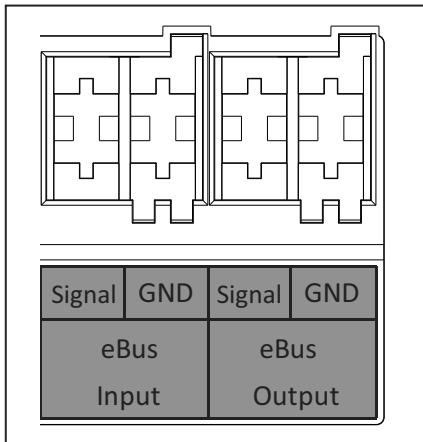

Installation

Electrical connection Wiring diagram

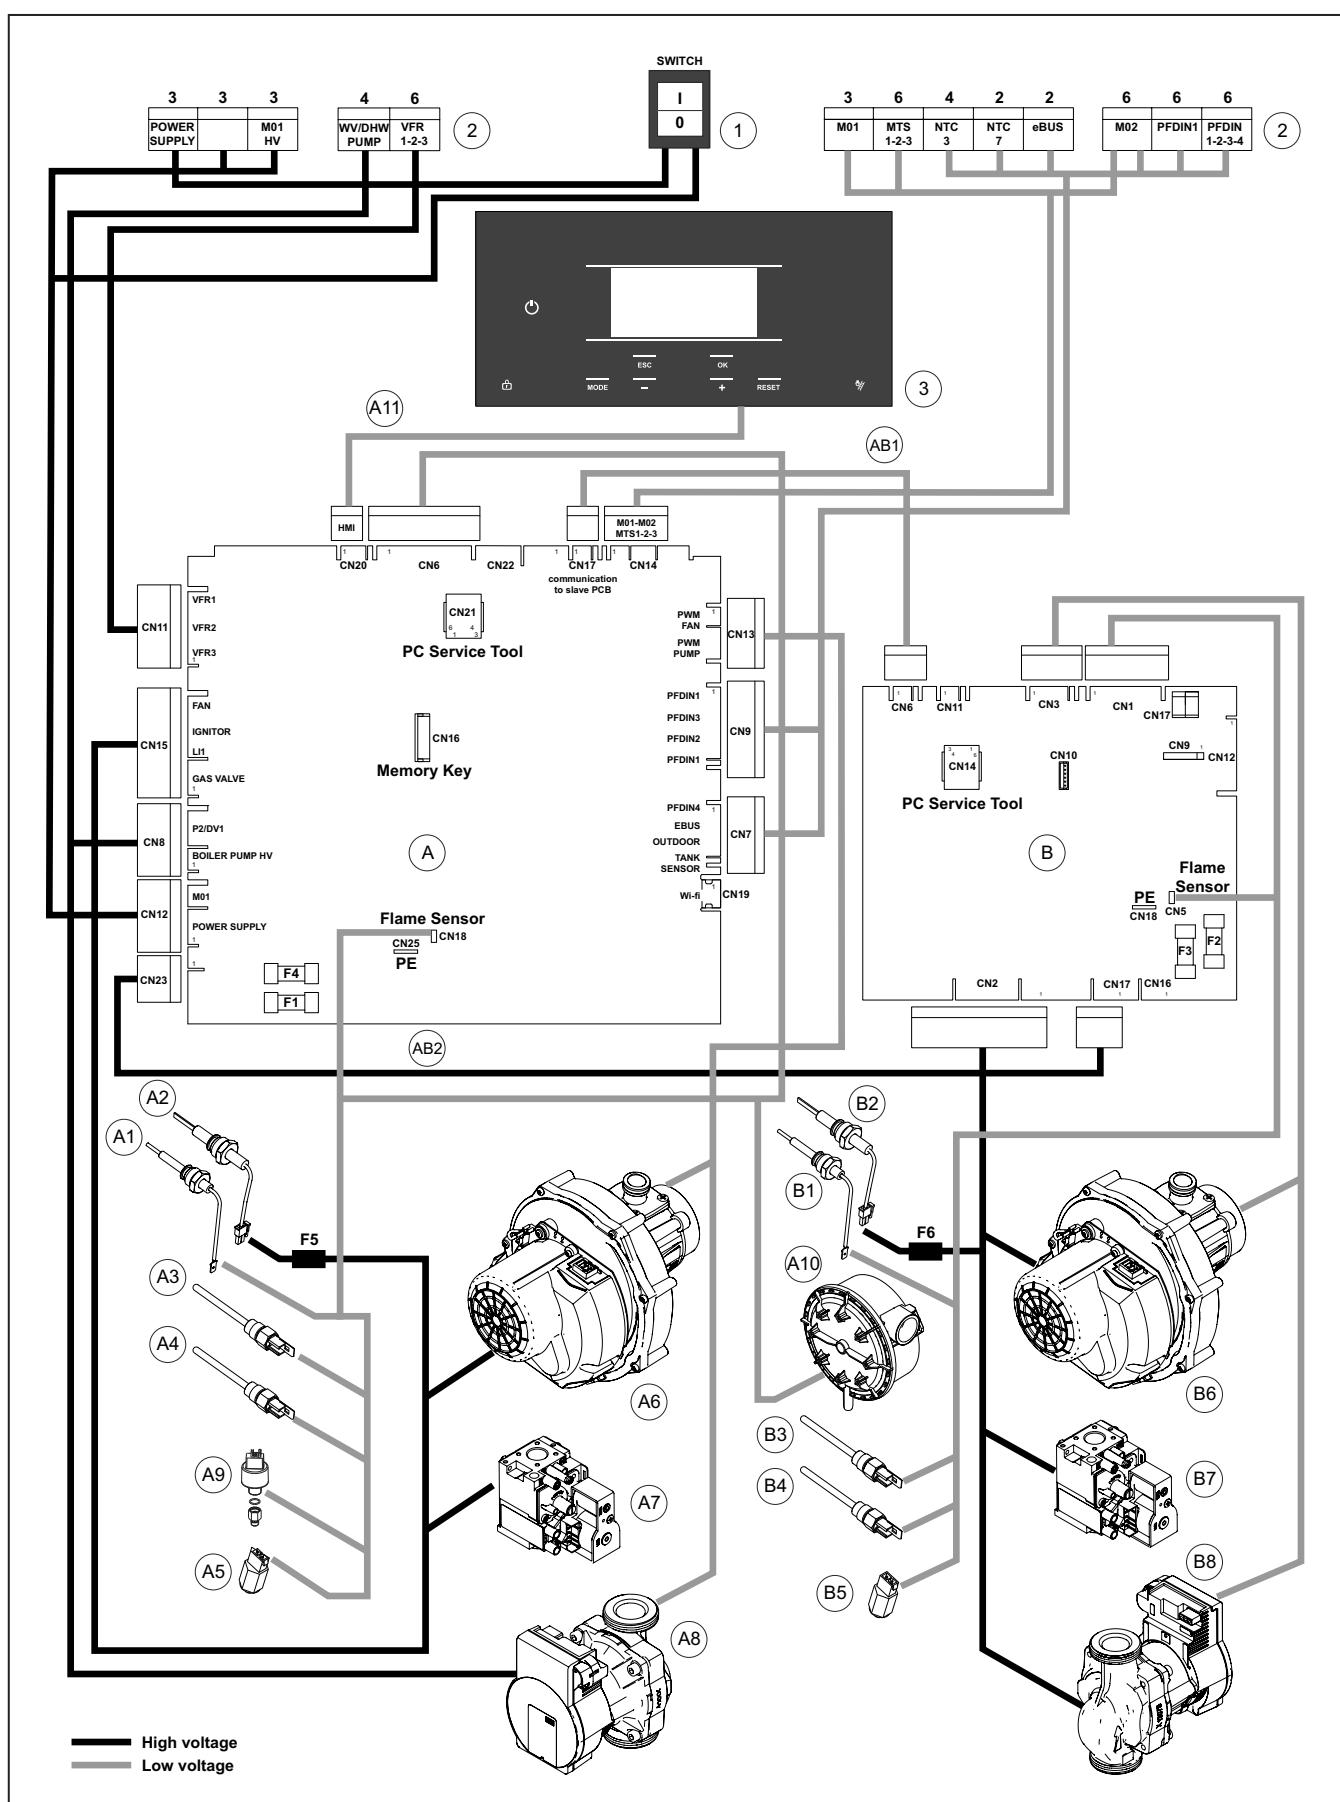

Installation

Electrical connection Wiring diagram

Legend:

- 1 Main switch 230V
- 2 Electrical connections
- 3 Human machine interface HMI

- A Master printed circuit board
- A1 Detection electrode
- A2 Ignition electrode
- A3 Flow sensor T1
- A4 Secondary flow sensor T1a
- A5 Return sensor T2
- A6 Fan unit
- A7 Gas valve
- A8 Circulation pump
- A9 Water pressure sensor P1
- A10 Air pressure switch APS
- A11 HMI communication cable low voltage



- B Slave printed circuit board
- B1 Detection electrode
- B2 Ignition electrode
- B3 Flow sensor T1
- B4 Secondary flow sensor T1a
- B5 Return sensor T2
- B6 Fan unit
- B7 Gas valve
- B8 Circulation pump

- AB1 Slave low voltage communication cable
- AB2 Slave power supply cable

- F1 Fuse 6,3A - 250V
- F2 Fuse 6,3A - 250V
- F3 Fuse 3,15A - 250V
- F4 Fuse 3,15A - 250V
- F5 Fuse 2A - 250V - 4,2 I²t - fast
- F6 Fuse 2A - 250V - 4,2 I²t - fast

Installation



Filling the system

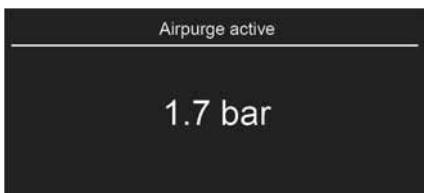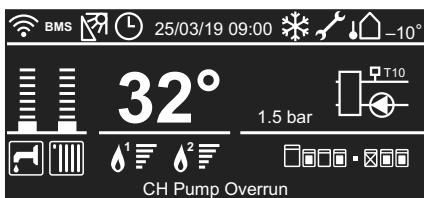

Filling the system

The central heating installation needs to be filled with potable water according to the requirements in chapter 'Water quality'. When the boiler has been electrically commissioned, then the heating system can be filled. For filling or topping up the installation use the following procedure:

1. Leave the power on the boiler
2. Connect a filling tap to the return of the hydraulic circuit and open it.
3. Connect a hose on the manual deaerator (A) and open it to remove the air.
4. Close the manual deaerator when water is constantly coming out from it.
5. Slowly fill the central heating system up to 1.5 – 2 bar, Digital pressure reading is shown in the middle of the Home screen.
6. Close the filling tap.
7. Vent the entire heating installation starting at the lowest point.
8. Check the water pressure and top up if necessary to 1.5 – 2 bar.
9. Disconnect the filling hose from the hydraulic circuit.

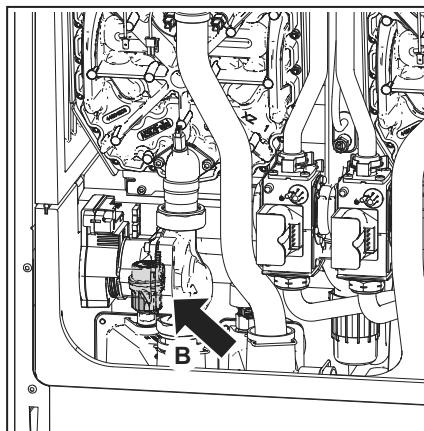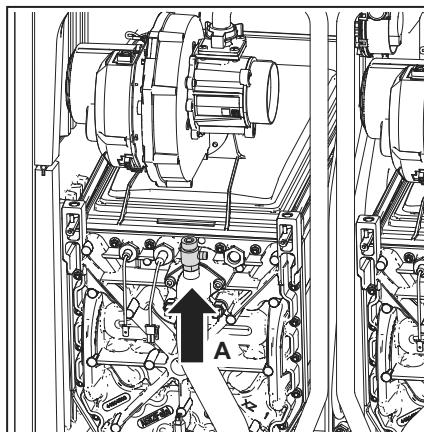

When powering up the boiler an automatic air purge program will run to vent the boiler ('Airpurge active'). This will last for approximately 7 minutes. During this program the pressure in the central heating needs to be checked, and when necessary, topped up again.

It may take some time before all the air has disappeared from a filled installation. Certainly during the first week noise may be heard that indicate air. The automatic air vent (B) in the boiler will let this air escape, causing the water pressure to drop during this period and the water pressure needs topping up again.

Hot water supply


Fill the hot water supply by opening the cold mains isolation valve. Bleed the hot water installation by opening all hot water taps one at a time. Leave the water running until all air has disappeared from the supply. Flush with a minimum of 10 litres to rinse any residual contaminants from the hot supply.

Boiler setting

It's needed to configure the device, press OK to proceed


First time startup a boiler

When a boiler is activated there is a question as in the picture on the left. After pressing **OK** the next menu is shown.

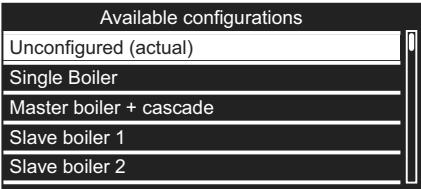


Single boiler setting

When there is no cascade, select "**Single boiler**". The system will automatically load all needed parameters for a single boiler; if it is a double engine the engine will automatically set.

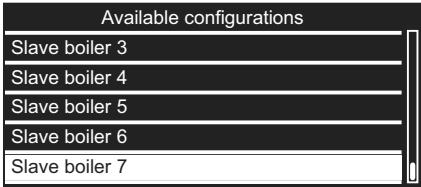


Cascade Setting

If the boiler is part of a cascade installation, select "**Master boiler + cascade**" and confirm the selection by pressing the **OK** button. On slave boiler 1 to X (max 8) you just have to confirm the address.

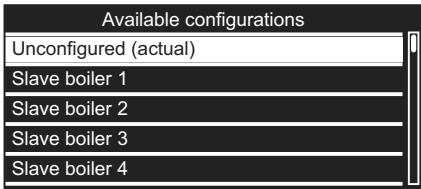

Operation

Description of display

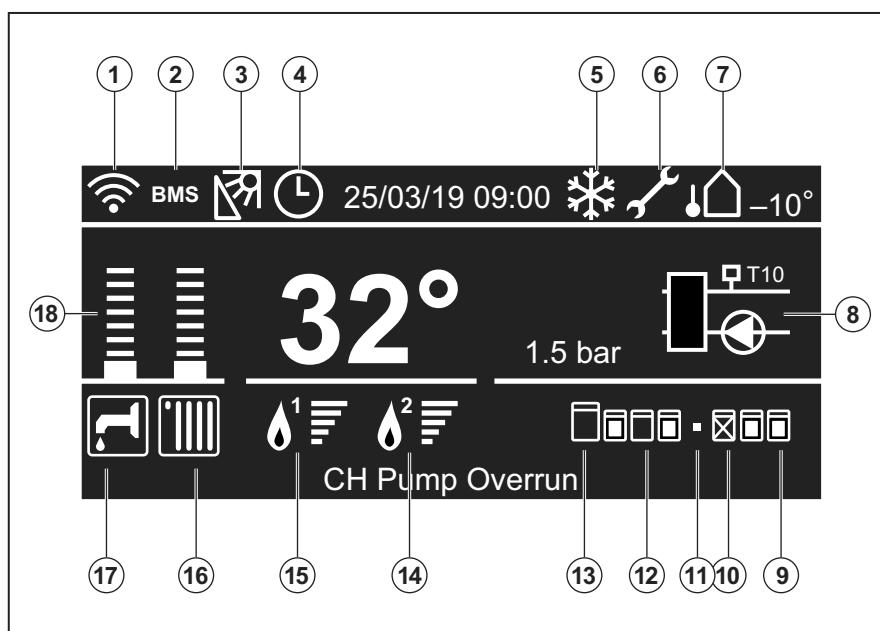

The boiler has a pilot-control. This control takes care of most of the manual settings but also provides numerous settings to adjust the control exactly to the installation and user requirements.

Display

The LCD screen has a backlight. Activate the display first before it will accept an action. The light is activated by pushing one of the buttons.

Cascade symbols are not visible in case of a single boiler or when no bus communication cable is connected.

Screen explanation

- | | | | |
|--|---|--|---|
| | 1. WIFI Gateway presence and status | | 11. No slave boiler connected |
| | 2. Building Management System detected | | 12. Slave boiler in stand by mode |
| | 3. Solar Manger presence | | 13. Master boiler |
| | 4. Operation Mode = TIME BASED on the «zone to Show» zone | | 14. Engine 2 Flame presence and power
<i>Slave engine (if present) is active.</i> |
| | 5. Pump Continuous function | | 15. Engine 1 Flame presence and power
<i>Main engine is active.</i> |
| | 6. Maintenance Warning present | | 16. DHW enable and heating request
<i>Boiler or Cascade system controls Central Heating. If there is a square around the symbol, then the system is active for Central Heating.</i> |
| | 7. Outdoor Temperature | | 17. CH enable and heating request
<i>Boiler or Cascade system controls Domestic Hot Water. When there is a square around the symbol, then the system is active for Domestic Hot Water.</i> |
| | 8. System Pump status
<i>T10 means T10 is present. When the pump symbol is flashing, the relay on block 1 contact 3 is closed.</i> | | 18. CH/DHW actual SetPoint relative level |
| | 9. Slave boiler on (heating mode) | | |
| | 10. Slave boiler in error mode | | |

Operation

Description of display and keyboard

Boiler status

- C.Heating active
- Storage active
- CH pump overrun
- DHW Pump overrun
- Pump frost prot
- Burn frost prot
- Storage frost prot
- Thermal Cleanse in progress
- DHW serving from solar
- Heat generation lock
- Chimney active
- Air purge active



Status description

- Burner active for heating
- Burner active for Storage Tank
- Overrun time pump over CH
- Overrun time pump over DHW
- Pump active for frost protection
- Burner active for frost protection
- Burner active for Tank Frost protection
- AntiLegionella cycle in progress
- DHW request serving from solar
- Burner inactive for boiler heat generation lock
- Burner in service mode stage
- Pump in air purge stage

Boiler mode and power button color:

The Power Button has four colors:

- White: boiler is off (using power button).
- Green: boiler is on (using power button), but not active (no heating).
- Blue: boiler is on and active (heating).
- Red: there is an error.

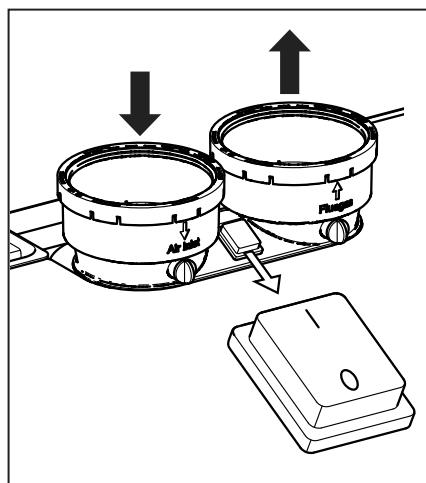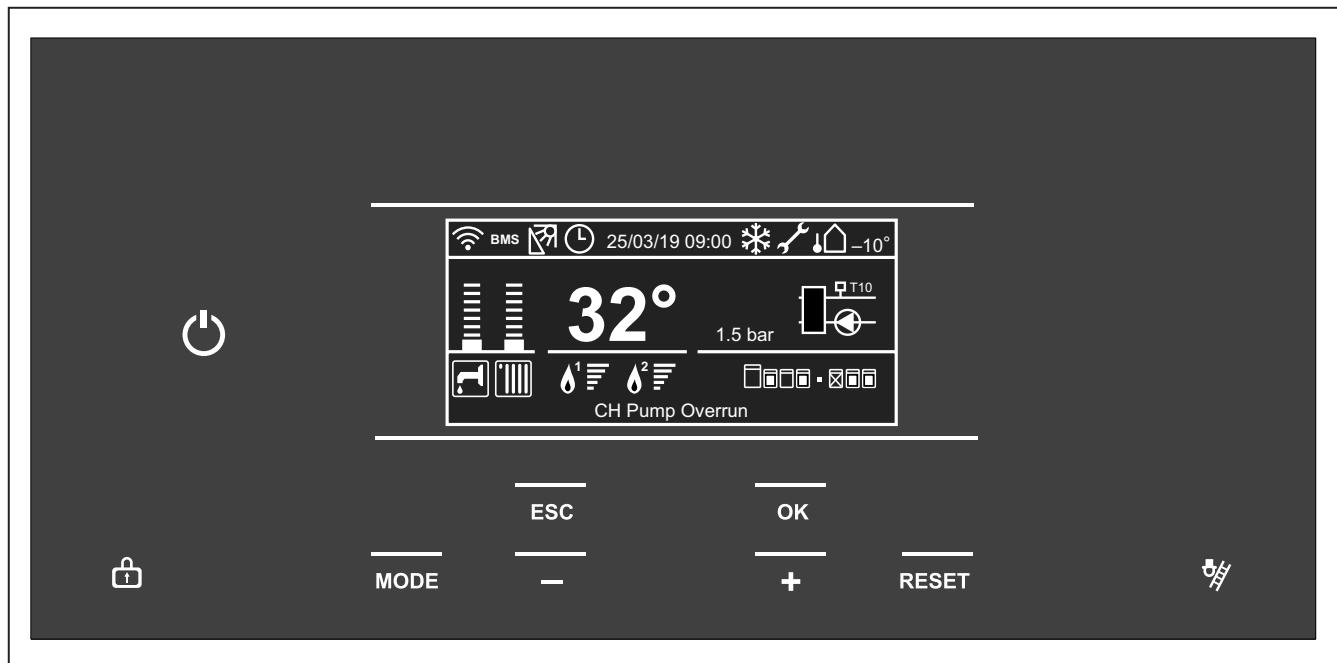

The keyboard consists of a logical button allocation for menu control, confirmation, and correction and emission measurement.

* Reset only functions in case of an Error or Message.

Recommendation: First identify the fault by finding the fault code in the fault-code list in the problem-shooting chapter and solve the problem.

The main switch is located on top of the boiler between the air supply and the flue connection. This switch controls the 230V power supply (L and N).

Description of the keyboard:

	Power button
	Display lock/unlock
	Mode
	Escape / back / correction
	Value decrease / down / left
	Value increase / up / right
	Confirm selection
	Reset
	Chimney sweeper mode

Operation

Structure of the User Menu

The device functions are divided into three levels, depending on their importance and the frequency of their use.

- 1 Home screen
- 2 Basic settings menu
- 3 Complete menu

Home screen


This menu is used to display the operating status of the system and to set the desired room temperature by simply turning the knob.

Basic settings menu

In this menu, the main functions can be accessed by selecting the manual or programming and operating mode (summer/winter/off).


Complete menu

This menu can be used to access all main system parameters and set/adjust the time program and home screen.

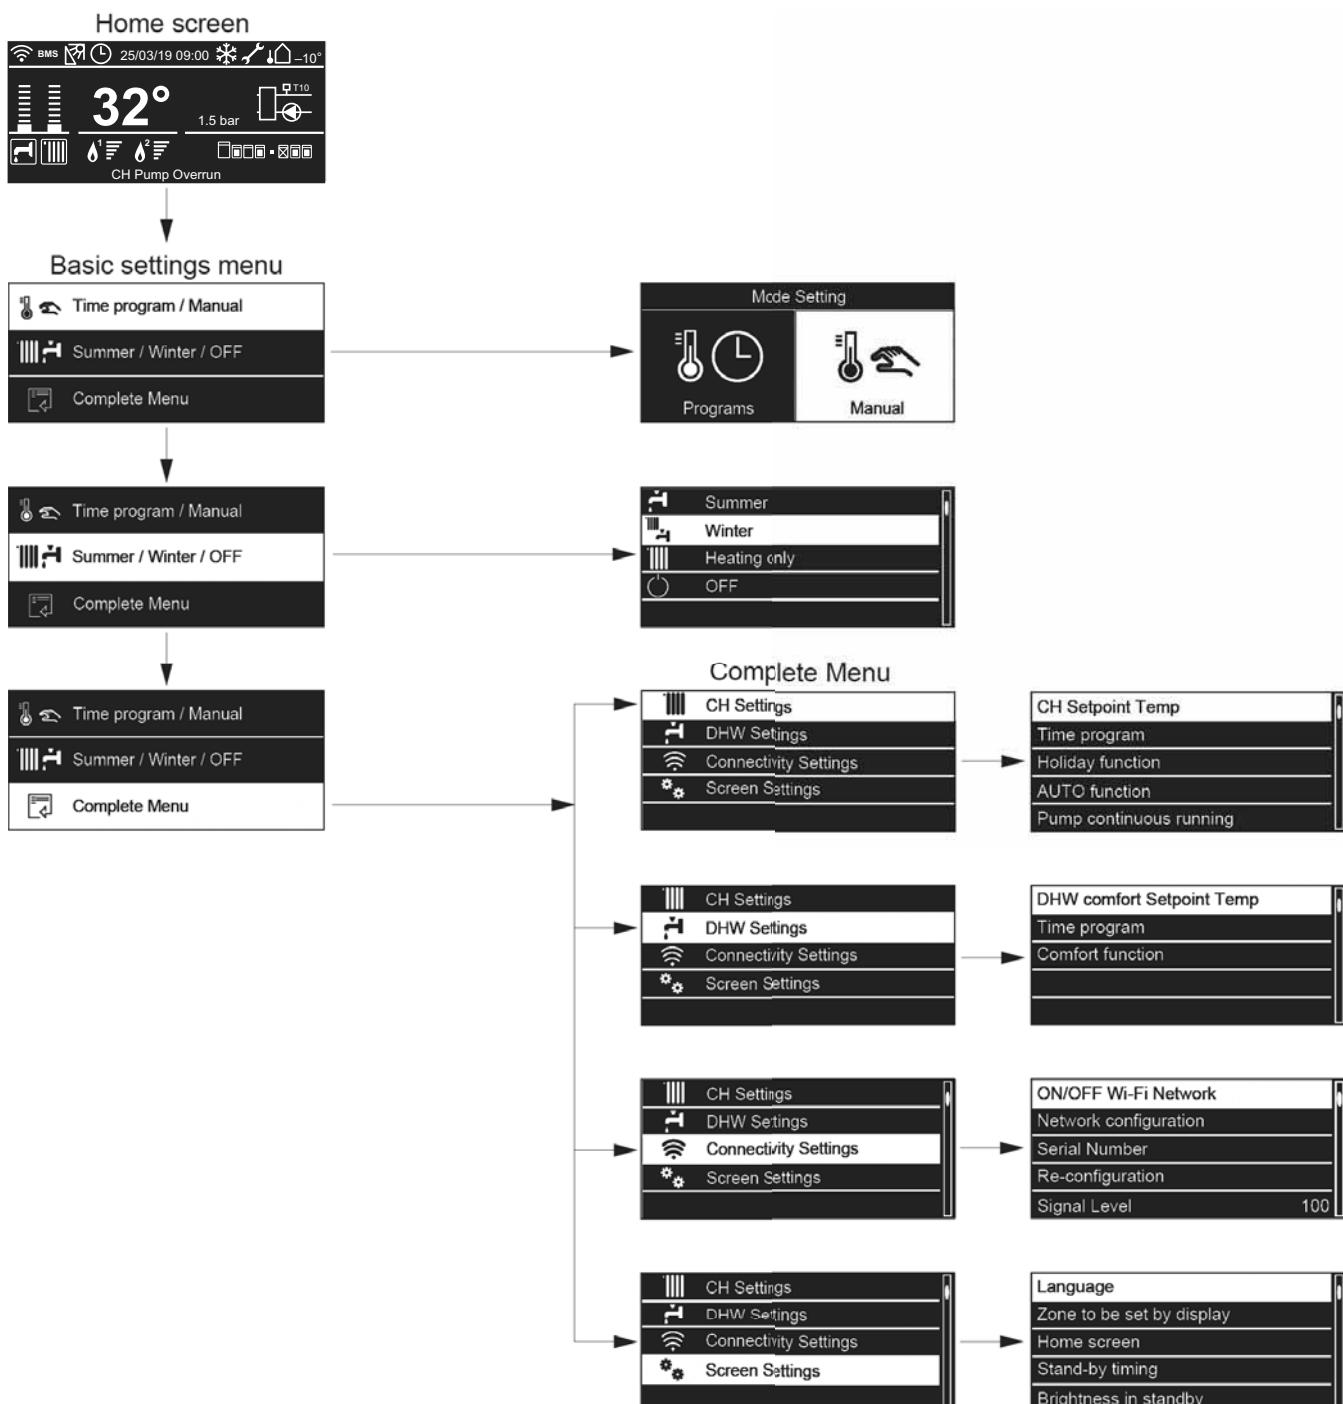

Operation

Change the settings (expert level)

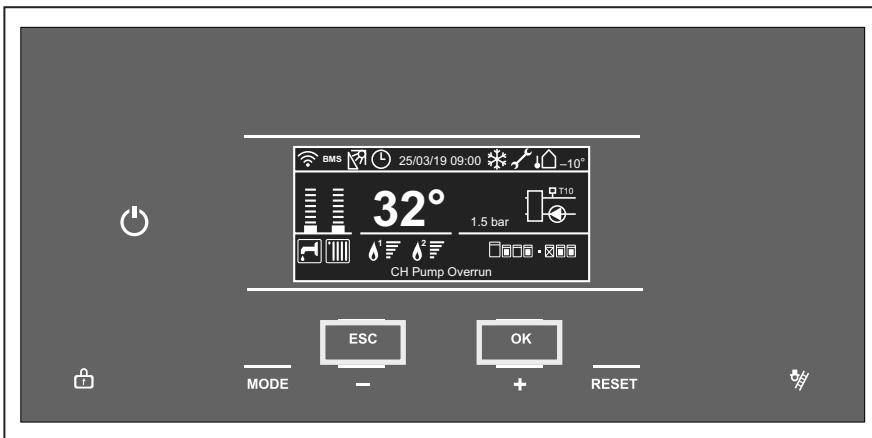


The settings are accessible through a code.


- 1 From the controller Home screen, press the **ESC** and **OK** buttons at the same time for 7 seconds.



- 2 Use “+” to go down and “–” to go up to highlight **007** as the Technical Code. Press **OK**.

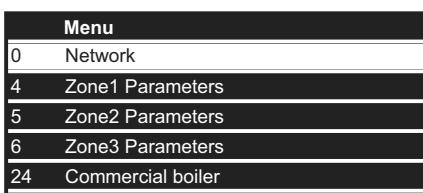

- 3 Use “+” to go down and “–” to go up to highlight **Complete Menu**. Press **OK**. It is now loading the menu.

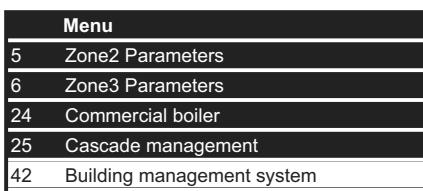

The screen left appears.

This way you have access to the complete parameter level.

In the table hereafter you will find a complete overview of all available Parameters


Operation

Parameter listing

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
0 NETWORK						
0. 2 BUS Network						
0.	2.	0	Network Presence	Indication of devices connected via BUS	Boiler Remote Modem OpenTherm Gateway	1
0. 4 User interface						
0.	4.	0	Zone to be set by display		1 - 3	1
0.	4.	1	Backlight timing		1 min - 24 hours	10 min
0.	4.	3	Time Program service type	Select the time program service type according to Ebus devices present in your network	0 = Time programs 1 = Extended time programs	0
0.	4.	4	Reset System Interfce	OK = Yes, BACK = No		
4 Zone1 Parameters						
4. 0 Setpoint						
4.	0.	0	T Day	Room temperature set point for day period	10 - 30 (°C)	20
4.	0.	1	T Night	Room temperature set point for night period	10 - 30 (°C)	15
4.	0.	2	T set Z1	Temperature setpoint zone 1 (Limited by Para 4.2.5 and Para 4.2.6)	40°C - 82°C 20°C - 45°C	75 20
4.	0.	3	Zone frost temperature		2 - 15 (°C)	5
4. 1 Summer/Winter Changeover						
4.	1.	0	S/W function activation	0 = OFF, 1 = ON (only active when outside temperature influence)	0 - 1	0
4.	1.	1	S/W temperature threshold		0 - 30 (°C)	15
4.	1.	2	S/W delay time	Time before S/W changeover becomes active	0 - 300 (min)	30
4. 2 Zone1 Settings						
4.	2.	0	Zone temperature range	0 = Low Temp (LT) 1 = High Temp (HT)	0 - 1	1
4.	2.	1	Thermoregulation	0 = Fix Flow T 1 = Basi Thermoreg 2 = Room T Only 3 = Outdoor T Only 4 = Room+Outdoor T	0 - 4	0

Operation

Parameter listing

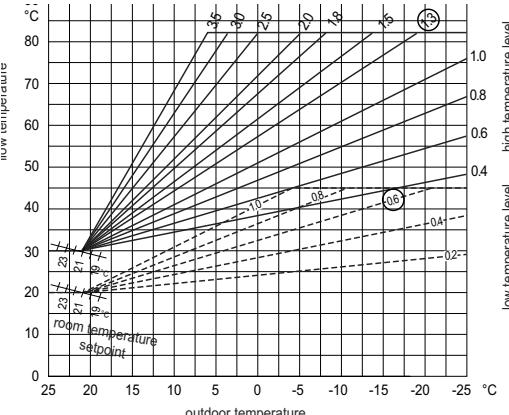Menu	Submenu	Parameter	Name	Description	Range	Factory settings
4.	2.	2	Slope		LT: From 0.2 - 1.0 HT: From 1.0 - 3.5	0.6LT 1.3HT
			Increase setting: Increases the flow temperature, especially at low outside temperatures. Reduce setting: Reduces the flow temperature, especially at low outside temperatures.			
4.	2.	3	Offset	Offset heating line adjustable per °C	LT: From -7°C to +7°C HT: From -14°C to +14°C	0 0
4.	2.	4	Room influence proportional	Only visible on the boiler if a room sensor is connected		LT=2 HT=4
4.	2.	5	Max T	Zone 1 Maximum Flow Temperature	LT: From 20°C to 45°C HT: From 20°C to 85°C	45°C 85°C
4.	2.	6	Min T	Zone 1 minimum Flow Temperature	LT: From 20°C to 45°C HT: From 20°C to 85°C	25°C 20°C
4.	2.	7	Thermo regulation logic	0 = OFF, 1 = ON	0 - 1	0
4.	2.	8	Quick night setback	0 = OFF, 1 = ON	0 - 1	0
4.	2.	9	Heat request mode	0 = Standard 1 = RT Time Programs Exclusion 2 = Forcing Heat Demand	0 - 2	0
4.	3	Zone1 Diagnostics				
4.	3.	4	Heat Request Z1	0 = OFF, 1 = ON		
4.	3.	9	Heating rate	0 = OFF, 1 = ON		
5	Zone2 Parameters (see Zone1, chapter 4)					
6	Zone3 Parameters (see Zone1, chapter 4)					
20.	Buffer					
20.	0.	Configuration				
20.	0.	0	Buffer Activation	0 = UIT, 1 = AAN	0 - 1	0
20.	0.	1	Buffer charge mode	0 = Not defined 1 = Partial charge 2 = Full charge	0 - 2	0
20.	0.	2	Buffer hysteresis	Buffer hysteresis	0 °C - 20 °C	5
20.	0.	3	Buffer heating Comfort setpoint temperature	Buffer heating Comfort setpoint temperature	20 °C - 70 °C	40

Operation

Parameter listing

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
20.	0.	4	Buffer cooling Comfort setpoint temperature	Buffer cooling Comfort setpoint temperature	5 °C - 23 °C	18
20.	0.	7	Buffer SP Type	0 = Fixed 1 = Variable	0 - 1	0
20.	0.	8	Buffer hysteresis cooling	Buffer hysteresis cooling	0 °C - 20 °C	5
24 Commercial Boiler						
24.	0		General			
24.	0.	2	Maximum Water temp		20 - 95 °C	95
24.	0.	3	Max CH Adjustable		0 - 100 %	100
24.	0.	4	Fan inc percentage		4 - 400 %	4
24.	0.	5	Altitude		0 - 3000 m	0
			Boiler tank solar integration 0 = Absent 1 = Present		0 - 1	0
24.	0.	7	Emergency setpooint		20 - 90 °C	45
24.	3.		Water Circulation			
24.	3.	0	Max PWM Pump		61 - 95 %	95
24.	3.	1	Min PWM Pump		20 - 95 %	46
24.	3.	2	CH pump overrun		0 - 10 min.	5
24.	4.		System Setting			
24.	4.	0	Thermoregulation			
			0 = OFF 1 = ON		0 - 1	1
24.	4.	1	External temperature correction		-3 tot 3 °C	0
24.	4.	2	Boost time		0 - 60 min	0
24.	4.	3	Plant frost protection			
			0 = OFF 1 = ON		0 - 1	0
24.	4.	4	T Gradient		0 - 15 °C	5
24.	4.	5	System Pump Overrun		0 - 255 min	5
24.	4.	6	System pump activation logic			
			0 = Always active 1 = Heating only		0 - 1	0
24.	4.	7	System tank solar integration			
			0 = Absent 1 = Present		0 - 1	0
24.	5.		Domestic Hot Water			
24.	5.	0	DHW Setpoint Temperature		40 - 65 °C	65
24.	5.	1	Comfort Function			
			0 = Disabled 1 = Time Based 2 = Always Active		0 - 2	0
24.	5.	2	System DHW Mode			
			0 = CH Only 1 = Storage with NTC 2 = Storage with Thermostat		0 - 2	0
24.	5.	3	Boiler DHW Mode			
			0 = CH Only 1 = Storage with NTC 2 = Storage with Thermostat		0 - 2	0

Operation

Parameter listing

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
24.	5.	4	Anti-legionella Function	0 = OFF, 1 = ON	0	
			0 = OFF 1 = ON			
24.	5.	5	Boiler DHW charge mode	0 - 2	0	
			0 = Charge 1 = Full charge 2 = Full charge Legio			
24.	5.	6	System DHW charge mode	0 - 2	0	
			0 = Charge 1 = Full charge 2 = Full charge Legio			
24.	5.	7	Boiler DHW Circulating Pump Release	0 - 2	0	
			0 = Release 1 = Time Program 2 = Special Time Program			
24.	6	Configurable Inputs-Outputs				
24.	6.	0	Multi In Temp 1			
			0 = None 1 = Common flow sensor 2 = DHW storage tank bottom 3 = DHW circulation sensor 4 = DHW charging sensor 5 = Buffer storage tank top 6 = Buffer storage tank bottom 7 = Flue gas temp sensor	0 - 7	1	
24.	6.	1	Multi In Temp 2			
			0 = None 1 = Common flow sensor 2 = DHW storage tank bottom 3 = DHW circulation sensor 4 = DHW charging sensor 5 = Buffer storage tank top 6 = Buffer storage tank bottom 7 = Flue gas temp sensor	0 - 7	0	
24.	6.	2	Multi In Temp 3			
			0 = None 1 = Common flow sensor 2 = DHW storage tank bottom 3 = DHW circulation sensor 4 = DHW charging sensor 5 = Buffer storage tank top 6 = Buffer storage tank bottom 7 = Flue gas temp sensor	0 - 7	0	
24.	6.	3	Multi In Freq			
			0 = None 1 = Flowmeter 2 = Flow switch	0 - 2	0	

Operation

Parameter listing

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
24.	6.	4	Multi In AD 1			
			0 = None 1 = Room thermostat HC1 2 = Room thermostat HC2 3 = Room thermostat HC3 4 = 0-10V input request 5 = External operating mode changeover HCs+DHW 6 = Heat generation lock 7 = Timer CH 8 = Gas Pressure Switch	0 - 8		0
24.	6.	5	Multi In AD 2			
			0 = None 1 = Room thermostat HC1 2 = Room thermostat HC2 3 = Room thermostat HC3 4 = 0-10V input request 5 = External operating mode changeover HCs+DHW 6 = Heat generation lock 7 = Flue gas damper feedback 8 = Pressure Switch	0 - 8		0
24.	6.	6	Multi In AD 3			
			0 = None 1 = Room thermostat HC1 2 = Room thermostat HC2 3 = Room thermostat HC3 4 = 0-10V input request 5 = External operating mode changeover HCs+DHW 6 = Heat generation lock 7 = Flue gas damper feedback 8 = Pressure Switch	0 - 8		0
24.	6.	7	Multi In AD 4			
			0 = None 1 = Room thermostat HC1 2 = Room thermostat HC2 3 = Room thermostat HC3 4 = 0-10V input request 5 = External operating mode changeover HCs+DHW 6 = Heat generation lock 7 = Flue gas damper feedback 8 = Pressure Switch	0 - 8		0
24.	7		Configurable Inputs-Outputs 2			
24.	7.	0	Multi Out HV			
			0 = None 1 = System pump 2 = HC1 Pump 3 = Circulating pump 4 = DHW intermediate circuit pump 5 = BUF filling pump 6 = Storage tank transfer pump 7 =Heat gen shutoff valve 8 = Heat request	0 - 8		1

Operation

Parameter listing

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
24.	7.	1	Free Contact 1	0 = None 1 = System pump 2 = HC1 Pump 3 = Circulating pump 4 = DHW intermediate circuit pump 5 = BUF filling pump 6 = Storage tank transfer pump 7 = Heat gen shutoff valve 8 = Heat request 9 = Alarm output 10 = Flue Gas Dumper 11 = Lpg/Room Supply Fan	0 - 11	0
24.	7.	2	Free Contact 2	0 = None 1 = Heat gen shutoff valve 2 = Heat request 3 = Alarm output 4 = Lpg/Room Supply Fan	0 - 4	0
24.	7.	3	Free Contact 3	0 = None 1 = Heat gen shutoff valve 2 = Heat request 3 = Alarm output 4 = Lpg/Room Supply Fan	0 - 4	0
24.	7.	4	Multi Out PWM 1	0 = None 1 = System pump modulator 2 = DHW Pump modulator 3 = Circulating pump modulator 4 = BUF filling pump modulator 5 = boiler power feedback	0 - 5	1
24.	7.	5	Multi Out PWM 2	0 = None 1 = System pump modulator 2 = DHW Pump modulator 3 = Circulating pump modulator 4 = BUF filling pump modulator 5 = boiler power feedback	0 - 5	0
24.	8		Boiler manual settings			
24.	8.	0	Manual mode activation	OFF ON	0 - 1	0
24.	8.	1	Boiler pump control	OFF ON	0 - 1	0

Operation

Parameter listing

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
24.	8.	2	Fan control			
			0 = OFF 1 = ON		0 - 1	0
24.	8.	3	Boiler pump control 2nd Engine			
			0 = OFF 1 = ON		0 - 1	0
24.	8.	4	Fan control 2nd Engine			
			0 = OFF 1 = ON		0 - 1	0
24.	8.	5	Diverter valve control			
			0 = OFF 1 = ON		0 - 1	0
24.	8.	6	Multi-Functional Output 1			
			0 = OFF 1 = ON		0 - 1	0
24.	8.	7	Free Contacts 1,2,3			
			0 = OFF 1 = ON		0 - 1	0
24.	9		Test and Utilities			
24.	9.	0	Test mode			
			0 = OFF 1 = ON		0 - 1	0
24.	9.	1	Air-purge function			
			0 = OFF 1 = ON		0 - 1	0
24.	9.	2	Force Backup			
			0 = OFF 1 = ON		0 - 1	0
24.	9.	3	Force Restore			
			0 = OFF 1 = ON		0 - 1	0
24.	10		Engine 1 diagnostics			
24.	10.	0	Fan Speed		rpm	
24.	10.	1	Pump Modulation %		%	
24.	10.	2	Ionization current		uA	
24.	10.	3	SAFETY Flame presence			
24.	10.	4	CH Flow T		°C	
24.	10.	5	CH Flow2 T		°C	
24.	10.	6	CH Return T		°C	
24.	10.	7	Pump Flow Rate		l/h	
24.	10.	8	Gas Power		kW	

Operation

Parameter listing

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
24. 11 Engine 2 diagnostics						
24.	11.	0	Fan Speed		rpm	
24.	11.	1	Pump Modulation %		%	
24.	11.	2	Ionization current		uA	
24.	11.	3	SAFETY Flame presence			
24.	11.	4	CH Flow T		°C	
24.	11.	5	CH Flow2 T		°C	
24.	11.	6	CH Return T		°C	
24.	11.	7	Pump Flow Rate		l/h	
24.	11.	8	Gas Power		kW	
24. 12 Boiler Diagnostics						
24.	12.	0	Flue Gas T		°C	
24.	12.	1	Diverter Valve Pos			
			Hot Water Central Heating			
24.	12.	2	Heating Circuit Pressure		bar	
24.	12.	3	Boiler Power level		%	
24.	12.	4	Storage Temperature - High		°C	
24.	12.	5	Storage Temperature - Low		°C	
24.	12.	6	Boiler Status			
24. 13 System Diagnostics						
24.	13.	0	CH Flow Set T		°C	
24.	13.	1	System Flow T		°C	
24.	13.	2	Outdoor T		°C	
24.	13.	3	Storage Temperature - High		°C	
24.	13.	4	Storage Temperature - Low		°C	
24.	13.	5	System Pump Status			
24.	13.	6	DHW Pump Status			
24. 14 Engine 1 Statistics						
24.	14.	0	Number Of Ignition Cycles (n x10)			
24.	14.	1	Hours Burner On (h x10)			
24.	14.	2	Number of boiler circulator cycles (n x10)			
24.	14.	3	Time of circulator on (h x 10)			
24.	14.	4	Number of fan cycles (n x10)			
24.	14.	5	Time of fan ON (h x 10)			
24.	14.	6	Number Of Flame Faults (n x10)			

Operation

Parameter listing

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
24.	15		Engine 2 Statistics			
24.	15.	0	Number Of Ignition Cycles (n x10)			
24.	15.	1	Hours Burner On (h x10)			
24.	15.	2	Number of boiler circulator cycles (n x10)			
24.	15.	3	Time of circulator on (h x 10)			
24.	15.	4	Number of fan cycles (n x10)			
24.	15.	5	Time of fan ON (h x 10)			
24.	15.	6	Number Of Flame Faults (n x10)			
24.	16		Boiler Statistics			
24.	16.	0	Boiler Life Time (h x 10)			
24.	16.	1	Hours Burner On CH (h x10)			
24.	16.	2	Hours Burner On DHW (h x10)			
24.	16.	3	Number of diverter valve cycles (n x10)			
24.	16.	4	Heat Req Duration (h x 10)		min	
24.	17		Service			
24.	17.	0	Months to Next Maintenance		0 - 60	12
24.	17.	1	Mainten On Days Act 0 = OFF 1 = ON		0 - 1	0
24.	17.	2	Maint Warn Reset Reset? OK=Yes,esc=No			
24.	17.	3	SW Version Interface			
24.	17.	4	SW Version Main			
24.	17.	5	SW Version BHE2		To create	
24.	18		Error History			
24.	18.	0	Last 10 Errors			
24.	18.	1	Reset Error List Reset? OK=Yes,esc=No			
24.	19		Reset Menu			
24.	19.	0	Reset Factory Settings Reset? OK=Yes,esc=No			
24.	20		Other			
24.	20.	0	DHW modulation setpoint		50 - 82	70
25.			Cascade Management			
25.	0		General			
25.	0.	0	Max CH Adjustable Power perc		0 - 100%	100
25.	0.	1	Max DHW Adjustable Power perc		0 - 100%	100
25.	0.	2	Cascade Turnover Logic 0 = Minimum Switches Off-On 1 = Maximum Power Division		0 - 1	0
25.	0.	3	Turnover Hysteresis		0 - 20%	5
25.	0.	4	Min Turnover Level		0 - 100%	35

Operation

Parameter listing

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
25.	0.	5	Max Turnover Level		0 - 100%	75
25.	0.	6	Maximum Water temp		20 - 95°C	95
25.	0.	7	CH differential temperature		0 - 20°C	0
25.	0.	8	CH/DHW shifting priority time		0 - 65535min.	0
25.	1		System Settings			
25.	1.	0	Thermoregulation			
			0 = OFF 1 = ON		0 - 1	1
25.	1.	1	External temperature correction		-3 - 3°C	0
25.	1.	2	Boost Time		0 - 60min.	0
25.	1.	3	Plant frost protection			
			0 = OFF 1 = ON		0 - 1	0
25.	1.	4	T Gradient		0 - 15°C	5
25.	1.	5	System Pump Overrun		0 - 255min.	5
25.	1.	6	System pump activation logic			
			0 = Always active 1 = Heating only		0 - 1	0
25.	1.	7	System tank solar integration			
			0 = Absent 1 = Present		0 - 1	0
25.	2		Domestic Hot Water			
25.	2.	0	DHW Setpoint Temperature		40 - 65°C	65
25.	2.	1	Comfort Function			
			0 = Disabled 1 = Time Based 2 = Always Active		0 - 2	0
25.	2.	2	System DHW Mode			
			0 = CH Only 1 = DHW Tank NTC 2 = DHW Tank Thermostat		0 - 2	0
25.	2.	3	Anti-legionella Function			
			0 = OFF 1 = ON		0 - 1	0
25.	2.	4	System DHW charge mode			
			0 = Charge 1 = Full charge 2 = Full charge Legio		0 - 2	0
25.	2.	5	System DHW Circulating Pump Release			
			0 = Release 1 = Time Program 2 = Special Time Program		0 - 2	0
25.	2.	6	System DHW Charging Priority			
			0 = Absolute 1 = Shifting 2 = None		0 - 2	0

Operation

Parameter listing

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
25.	3		System Diagnostics			
25.	3.	0	CH Flow Set T		°C	
25.	3.	1	System Flow T		°C	
25.	3.	2	Outdoor T		°C	
25.	3.	3	Storage Temperature - High		°C	
25.	3.	4	Storage Temperature - Low		°C	
25.	3.	5	System Pump Status			
25.	3.	6	DHW Pump Status			
25.	4		Cascade Diagnostics			
25.	4.	0	Cascade Power level		%	
25.	4.	1	Total Boilers			
25.	4.	2	Available Boilers			
25.	4.	3	Active Boilers			
25.	4.	4	Cascade Status			
25.	5		Error History			
25.	5.	0	Last 10 Errors			
25.	5.	1	Reset Error List			
			Reset? OK=Yes,esc=No			
25.	6		Reset Menu			
25.	6.	0	Reset Factory Settings			
			Reset? OK=Yes,esc=No			

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
26..32.		Commercial Boiler - Slave 1..				
26..32.	0		General			
26..32.	0.	0	Engines Number			
26..32.	0.	2	Maximum Water temp		°C	95
26..32.	0.	3	Max CH Adjustable		%	100
26..32.	0.	4	Fan inc percentage			4
26..32.	0.	5	Altitude		m	0
26..32.	0.	6	Boiler tank solar integration			0
26..32.	0.	7	Emergency setpoint		°C	45
26..32.	3		Water Circulation			
26..32.	3.	0	Max PWM Pump		%	95
26..32.	3.	2	Min PWM Pump		%	45
26..32.	3.	3	CH pump overrun		min	5

Operation

Parameter listing

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
26..32.	4		System Setting			
26..32.	4.	0	Thermoregulation			
			0 = OFF 1 = ON		0 - 1	0
26..32.	4.	1	External temperature correction T7		-3 tot 3 °C	0
26..32.	4.	2	Boost time		0 - 60 min	0
26..32.	4.	3	Plant frost protection			
			0 = OFF 1 = ON		0 - 1	0
26..32.	4.	4	T Gradient		0 - 15 °C	5
26..32.	4.	5	System Pump Overrun		0 - 255 min	5
26..32.	4.	6	System tank solar integration			
			0 = Absent 1 = Present		0 - 1	0
26..32.	4.	7	CH/DHW shifting priority time			0
26..32.	5		Domestic Hot Water			
26..32.	5.	0	DHW Setpoint Temperature		40 - 65°C	65
26..32.	5.	1	Comfort Function			
			0 = Disabled 1 = Time Based 2 = Always Active		0 - 2	0
26..32.	5.	2	System DHW Mode			
			0 = CH Only 1 = DHW Tank NTC 2 = DHW Tank Thermostat		0 - 2	0
26..32.	5.	3	Boiler DHW Mode			
			0 = CH Only 1 = DHW Tank NTC 2 = DHW Tank Thermostat		0 - 2	0
26..32.	5.	4	Anti-legionella Function			
			0 = OFF 1 = ON		0 - 1	0
26..32.	5.	5	Boiler DHW Charging Type			
			0 = Recharging 1 = Full charging 2 = Full charging Legio		0 - 2	0
26..32.	5.	6	System DHW Charging Type			
			0 = Recharging 1 = Full charging 2 = Full charging Legio		0 - 2	0
26..32.	5.	7	Boiler DHW Circulating Pump Release			
			0 = Release 1 = Time Programs 2 = Circ Pump special Time Programs		0 - 2	0
26..32.	5.	8	System DHW Circulating Pump Release			
			0 = Release 1 = Time Programs 2 = Circ Pump special Time Programs		0 - 2	0

Operation

Parameter listing

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
26..32.	0	Commercial Boiler - Slave 1..				
26..32.	0	General				
26..32.	0.	0	Engines Number			
26..32.	0.	2	Maximum Water temp	°C	95	
26..32.	0.	3	Max CH Adjustable	%	100	
26..32.	0.	4	Fan inc percentage		4	
26..32.	0.	5	Altitude	m	0	
26..32.	0.	6	Boiler tank solar integration		0	
26..32.	0.	7	Emergency setpoint	°C	45	
26..32.	3	Water Circulation				
26..32.	3.	0	Max PWM Pump	%	95	
26..32.	3.	2	Min PWM Pump	%	45	
26..32.	3.	3	CH pump overrun	min	5	
26..32.	5	Domestic Hot Water				
26..32.	5.	0	DHW Setpoint Temperature	40 - 65°C	65	
26..32.	5.	1	Comfort Function 0 = Disabled 1 = Time Based 2 = Always Active	0 - 2	0	
26..32.	5.	2	System DHW Mode 0 = CH Only 1 = DHW Tank NTC 2 = DHW Tank Thermostat	0 - 2	0	
26..32.	5.	3	Boiler DHW Mode 0 = CH Only 1 = DHW Tank NTC 2 = DHW Tank Thermostat	0 - 2	0	
26..32.	5.	4	Anti-legionella Function 0 = OFF 1 = ON	0 - 1	0	
26..32.	5.	5	Boiler DHW Charging Type 0 = Recharging 1 = Full charging 2 = Full charging Legio	0 - 2	0	
26..32.	5.	6	System DHW Charging Type 0 = Recharging 1 = Full charging 2 = Full charging Legio	0 - 2	0	
26..32.	5.	7	Boiler DHW Circulating Pump Release 0 = Release 1 = Time Programs 2 = Circ Pump special Time Programs	0 - 2	0	

Operation

Parameter listing

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
26..32.	10			Engine 1 diagnostics		
26..32.	10.	0	Fan Speed		rpm	
26..32.	10.	1	Pump Modulation %		%	
26..32.	10.	2	Ionization current		uA	
26..32.	10.	3	SAFETY Flame presence			
26..32.	10.	4	CH Flow T		°C	
26..32.	10.	5	CH Flow T 2A		°C	
26..32.	10.	6	CH Return T		°C	
26..32.	10.	7	Pump Flow Rate		l/h	
26..32.	10.	8	Gas Power		kW	
26..32.	11			Engine 1 diagnostics		
26..32.	11.	0	Fan Speed		rpm	
26..32.	11.	1	Pump Modulation %		%	
26..32.	11.	2	Ionization current		uA	
26..32.	11.	3	SAFETY Flame presence			
26..32.	11.	4	CH Flow T		°C	
26..32.	11.	5	CH Flow T 2A		°C	
26..32.	11.	6	CH Return T		°C	
26..32.	11.	7	Pump Flow Rate		l/h	
26..32.	11.	8	Gas Power		kW	
26..32.	12			Boiler Diagnostics		
26..32.	12.	0	Flue Gas T		°C	
26..32.	12.	1	Diverter Valve Pos			
			Hot Water Central Heating			
26..32.	12.	2	Heating Circuit Pressure		bar	
26..32.	12.	3	Boiler Power level		%	
26..32.	12.	4	Storage Temperature - High		°C	
26..32.	12.	5	Storage Temperature - Low		°C	
26..32.	12.	6	Boiler Status			
26..32.	13			System Diagnostics		
26..32.	13.	0	CH Flow Set T		°C	
26..32.	13.	1	System Flow T		°C	
26..32.	13.	2	Outdoor T		°C	
26..32.	13.	3	Storage Temperature - High		°C	

Operation

Parameter listing

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
26..32.	13.	4	Storage Temperature - Low		°C	
26..32.	13.	5	System Pump Status			
26..32.	13.	6	DHW Pump Status			
26..32.	14		Engine 1 Statistics			
26..32.	14.	0	Number Of Ignition Cycles (n x10)			
26..32.	14.	1	Hours Burner On (h x10)		h x10	
26..32.	14.	2	Number of boiler circulator cycles (n x10)			
26..32.	14.	3	Time of circulator on (h x 10)			
26..32.	14.	4	Number of fan cycles (n x10)			
26..32.	14.	5	Time of fan ON (h x 10)			
26..32.	14.	6	Number Of Flame Faults (n x10)			
26..32.	15		Engine 2 Statistics			
26..32.	15.	0	Number Of Ignition Cycles (n x10)			
26..32.	15.	1	Hours Burner On (h x10)		h x10	
26..32.	15.	2	Number of boiler circulator cycles (n x10)			
26..32.	15.	3	Time of circulator on (h x 10)			
26..32.	15.	4	Number of fan cycles (n x10)			
26..32.	15.	5	Time of fan ON (h x 10)			
26..32.	15.	6	Number Of Flame Faults (n x10)			
26..32.	16		Boiler Statistics			
26..32.	16.	0	Boiler Life Time (h x 10)			
26..32.	16.	1	Hours Burner On CH (h x10)		h x10	
26..32.	16.	2	Hours Burner On DHW (h x10)		h x10	
26..32.	16.	3	Number of diverter valve cycles (n x10)			
26..32.	16.	4	Heat Req Duration (h x 10)		min	
26..32.	17		Service			
26..32.	17.	0	Months to Next Maintenance		0 - 60	12
26..32.	17.	1	Mainten On Days Act			
			0 = OFF 1 = ON		0 - 1	0
26..32.	17.	2	Maint Warn Reset			
			Reset? OK=Yes,esc=No			
26..32.	17.	3	SW Version Interface			
26..32.	17.	4	SW Version Main			
26..32.	17.	5	SW Version BHE2			
26..32.	18		Error History			
26..32.	18.	0	Last 10 Errors			
26..32.	18.	1	Reset Error List			
			Reset? OK=Yes,esc=No			
26..32.	19		Reset Menu			
26..32.	19.	0	Reset Factory Settings			
			Reset? OK=Yes,esc=No			

Operation

Parameter listing

Menu	Submenu	Parameter	Name	Description	Range	Factory settings
26..32.	20		Other			
26..32.	20.	0	DHW modulation setpoint	°C		
42			Building Management System			
42.	0		General			
42.	0.	0	BMS Control Mode			
			Disabled			
			Voltage Power			
			Voltage Temp			
			Current Power			
			Current Temp			
			External Controller Power			
			External Controller Temp			
42.	0.	1	BMS Max Temp	°C		
42.	0.	1	BMS Min Temp	°C		
42.	1		Analog Level Settings			
42.	1.	0		V		
42.	1.	1	BMS Analog Control Voltage to Stop Heat Demand	V		
42.	1.	2	BMS Analog Control Voltage for Maximum Heat Demand	V		
42.	1.	3	BMS Analog Control Voltage for Minimum Heat Demand	V		
42.	1.	4	BMS Analog Control Current to Start Heat Demand	mA		
42.	1.	5	BMS Analog Control Current to Stop Heat Demand	mA		
42.	1.	6	BMS Analog Control Current for Maximum Heat Demand	mA		
42.	1.	7	BMS Analog Control Current for Minimum Heat Demand	mA		
42.	2		Diagnostics			
42.	2.	0	BMS Status			
			Absent			
			Disabled			
			OFF			
			Standby			
			Heat Request			
			Config Error			
42.	2.	1	BMS Level	%		
42.	2.	2	BMS SetPoint	°C		
42.	2.	3	BMS Input Voltage	V		
42.	2.	4	BMS Input Current	mA		

Operation

Detail parameter description

Date and time

DHW preheating

Date and time

The control unit is equipped with a 365-day clock that displays day, month, year and time. To ensure correct boiler operation when using time programs, the date and time must be set correctly. If the boiler is connected to the App via Wifi, the Internet time is automatically taken over.

Hot water preheating function (comfort function)

This parameter allows the end user to select the hot water comfort. The higher the comfort, the higher the energy consumption.

- OFF: The boiler starts to heat the hot water only in the case of a tap
- TIME: after each tapping, the boiler maintains the comfort temperature for 30 minutes
- ON: Boiler keeps hot water 365 / 24h at the desired comfort temperature.

Time program Comfort function

DHW

Five different pre-defined time programs are available for DHW heating. These programmes are

activated when DHW preheating is set to "TIME". The programs control the DHW set point for the various switching times. Outside these time windows, hot water preheating is deactivated.

0-24h	Mo-So	00:00 – 24:00		
P1 Family program	Mo-Do	06:00 – 22:00		
	Fr-Sa	06:00 – 23:00		
	So	07:00 – 22:00		
P2 Program without noon	Mo-Do	06:00 – 08:00	16:00 – 22:00	
	Fr	06:00 – 08:00	15:00 – 23:00	
	Sa	07:00 – 23:00		
	So	08:00 – 22:00		
P3 Program with lunch	Mo-Do	06:00 – 08:00	11:30 – 13:00	16:00 – 22:00
	Fr	06:00 – 08:00	11:30 – 23:00	
	Sa	06:00 – 23:00		
	So	07:00 – 22:00		
6-22h	Mo-Do	06:00 – 22:00		

Operation

Function Thermoregulation Room temperature day / night

Function Thermoregulation

see Complete Menu activation of automatic heating temperature control (AUTO function). This function allows the heating operation to be adapted to external environmental conditions and to the type of system in which it is installed.

This allows to easily achieve high comfort without unnecessary waste of money, energy and efficiency and helps to significantly reduce the wear of the components.

Contact a qualified technician to inform you about the device and then program the system to meet your needs.



Thermoregulation OFF:

The boiler operates and provides a constant flow temperature. The burner modulates according to system load. This is achieved by monitoring the system return temperature.

Thermoregulation ON:

One outdoor sensor and/or a room sensor (accessories) detect changes the outside or room temperature. The controller calculates the correct flow temperature in order to achieve the desired room temperature level (e.g. 21 °C) to hold. This allows highest comfort and energy saving.

If a room thermostat or Room sensor (accessory) is used the boiler switches in both cases (ON/OFF) according to the current Room temperature on / off.

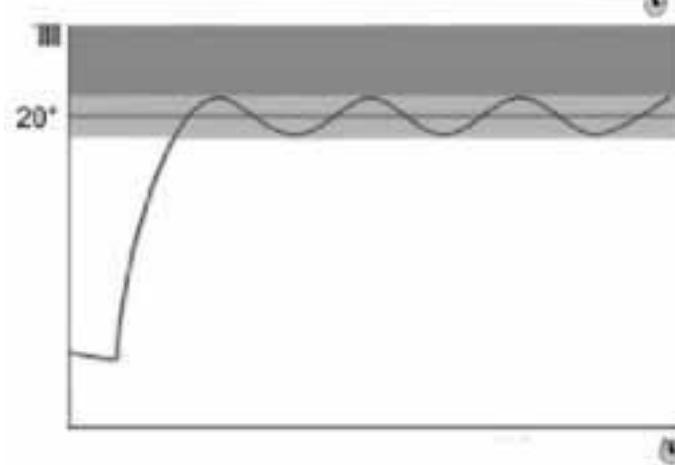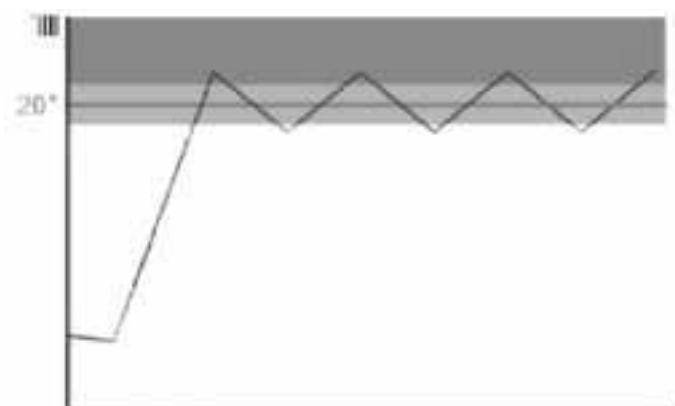


Room temperature day / night

The room temperatures (all zones 1-3) can be set to different setpoints. These setpoints become effective with the selected operating mode and the time program, so that different temperature levels can occur in each zone.

The bandwidth of the adjustable target values is limited by their interdependence, which can be seen in the accompanying graphic.

Day setpoint (comfort),
factory setting 21 °C
Night setpoint (reduced),
factory setting 16 °C

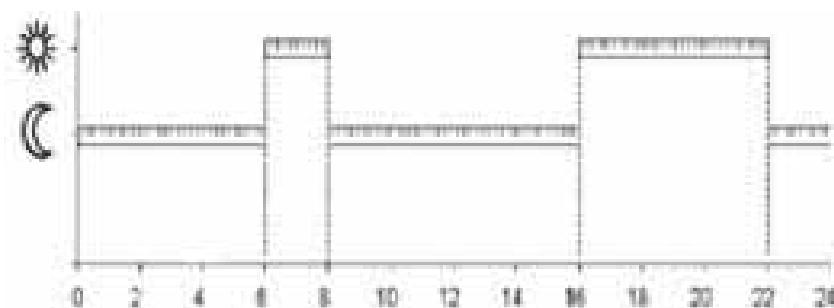

Operation

Time programs Heating

Heating curve Slope

Heating curve Parallel shift

Time programs Heating

The end user can choose from five pre-defined time programs for heating systems according to his wishes. If a time programme is activated, the boiler operates in the desired periods in order to keep the room temperature at the comfort temperature level. Outside these periods, the boiler operates at a reduced temperature level.

Alternatively, you can create your own time programmes or adapt existing programmes to your own requirements.

Heating curve Slope

The flow temperature set-point is adjusted according to the measured outside air temperature and the set weather compensation curve.

Example: Weather compensation curve 3.5 will provide a higher primary flow temperature set-point at a given outside air temperature than curve 1.0. The weather compensation curve can be adjusted to suit the heat loss characteristic of specific buildings.

Increase setting: Increases the flow temperature, especially when the outdoor temperature is cold.


Lower the setting: Reduces the flow temperature, especially when the outdoor temperature is cold.

Heating curve Parallel shift

If the ambient temperature is too hot or too cold regardless of the outdoor temperature, use the parallel shift to adjust the curve.

Depending on the system conditions (boiler settings during installation), a setting range of $\pm 7\text{K}$ (at low temperature) or $\pm 14\text{K}$ (at high temperature) is possible.

0-24h	Mo-So	00:00 – 24:00		
P1 Family program	Mo-Do	06:00 – 22:00		
	Fr-Sa	06:00 – 23:00		
	So	07:00 – 22:00		
P2 Program without noon	Mo-Do	06:00 – 08:00	16:00 – 22:00	
	Fr	06:00 – 08:00	15:00 – 23:00	
	Sa	07:00 – 23:00		
	So	08:00 – 22:00		
P3 Program with lunch	Mo-Do	06:00 – 08:00	11:30 – 13:00	16:00 – 22:00
	Fr	06:00 – 08:00	11:30 – 23:00	
	Sa	06:00 – 23:00		
	So	07:00 – 22:00		
6-22h	Mo-Do	06:00 – 22:00		

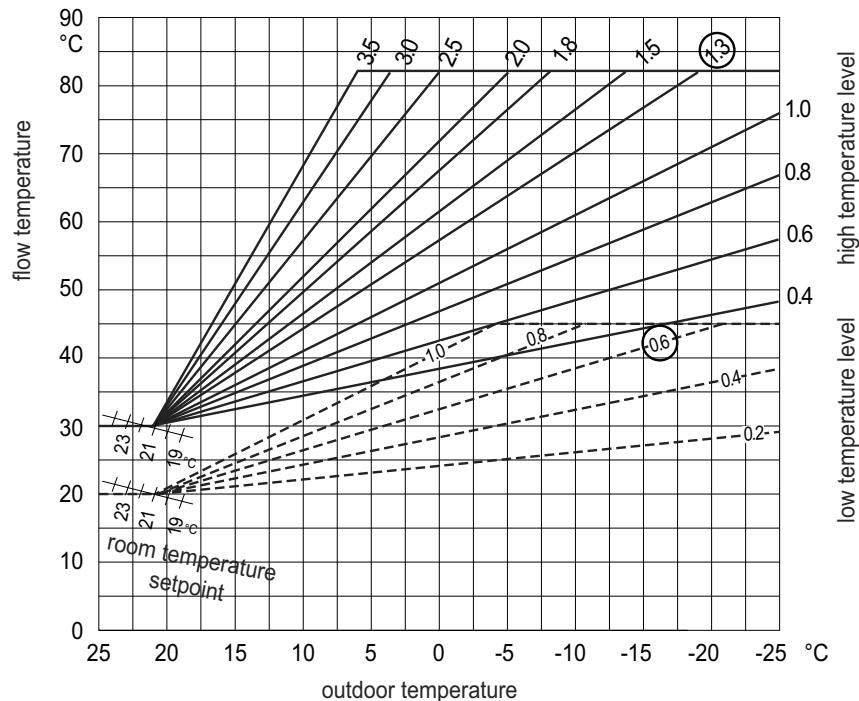

Automatic summer / winter changeover

Automatic summer / winter changeover

If this function is activated, the boiler automatically changes from "winter" mode ( + ) to "summer" mode () based on outdoor temperature conditions.

This means that the boiler can automatically activate or deactivate the heating mode. The criteria for the change are as follows:

If the outdoor temperature during 5h (delay time) is more than 1K above the desired summer / winter changeover temperature, the boiler switches from winter to summer mode.

If the outdoor temperature during 5h (delay time) is more than 1K below the desired summer / winter switching temperature, the boiler switches from the summer mode to the winter mode.

Summer/winter change-over temperature


Criterion external temperature in order to be able to winter operation in summer operation to change, factory setting is 20°C.

Hint:

The automatic summer / winter switchover can only be used if an outdoor sensor is installed.

Commissioning


Change the language on the screen

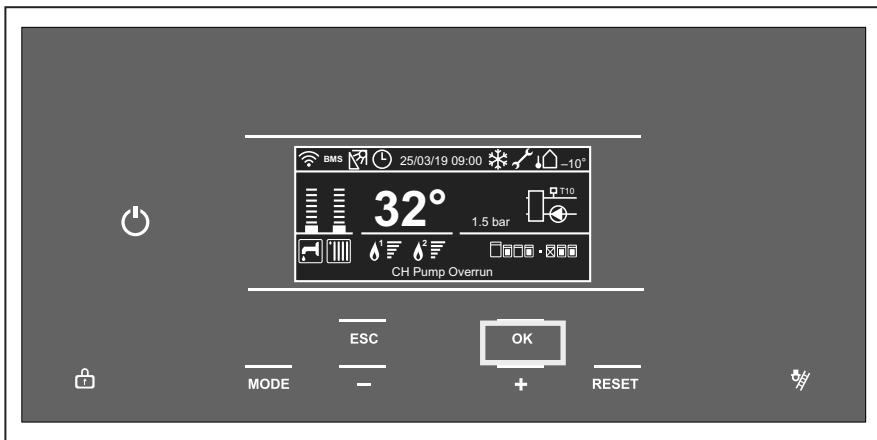


- 1 From the controller Home screen, press **OK**.




- 2 The “+” and “-” buttons are used to select the parameter set and make adjustments to individual parameter settings. The **OK** button selects the parameter set and confirms and stores any adjustments made.

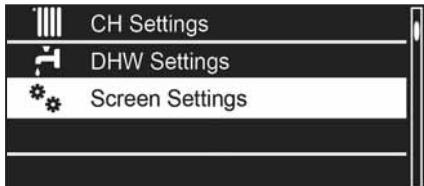

- 3 Use “+” to go down and “-” to go up to highlight **Screen Settings**. Press **OK**.

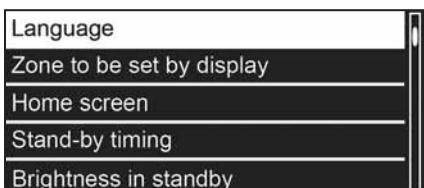

- 4 Option **Language** is highlighted. Press **OK**.

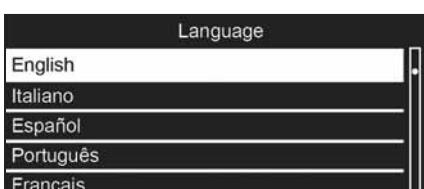


- 5 Use “+” to go down and “-” to go up to highlight the desired language. Press **OK**.

The language is changed now.

Commissioning

Change the time and date

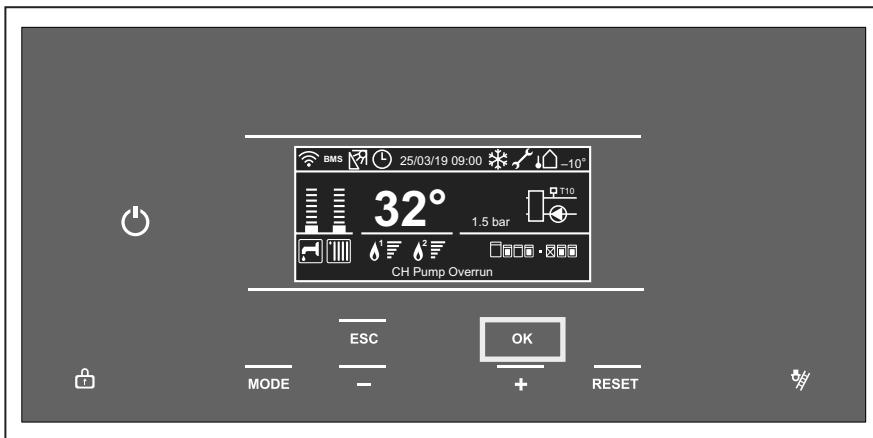


Attention:

in case of the boiler is connected to Wifi, the date and time are actualised automatically.

- From the controller Home screen, press **OK**.



- Use "+" to go down and "-" to go up to highlight **Complete Menu**. Press **OK**.

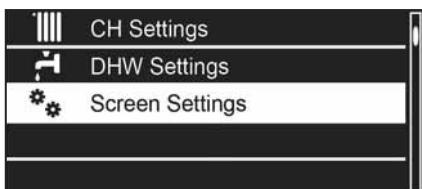

- Use "+" to go down and "-" to go up to highlight **Screen Settings**. Press **OK**.




- Use "+" to go down and "-" to go up to highlight **Time & Date**. Press **OK**.



- Use "+" to go down and "-" to go up to highlight the desired field. Press **OK**. The relevant field starts to flash.

Use "+" to go down and "-" to go up to highlight the correct value. Press **OK**.

After correctly filled in all fields, Press **Save**.

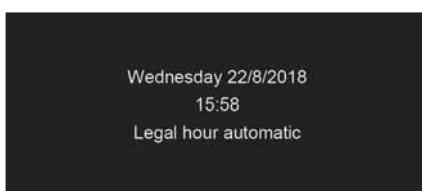


The message in the screen left appears.

The settings are saved.

Commissioning

Parameter adaption to the heating system

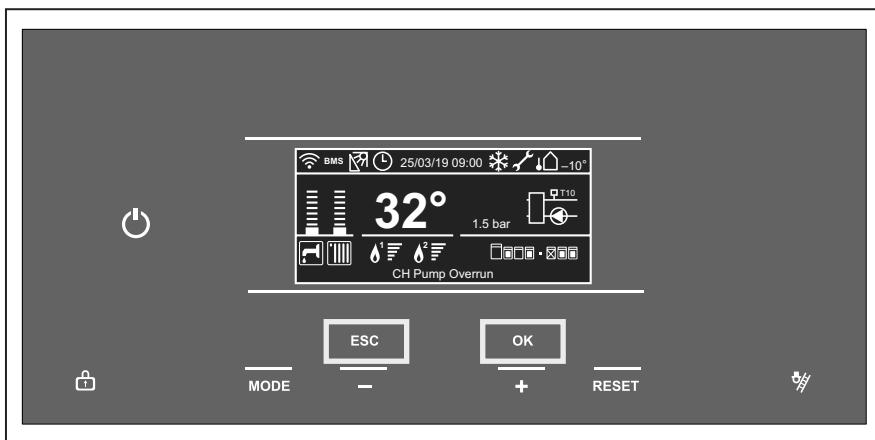


The settings are accessible through a code.

- 1 From the controller Home screen, press the **ESC** and **OK** buttons at the same time for 7 seconds.



- 2 Use “+” to go down and “–” to go up to highlight **007** as the Technical Code. Press **OK**.

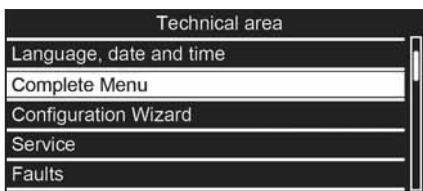

- 3 Use “+” to go down and “–” to go up to highlight **Complete Menu**. Press **OK**. It is now loading the menu.

Commissioning

Parameter adaption to the heating system

Parameter	Name	Description	Factory settings	Fix Flow T	Basic thermoregulation	Room T Only	Outdoor T Only	Room + Outdoor T
4	Zone1 Parameters							
4.1	Summer / Winter Changeover							
4.1.0	S/W function activation	0 = OFF, 1 = ON	0	**	**	**	**	**
4.1.1	S/W temperature threshold	10 - 30°C	20°C	**	**	**	**	**
4.2	Zone 1 Settings							
4.2.0	Zone temperature range	0 = Low Temp (From 20°C to 45°C) 1 = High Temp (From 35°C to 85°C)	1	*	*	*	*	*
4.2.1	Thermoregulation	0 = Fix Flow T 1 = Basic thermoregulation 2 = Room T Only 3 = Outdoor T Only 4 = Room + Outdoor T	1	0	1	2	3	4
4.2.2	Slope	From 1.0 - 3.5 HT From 0.2 - 1.0 LT	1.3HT 0.6LT	*	*	*	*	*
4.2.3	Offset	HT: From -14°C to +14°C LT: From -7°C to +7°C	0 0	*	*	*	*	*
4.2.5	Max T	HT: From 20°C to 82°C LT: From 20°C to 45°C	82°C 45°C	*	*	*	*	*
4.2.6	Min T	HT: From 20°C to 82°C LT: From 20°C to 45°C	40°C 25°C	*	*	*	*	*
4.2.8	Quick night setback	0 = OFF / 1 = ON	0	*	*	*	*	*
4.2.9	Heat request mode	0 = Standard 1 = RT Time Programs Exclusion 2 = Forcing Heat Demand	0	**	**	**	**	**

Value = mandatory setting

* adapt to the design characteristics of the heating system

** adapt to the comfort needs of the customer

Commissioning

Weather compensation Select thermoregulation type

To set the boiler to weather compensation, please set parameter 4.2.1 to 3 with an ON/OFF or eBus controller.

Menu
0 Network
4 Zone1 Parameters
5 Zone2 Parameters
6 Zone3 Parameters
24 Commercial boiler

- 1 Use “+” to go down and “–” to go up to highlight the Parameters Zone you want to set. In this case **Zone 1 Parameters**. Press **OK**.

4 Zone1 Parameters
4.0 Setpoint
4.1 S/W Changeover
4.2 Settings
4.3 Diagnostics

- 2 Use “+” to go down and “–” to go up to highlight **4.2 Z1 Settings**. Press **OK**.

4.2 Settings
4.2.0 Zone temperature range 1
4.2.1 Thermoregulation 0
4.2.2 Slope 1.5
4.2.3 Offset 0
4.2.4 Room Influence Proportional 10

- 3 Use “+” to go down and “–” to go up to highlight **4.2.1 Thermoregulation**. Press **OK**.

- 4 Make a choice between 5:

0 Fix Flow T

Room thermostat with fixed flow temperature

(Tstart 58°C)¹, every 16 min ±4 K)

¹⁾ = Factory setting at high temperature level

1 Basic Thermoreg

Room thermostat with automatic flow temperature adaptation

2 Room T Only

Pure room temperature control with room sensor

The flow temperature is controlled as a function of the room temperature setpoint, the current room temperature and its current course. A slight increase in the room temperature, for example, immediately reduces the flow temperature.

3 Outdoor T Only

Weather dependent control with outdoor sensor

The flow temperature is calculated via the heating curve as a function of the current outdoor temperature. This type of control requires that the heating characteristic is set correctly, as the control system does not take room temperature into account in this setting.

4 Room + Outdoor T

Weather and room temperature control with outdoor and room sensor

The deviation of the room temperature from the setpoint is recorded and taken into account during temperature control. In this way, any external heat generated can be taken into account and a more constant room temperature becomes possible.

The influence of the deviation is set proportionally. The better the reference room is (unaltered room temperature, correct installation location, etc.), the higher the value can be set.

Example:

Approx. 4: Good reference room




Approx. 1: Unfavourable reference room

4.2.1 Thermoregulation
4
Room+Outdoor T

Maximum value	4
Minimum value	0

Commissioning

Inspection

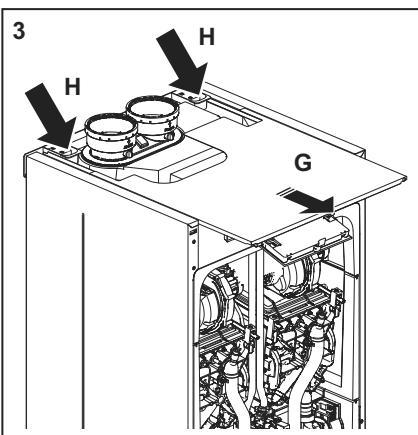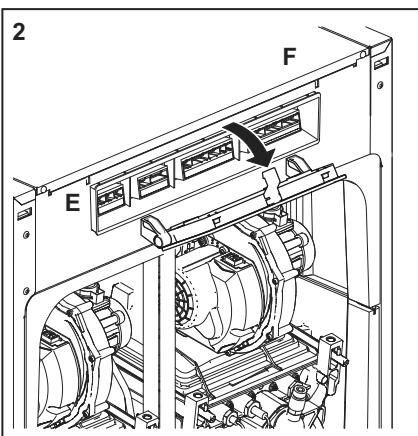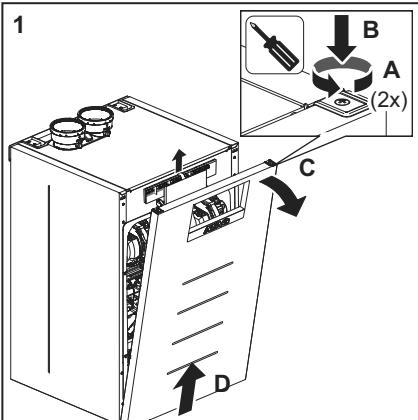

Caution:

After panel removal, 230V parts can be reached. Boiler inspection is only to be carried out by qualified staff.

Removal of front panel

The front panel must first be removed, to be able to carry out maintenance on the boiler.

1. Unscrew the 2 screws of quick-locks on top of front panel (A). Push the quick locks (B) and remove the front panel (C), (D) (= air box).

Removal of top panel

Top panel must be removed to be able to reach the burner control unit.

2. Press both external sides of the control unit HMI (E) and rotate the display (F).
3. Pull the top panel in a forward motion (G), (H).

The panelling of the equipment consists of metal and plastic parts, which can be cleaned with a mild (non-aggressive) cleaning agent.

When carrying out maintenance, only original ATAG replacement parts may be used.

Checks prior to commissioning



Changing settings such as burner pressure and setting the amount of air is not necessary.

Only in the case of failures or replacement of the gas unit, venturi and/or ventilator, does one have to check and adjust the O₂ / CO₂ percentage accordingly.

Following maintenance tasks always check all gas-conducting components on leakages by use of leakage detection fluid (LDF).

Commissioning

Flue gas analysis Full load (Step 1/3)

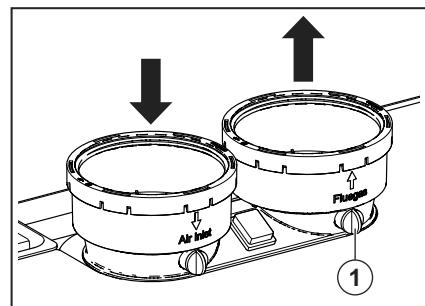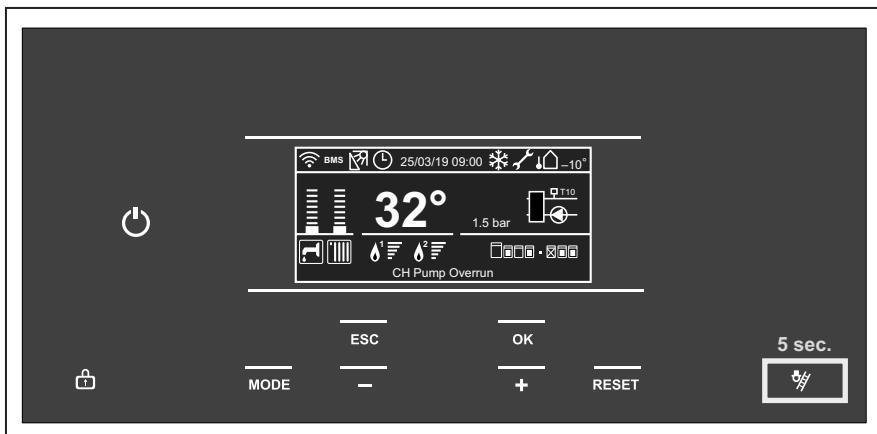

The O₂ / CO₂ check consists of 2 steps or, if necessary, 3 steps:


- Step 1: Check on full load**
- Step 2: Check on low load**
- Step 3: Adjustment (if necessary).**

Step 1: O₂ / CO₂ check on full load
The O₂ or CO₂ setting is preset at the factory to E, namely natural gas, for all equipment units. A calibrated O₂ or CO₂ control measurement must be carried out during commissioning.

- Ensure that the boiler is in operation and that the heat, which it produces, can be discharged.

Set the load of each engine

- Press the chimney sweep button for 5 seconds;
- Select with “+” or “-” burner 1 or 2 (in case it is present). Press OK;
- The boiler will switch to CH power shown on the screen.

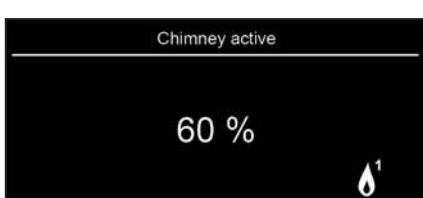

The modulation rate can now be adjusted between minimum 0% and maximum 100%.

- Press the “+” button until you reach 100%;
- Press **OK**;
The selected engine will switch to max power output, the screen shows 100% (heating capacity).
- Calibrate the Flue Gas Analyser, and then insert the flue gas probe of the Flue Gas Analyser into the measuring point of the flue gas pipe “1” (see illustration);
- Wait for one minute and then carry out a combustion analysis;
- Check whether the O₂/CO₂ values that are listed below correspond to the measured value.

After this check has been done, once more test the O₂/CO₂ value at low load (see Step 2 on page 84).

Legend

1. Measuring point for the flue gas probe.

Set the load of complete boiler

- Press the chimney sweep button for 5 seconds;
- Select with “+” or “-” burner 1+2

The Chimney Power Level is now Settable (with “+” and “-” buttons) between the minimum Power and the maximum Power of the complete boiler.

O₂ / CO₂ check on full load (Step 1)


Full load	Natural gas (G20)	Propane (G31)*
O ₂	Nominal 4,8%	Nominal 5,0%
	Minimum 4,1%, maximum 5,6%	Minimum 4,5%, maximum 5,4%
CO ₂	Nominal 9,0%	Nominal 10,5%
	Minimum 8,6%, maximum 9,4%	Minimum 10,2%, maximum 10,8%

Values are valid with closed cover/air box.

*only possible if LPG conversion kit is installed

Commissioning

Flue gas analysis Low load (Step 2/3)

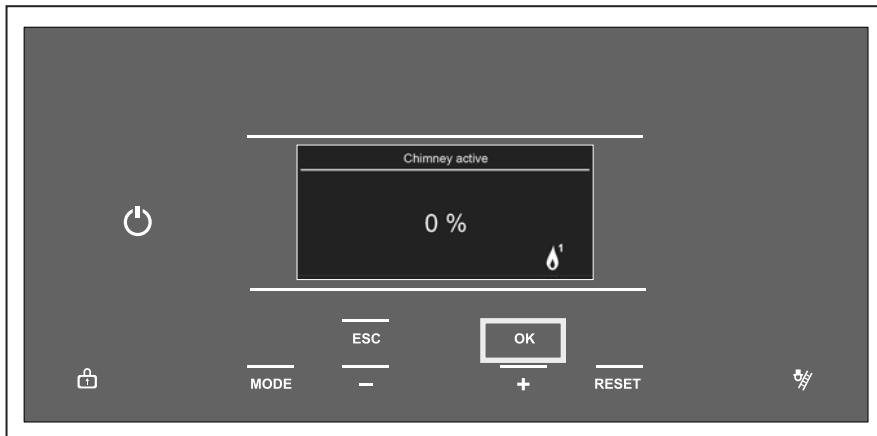

Step 2: O₂ / CO₂ check on low load

Setting the low load

The low load of each engine or of the complete boiler can be set by you as follows:

- Press the “-” button until you reach 0%;
- Press **OK**;
The boiler will switch to minimum power output (low load) of the boiler; the screen shows 0% (heating capacity).

The O₂ value at low load must lie higher than the O₂ value at full load. The measuring procedure must be carried out, until a stable measuring result is achieved. Please contact ATAG, if the values should lie outside of the applicable tolerances.

End of measuring:

- Press the back button for 5 seconds to exit chimney sweep mode.

This completes the procedure.

The maximum duration of the commissioning function, without interruption, is 20 minutes.




O ₂ / CO ₂ check on low load (Step 2)		
Low load	Natural gas (G20)	Propane (G31)*
O ₂	Minimal 0,5% higher than measured on full load	Minimal 0,2% higher than measured on full load
	Maximum 6,3%	Maximum 6,5%
CO ₂	Minimal 0,3% lower than measured on full load	Minimal 0,1% lower than measured on full load
	Minimum 8,2%	Minimum 9,5%

Values are valid with closed cover/air box.

*only possible if LPG conversion kit is installed

Commissioning

Flue gas analysis Adjustment on the gas valve (Step 3/3)

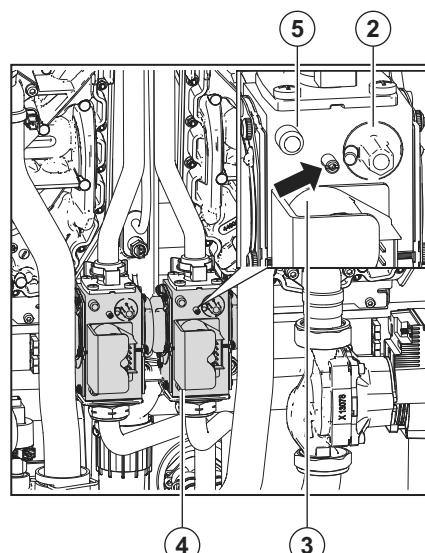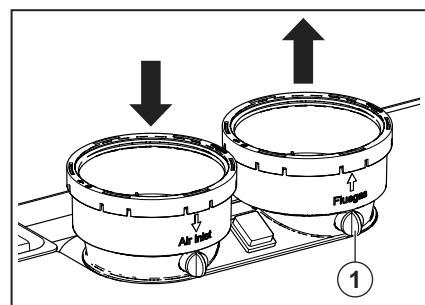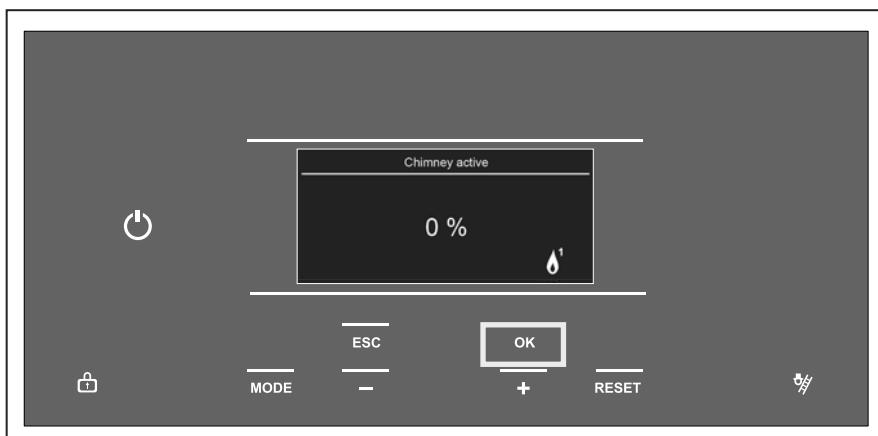

Step 3: Adjustment on the gas valve

Adjust the gas valve only in case the measured values lies out of range of the values mentioned in the table on previous page.

- Open the boiler as described on page 85;
- First put engine 1 on full load (see Step 1) and follow next steps;
- The O₂/CO₂ values are set by using an Allen key (2 mm), or a large flat head screwdriver, on the screw "3". Please observe the following rotating direction;
- Clockwise means more O₂/less CO₂;
- Counterclockwise means less O₂/more CO₂;
- Once done, repeat the steps above for engine 2.

Legend

1. Measuring point for the flue gas probe
2. Offset regulation
3. Main throttle regulation
4. Pressure P-int
5. Pressure P-out

Attention; close the venturi intake for the non-running engine (bare in mind there is a 3 minute post purge time active).

After this setting has been made, once more test the O₂/CO₂ value at full load and low load. See Step 1 and 2.

Adjustment of the gas valve in case the measured values lies out of range of the values on full load (Step 3)

Full load	Natural gas (G20)	Propane (G31)*
O ₂	4,8%	5,0%
CO ₂	9,0%	10,5%

Values are valid with closed cover/air box.

*only possible if LPG conversion kit is installed

Maintenance

Decommissioning and maintenance works Inspection and maintenance interval

Boiler maintenance is only to be carried out by qualified staff with calibrated equipment.

When replacing spare parts only original ATAG Service parts are to be used. For this purpose, please refer to the Service parts list to find article numbers and exploded views. Please contact ATAG.

Maintenance intervals

Maintenance has to be carried out at least after 16,000 operational hours max. or every 4 years, whatever comes first. (To verify with local service depending by installing condition).


Depending on the intensive use of the device, maintenance intervals will have to be decreased accordingly. For other situations, maintenance intervals may also have to be decreased. In such cases, please contact ATAG for additional advice.

Inspection and maintenance tasks have to be carried out in accordance with the maintenance instructions at all times. Some tasks are described in these maintenance instructions. For complete inspection and maintenance instructions, see pages 87-93.

When carrying out maintenance on the boiler, the gas tap has to be closed and secured against opening.

Maintenance works

- Use the ON/OFF switch (A) to turn the boiler off;

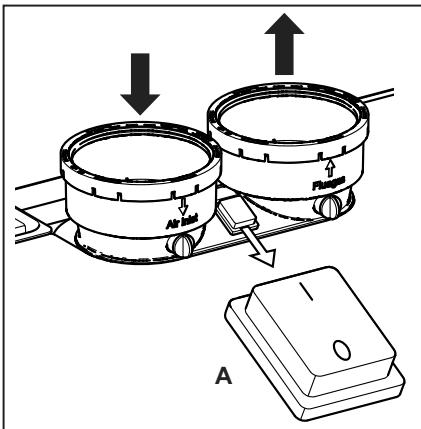

- Interrupt the power supply to the boiler, by operating the mains circuit breaker in the boiler room.
- Interrupt the gas supply to the boiler. During emptying of the boiler, it is possible that a part of the heating water stays behind. Make sure that any remaining heating water cannot freeze, in case of a frost hazard.

Decommissioning

It may be necessary to set the boiler out of service in some situations. Switch the boiler to "off" mode (white color of power button) pressing the power button.

This switches off the functions DHW prog and Pump prog respectively. ATAG recommends leaving the power switch switched on to ensure that the boiler pump(s) and three-way valve (if fitted) are automatically activated to prevent them from sticking. The frost protection remains active. Leave gas supply open.

If frost, during the period when the boiler is out of operation, is likely, then you are advised to remove the power from the boiler and drain the boiler(s) and installation. In this case: close the gas valve.

Maintenance

Please observe the following safety instructions:

All works on the boiler and the heating facility (assembly, maintenance, repairs) may only be carried out by authorized technicians, by using suitable tools and calibrated measuring instruments. The exchange of components requires original ATAG replacement parts.

The main stopcock for gas must be closed and secured against reopening.

The casing must first be removed, to be able to carry out maintenance on the boiler. The panel is secured by 2 screws on top of the door. After loosening the screw, the casing can be removed by pulling and lifting it. Follow instruction on page 82.

All equipment is preset at the factory. An O₂ / CO₂ control measurement must be carried out during commissioning.

No change should be made on the zero-point setting. The zero-point setting must only be checked after a malfunction, or after an exchange of the gas valve, the venturi or the ventilator motor.

The zero-point setting does not serve for setting up the combustion-technical characteristic values. These are made exclusively through the O₂ / CO₂ setting.

All gas pipes and screws must be tested for leakproofness, using a leak-detecting spray, whenever maintenance or repair works have been carried out on the boiler.

In this regard, please observe all of the individual maintenance steps documented on page 90 ff., as well as the overview of inspection and maintenance procedures provided on page 92 to 93.

Inspection interval

An inspection must be carried out at least after every 4,000 boiler operating hours, however at least once every year. (To verify with local service depending by installing condition).

An inspection consists of a visual check, of the general condition of the boiler and the installation.

The objectives of an inspection is an assessment of the condition of the equipment, and an evaluation as to when maintenance works are required. A visual inspection can lead to a maintenance procedure.

No tools are required during an inspection (except for tools for removing the panel). If necessary, the corresponding individual maintenance steps must be carried out, which are listed as of page 93.

Maintenance

Maintenance details

Maintenance interval

An inspection of the burner must be carried out after max. 8,000 operating hours, however at least within 2 years. (To verify with local service depending by installing condition).

Maintenance consists of control and cleaning, or a possible exchange of components of the equipment or installation, which are subject to contamination and wear and tear.

The objective of maintenance is to ensure a long-term functional security and a cost-effective operation of the equipment.

Through a reduction of emissions that are related to the production of heat, primary energy requirements and environment burdening can be substantially reduced.

A visual inspection must always precede the carrying out of maintenance works. In this regard, also see the inspection interval above.

All gas pipes and screws must be tested for leakproofness, after maintenance or repair works have been carried out on the boiler.

Both the gas connection and the pressure on the connection must be checked.

Check at each maintenance intervention the flue gas system on leaks and repair or replace when flue gas leaks are detected.

CAUTION:

Always interrupt the power supply, before carrying out maintenance or repair works on the boiler.

Ventilator unit and burner cassette

- Remove the plug connections of the gas valve (1) and ventilator (2);
- Unscrew the coupling (3) of the gas unit;
- Replace the gas valve gasket with a new one;
- Unscrew the front cross-slotted screw (4) of the air suction damper;
- Loosen the left (5) and right (6) clamp bar a quarter of a turn with the allen key and pull it out in a forward direction. In doing so, pay attention to the turning direction (red check cams);

See drawings next pages.

Maintenance




Maintenance details

CAUTION:

Always interrupt the power supply, before carrying out maintenance or repair works on the boiler.


Ventilator unit and burner cassette (see illustration)

- remove the fast clip on the venturi (1) and the gas valve (2) and remove the gasline (3);
- Replace the gaskets of the gasline (O-ring) with new ones;
- Disconnect the electrical connections from the fan (4);
- Turn (A) clockwise the left (5) and anti-clockwise the right (6) clamp bars a quarter turn with the allen key and pull these out in a forward Direction (B).
- Now lift the complete fan unit (7) with the upper tray and remove it in a forward motion;

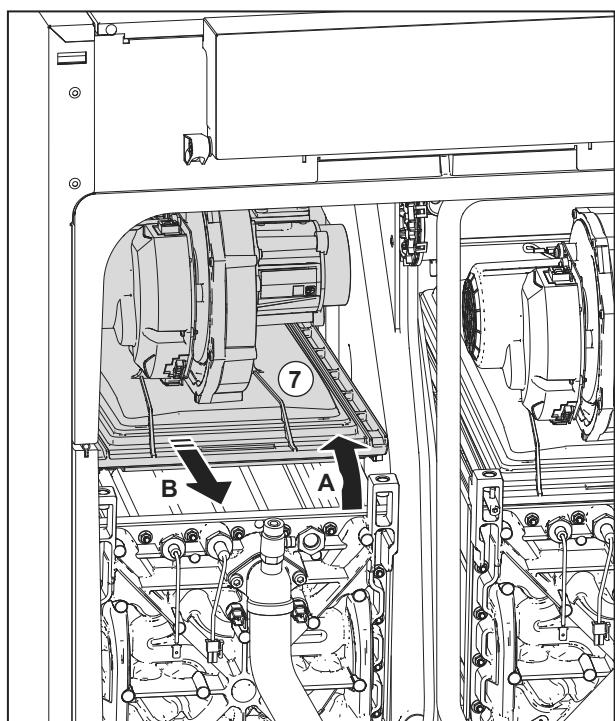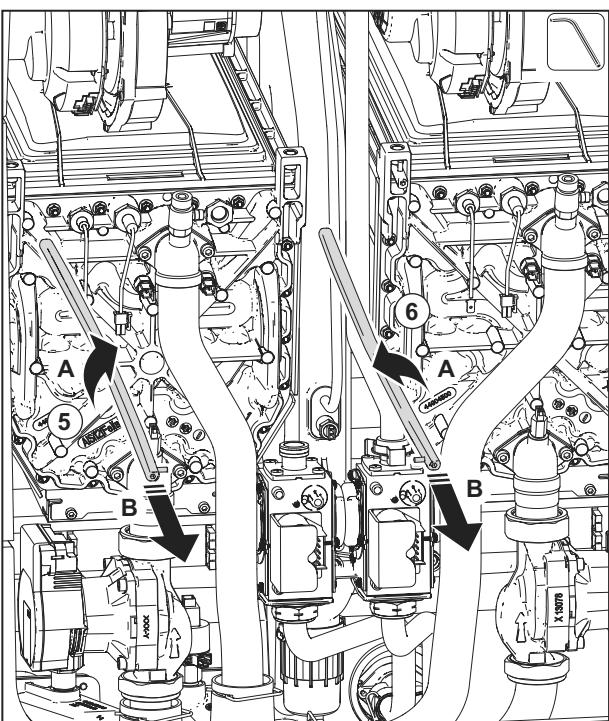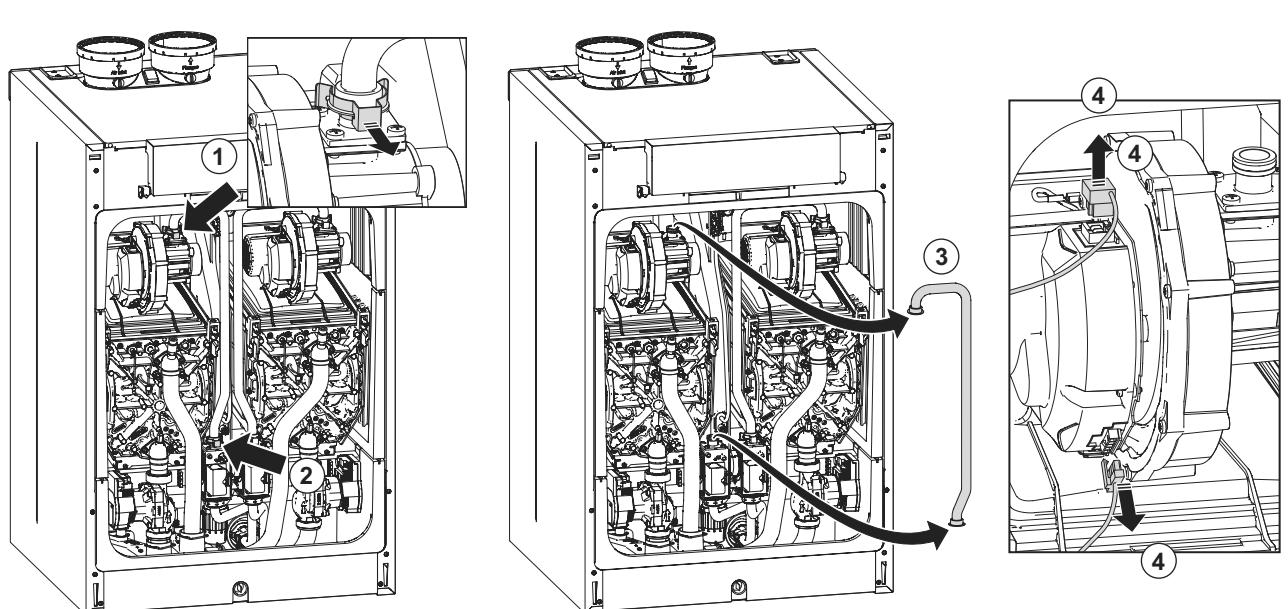

Maintenance

Maintenance details

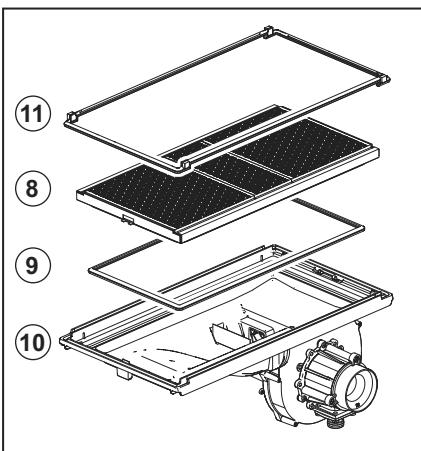

- Turn the unit up side down and remove the burner cassette (8) from the ventilator unit;
- Check the burner cassette for wear and tear, pollution and any breakages. Clean the burner cassette with a soft brush and vacuum cleaner. In the case of cracks, always replace the complete burner cassette (8);


The following operations must be performed carefully in relation to the vulnerability of the non return valve.

- After removing the burner cassette (8) the non return valve (12) becomes visible. Check if the non return valve entire circumference closes / seals completely. The valve (12) should be able to move freely from fully open to fully closed. Replace the non return valve if the valve does not seal properly. Follow the instructions supplied with the new part.
- Replace the gasket (9) between the burner (8) and upper casing (10) ;
- Replace the gasket (11) between the upper casing (10) and exchanger.
- Check the venturi (13) for pollution and clean them with a soft brush in combination with a vacuum cleaner, if necessary.

If the inside of the boiler casing is heavily polluted with dust, it is likely that the fan impeller is also polluted. To clean the fan, it has to be removed from the upper tray and the venturi. Clean the impeller with a soft brush and a vacuum cleaner. Replace the gasket and take care that the new gasket is installed properly when reassembling the fan parts.

Reassembly takes place in reverse order.

Heat exchanger

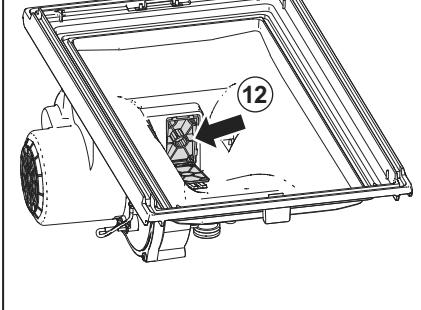





- Check the heat exchanger for pollution. Clean it, if necessary, with a soft brush and a vacuum cleaner. Avoid any pollution falling down.



NOTE: TOP-FLUSHING THE EXCHANGER WITH WATER IS NOT ALLOWED.


Reassembly takes place in reverse order.

During installation pay attention to the correct position of the clamp bars. These have to be in a vertical position.

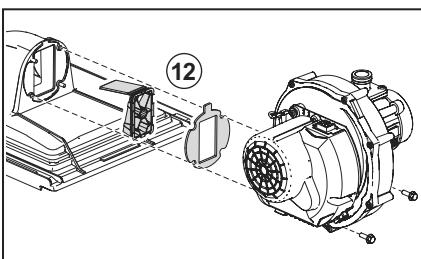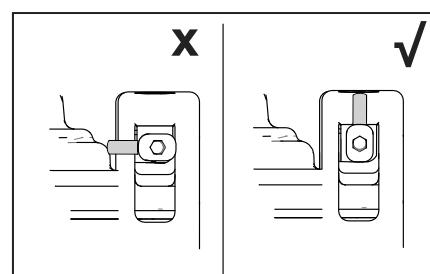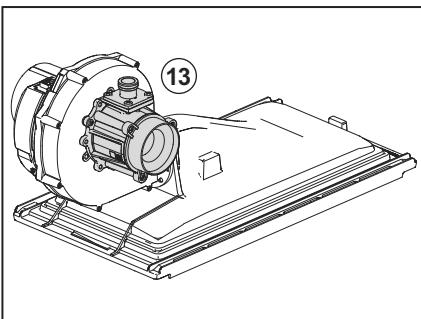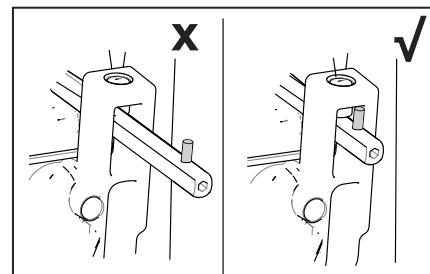

Maintenance

Maintenance details

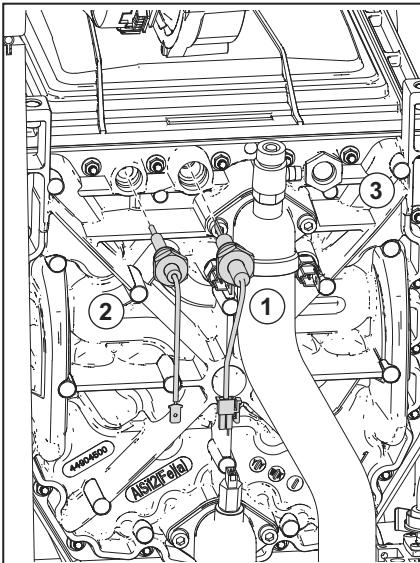

The ignition electrode

The ignition electrode (1) is a consumable part and must be checked

annually. The electrode must be renewed, if damages or any wear and tear is detected. The value of ignition electrode resistance can be detected through measurements.

The maximum electrode resistance at room temperature should not exceed $100\ \Omega$.

It can be replaced unscrewing it from the heat exchanger. Remove and replace the o-ring. Make sure of the tightness of the connection.

In case electrode damage is detected, verify the status and eventually replace the fuse along electrode cable.

In order to ensure continued good and safe operation of the boiler ignition electrode should be replaced every 2 years.

The detection electrode.

The detection electrode (2) is a

consumable part and must be checked annually. The electrode must be renewed, if damages or any wear and tear is detected, but certainly every 4 years. Furthermore, the value of the ionization current can be detected through measurements. Under full load operations, the minimum ionization current must amount to $4\mu\text{A}$.

It can be replaced unscrewing it from the heat exchanger. Remove and replace the o-ring. Make sure of the tightness of the connection.

Sight glass

If the sight glass (3) is damaged, it can be replaced unscrewing it from the heat exchanger. Remove and replace the gasket. Make sure the gasket is in correct position and the connection of new glass is tight.


Assembly is done in reverse order.

Checking the air pressure differential switch + side

- Switch off the boiler
- Disconnect the silicon hose on the + side (P1) of the air pressure differential switch (1).

- Take a large plastic syringe or bellows and connect a T piece with a hose connected (2).
- Connect the + side of the air-pressure differential switch to one end of the T piece with a hose (3).

- On the other end of the T piece, connect the + side of a pressure gauge (4).
- Turn on the boiler.
- Push the syringe or bellows in very slowly until the boiler goes into failure mode (5).
- Make a note of the pressure indicated by the pressure gauge at that point. A switch pressure of between 5.0 and 6.5 mbar is fine. A lower or higher switch pressure indicates a problem with the air pressure differential switch.
- After taking a measurement, detach the silicon hose from the T piece on the + side and reconnect the hose that was previously removed.

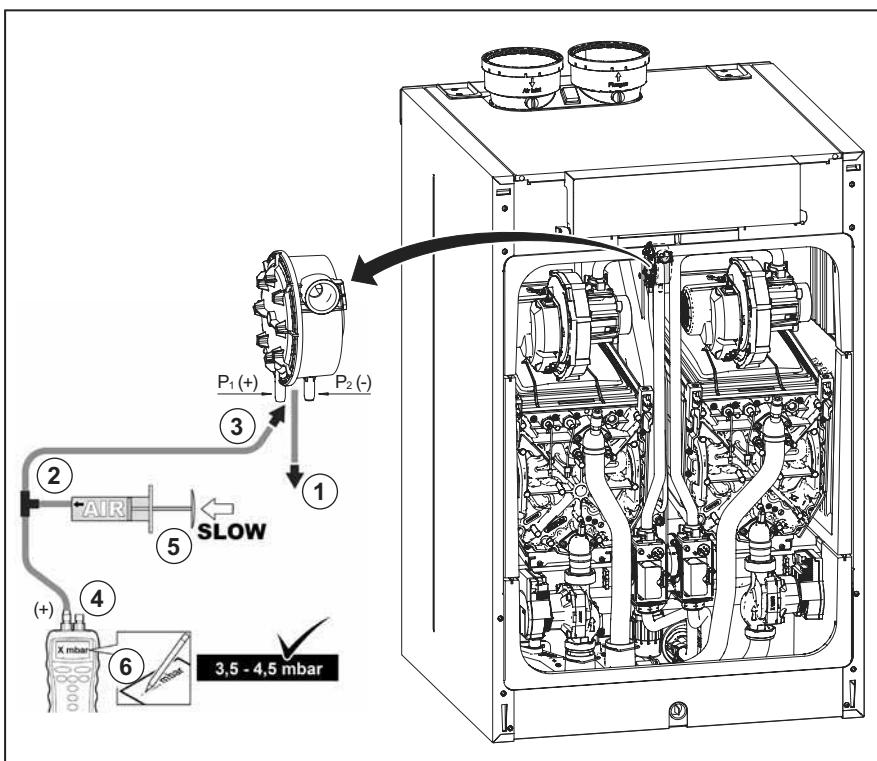


CAUTION:

Please note: The + side (P1) is the rear connector nipple of the air pressure differential switch (without red cap).

- Remove any soiling from all connection points for hoses and the air pressure differential switch.
- Check the condition and tightness of the hoses of the air pressure differential switch. Replace the hoses if necessary.

Maintenance

Maintenance details

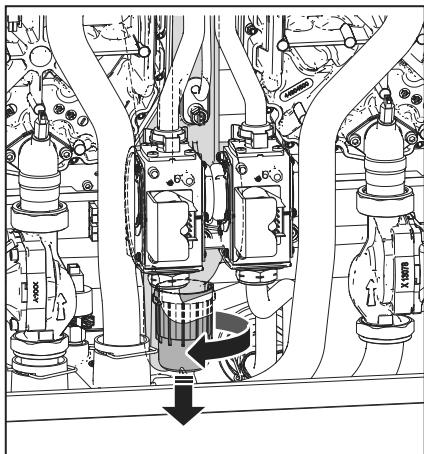


Dirt collector

Place a basin under the red dirt collector to collect the dirty and aggressive condensate water. Wear protective clothing like latex gloves and safety glasses.

- Dismantle the dirt collector by unscrewing it. Check the red cup for pollution.
- Clean it by rinsing it with water.
- Re-grease the O-rings with acidfree O-ring grease to facilitate easy assembly.
- If the red dirt collector shows any leakage, it has to be replaced.

In case of leakage you can remove the drainage cup to remove eventual water/condense from the boiler.

Take the device back into operation and conduct a flue gas analysis (refer to chapter Check O₂/CO₂).

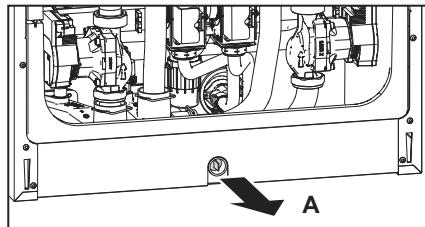

Maintenance warning

From factory a fixed number of running months is set for service interval. The number of running months cannot be changed. After expiring of the number of running months the message 1730 : Sched..Maintenance-Call Service (when read-out is on boiler status) is displayed on the screen.

During the messages 1730 : Sched.. Maintenance-Call Service the boiler remains fully operational. If the maintenance activities, as described hereinbefore, have been carried out, the counter has to be reset. To reset the counter, the following procedure has to be followed (starting from a blue screen):

Go to installer menu
full menu
24.17 maintanance
24.17.2 reset maintanance counter.

The counter is reset to the same number of months as set from factory. The message 1730 : Sched.. Maintenance-Call Service is no longer displayed.

Maintenance

Inspection overview

Pos. Nr.:	Inspection check list - ATAG XL-F	At least every 4.000 hrs.*	once a year	Activity done	Remarks
	Switch off power supply to the boiler and close the gas valve!	✓			
1	Air box/Boiler cover				
1.0.1	Remove boiler cover	✓			
1.0.2	Check boiler cover/air box sealing on wear	✓			
1.0.3	Necessary cleaning	✓			
2	Gas pipes				
2.0.1	Check all gas pipes on leaks	✓			
2.0.2	Check all gas fittings on leaks	✓			
2.0.3	Check all gas pipes and parts on corrosion and damage	✓			
2.0.4	Check static and dynamic gas pressure	✓			
3	Pressure parts				
3.0.1	Check system pressure (Plausibility check)	✓			
4	Checking parts on damage, corrosion, function and leaks:				
4.0.1	Gas valve / Venturi	✓			
4.0.2	Automatic de-aerator	✓			
4.0.3	Hydraulic connections	✓			
4.0.4	Siphon dirt collector and condensate drain	✓			
4.0.5	Ignition and detection electrode	✓			
4.0.6	iConXL heat exchanger	✓			
4.0.7	manual deareator	✓			
5	Boiler/Burner in operation without air box/boiler cover:				
5.0.1	Check flame	✓			
5.0.2	If flame is not stable - check adjustments and burner	✓			
5.0.3	Commissioning O ₂ /CO ₂ and Ionisation current	✓			
6	Additional checks:				
6.0.1	Check Air pressure switch proper functioning	✓			
6.0.2	Check all parts under over-pressure	✓			
6.0.3	Check combustion air intake	✓			
6.0.4	Check gas flow (Plausibility check)	✓			
6.0.5	Check O ₂ /CO ₂	✓			
6.0.6	In case of multiple units - All activities should be carried out on all units!	✓			
6.0.7	Reassemble boiler cover	✓			
7	Boiler/Burner in operation with air box/boiler cover:				
7.0.1	Check function central heating	✓			
7.0.2	Check function DHW	✓			
7.0.3	Check desired temperature and actual flow temperature (Plausibility check)	✓			
7.0.4	Write down running hours from HMI and reset counter	✓			

* To verify with local service depending by installing condition

Maintenance

Maintenance overview

Pos. Nr.:	Maintenance check list - ATAG XL-F	At least every 16,000 hrs.* once a year	Activity done	Remarks
	Switch off power supply to the boiler and close the gas valve!	✓		
1	Air box/Boiler cover			
1.0.1	Check cover on impurence and damage	✓		
1.0.2	Necessary cleaning	✓		
1.0.3	Check the sealing and replace if necessary	✓		
2	Fan unit / Burner cassette			
2.0.1	Check and clean fan unit	✓		
2.0.2	Check and clean top part heat exchanger	✓		
2.0.3	Check non return valve and replace if necessary	✓		
2.0.4	Check and clean burner cassette	✓		
2.0.5	Check and clean venturi	✓		
2.0.6	Check gas valve on corrosion and damage	✓		
2.0.7	Replace all gaskets from gas system which are disassembled	✓		
3	iConXL heat exchanger			
3.0.1	Check heat exchanger on corrosion and damage	✓		
3.0.2	Check heat exchanger on impurence and clean	✓		
3.0.3	Replace gasket between heat exchanger and burner cassette	✓		
3.0.4	Replace gasket between heat exchanger and top part	✓		
	<i>Top-flushing the exchanger with water is not allowed!</i>			
4	Checking parts on damage, corrosion, function and leaks and replace if necessary:			
4.0.1	Ignition and ionisation electrode	✓		
4.0.2	Replace gasket ignition and ionisation electrode	✓		
4.0.3	Automatic de-aerator	✓		
4.0.4	Hydraulic connections	✓		
5	Siphon dirt collector/Condensate drain			
5.0.1	Clean siphon dirt collector and condensate drain	✓		
5.0.2	Check siphon dirt collector and condensate drain on leaks	✓		
5.0.3	Replace gasket ignition and ionisation block	✓		
5.0.4	Replace gaskets of siphon dirt collector	✓		
5.0.5	Hydraulic connections	✓		
6	Circulation pump			
6.0.1	Check circulation pump functions	✓		
6.0.2	Check pump on external damage and check noise	✓		
6.0.3	Check pump on leaks	✓		
7	Additional activities:			
7.0.1	In case of multiple units - All activities should be carried out on all units!	✓		
7.0.2	After complete maintenance follow inspection check list	✓		
7.0.3	Open gas valve, switch on power supply	✓		
7.0.4	Check function central heating	✓		
7.0.5	Check function DHW	✓		

* To verify with local service depending by installing condition

Errors

Error codes and fault finding


Cascade

Cascade master boiler


The cascade master display shows all errors that are known on the bus, so also from all slave boilers as from zone clip-in, solar manager, etc.

Cascade slave boiler


Shows only an error that is active on the slave boiler itself.

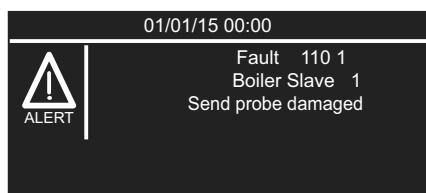

Error on cascade master from a slave boiler.

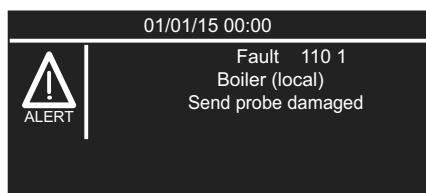

Error on the master itself.

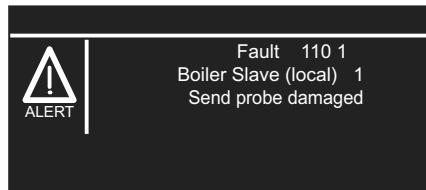

Error on a slave boiler itself.

Message on display (no indication of BHE0 and BHE1)	Fault Code engine 1	Fault Code engine 2 (if applicable)
Overheat	101 1	
Overheat		101 2
(Reserved)	--	
(Reserved)	--	
Flow Check 1	1P1 1	
Flow Check 1		1P1 2
Flow Check 3	1P2 1	
Flow Check 3		1P2 2
Flow Check 4	1P3 1	
Flow Check 4		1P3 2
Flow Check 2	104 1	
Flow Check 2		104 2
Flow Check 5	107 1	
Flow Check 5		107 2

Errors

Error codes and fault finding

Message on display (no indication of BHE0 and BHE1)	Fault Code engine 1	Fault Code engine 2 (if applicable)
(Reserved)	--	
Flow Sensor Open Short Circuit	110 1	
Flow Sensor Open Short Circuit		110 2
Return Sensor Open Short Circuit	112 1	
Return Sensor Open Short Circuit		112 2
Sensors Check	118 1	
Sensors Check		118 2
Flow Check 1 (or 3 or 4) Three Times	103 1	
Flow Check 1 (or 3 or 4) Three Times		103 2
Flow Check 3 (or 1 or 4) Three Times	105 1	
Flow Check 3 (or 1 or 4) Three Times		105 2
Flow Check 4 (or 1 or 3) Three Times	106 1	
Flow Check 4 (or 1 or 3) Three Times		106 2
(Reserved)	--	
(Reserved)	--	
Gas Relais check Failed	309 1	
Gas Relais check Failed		309 2
Pump Feedback Open Short Circuit	142 1	
Pump Feedback Open Short Circuit		142 2
PCB Fault 1	303 1	
PCB Fault 1		303 2
Too many Reset	304 1	
Too many Reset		304 2
Pump Feedback Abnormal Running	143 1	
Pump Feedback Abnormal Running		143 2
PCB Fault 2	306 1	
PCB Fault 2		306 2
Pump Feedback Abnormal Stopped	144 1	
Pump Feedback Abnormal Stopped		144 2
No Flame detection (3 attempts)	501 1	
No Flame detection (3 attempts)		501 2
False Flame	502 1	
False Flame		502 2
Flame lift (3 attempts)	504 1	
Flame lift (3 attempts)		504 2
No Flame 1	5P1 1	
No Flame 1		5P1 2


Errors

Error codes and fault finding

Message on display (no indication of BHE0 and BHE1)	Fault Code engine 1	Fault Code engine 2 (if applicable)
No Flame 2	5P2 1	
No Flame 2		5P2 2
Flame lift 1	5P3 1	
Flame lift 1		5P3 2
Pump Feedback Failure	145 1	
Pump Feedback Failure		145 2
Fan Error	612 1	
Fan Error		612 2
APS Open	603 1	
APS Open		603 2
Pump Feedback Low Flowrate	146 1	
Pump Feedback Low Flowrate		146 2
Flow2 Sensor Open Short Circuit	117 1	
Flow2 Sensor Open Short Circuit		117 2
Scheduled Maintenance	3P9 1	
Scheduled Maintenance		3P9 2
Bms Voltage Configuration Error	450	
Bms Current Configuration Error	451	
Bms External Configuration Error	452	
Buffer High Probe Error	730	
Buffer High Probe Overtemperature	731	
Buf Full Charge Error	732	
Boiler parametrization fault	162	
Boiler parametrization KO	163	
Boiler parametrization OK - waiting for NTCs	164	
Boiler parametrization missing	165	
Boiler parametrization allowed	166	
Boiler parametrization waiting for reset	167	
No Cascade Manager Detected	440	
Missing Boiler Detected	441	
Dynamic Pressure Check Failed	140 1	
Dynamic Pressure Check Failed		140 2
Dynamic Pressure Check Attempt Failed	1P9 1	
Dynamic Pressure Check Attempt Failed		1P9 2
Pump Feedback Low Warning Flowrate	1P0 1	
Pump Feedback Low Warning Flowrate		1P0 2
Flame Low Fan RPM High	506 1	
Flame Low Fan RPM High		506 2
Communication error (Internal HMI)	310	
Bus supply overload	420	


Errors

Reset a Fault code

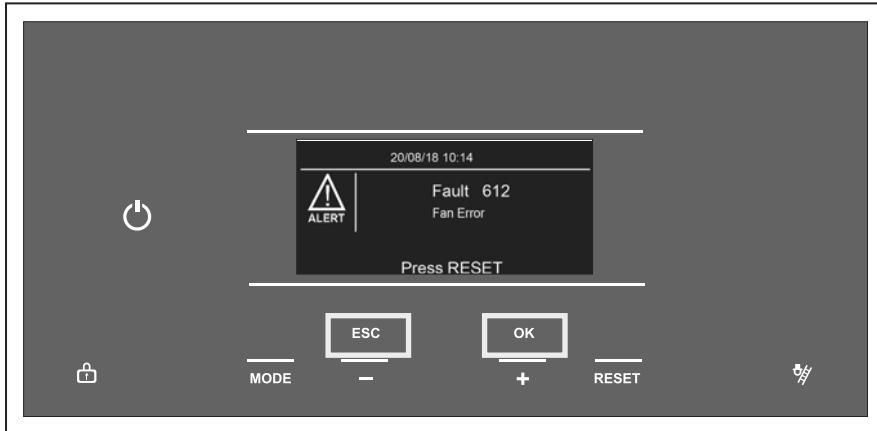


The settings are accessible through a code.


- 1 When an error occurs, the fault code and description appear on the screen.
- 2 To reset the fault code, press the **RESET** button.

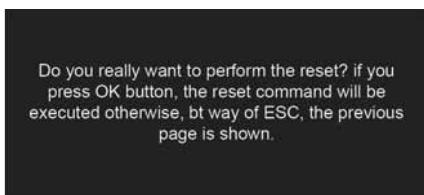

- 3 The message on the screen left appears.
Press **OK** to reset the error, otherwise the previous screen is shown.

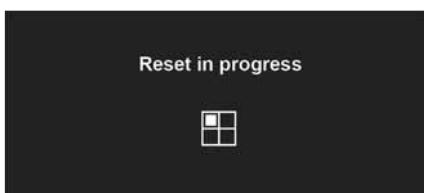

- 4 The **Reset in Progress** message appears.

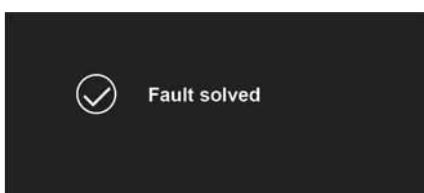


- 5 After a while the **Fault Solved** message appears.

After the code is reset, the Home screen appears.


When there are several errors active, it is possible to scroll through them by pushing the **ESC** button. Last page is the main display. When there are no button activities for 30 sec., the last error will be displayed again. At the master boiler all errors of the cascade system will be displayed.

Errors

View Error code History

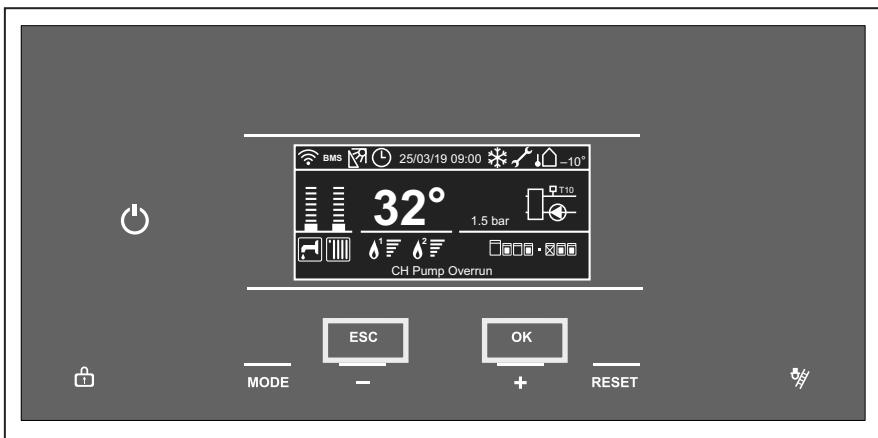

- 1 From the controller Home screen, press the **ESC** and **OK** buttons at the same time for 7 seconds.

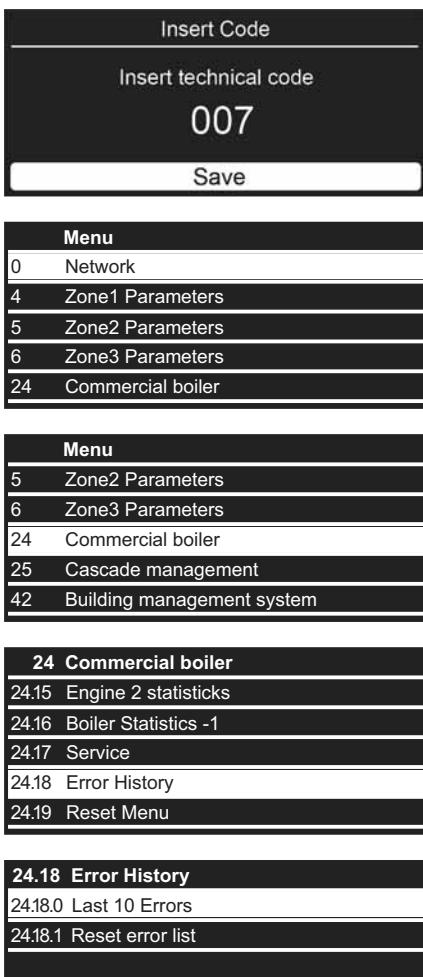

An example of an error message on the left.

- 2 Use “+” to go down and “–” to go up to highlight **007** as the Technical Code. Press **Save**.
- 3 Use “+” to go down and “–” to go up to highlight **0 Network**. Press **OK**.
- 4 Use “+” to go down and “–” to go up to highlight **24 Commercial boiler**. Press **OK**.
- 5 Use “+” to go down and “–” to go up to highlight **24.18 Error History**. Press **OK**.
- 6 Option **24.18.0 Last 10 Errors** is highlighted. Press **OK**. A survey of the last 10 Errors appears.

Disposal and recycling

Device decommissioning

If the device has to be decommissioned please note the following points for dismantling and disposal:

- The decommissioning should only be performed by qualified specialist personnel, since certain activities are required on electrical components and fuel carrying lines.
- Switch off the main power supply to the device/ the device part and secure it against being switched back on.
- Check that the device / device part is de-energised.

Disposal of packaging material

The packaging materials used can be recycled. Please use the countryspecific recycling systems for professional and appropriate disposal or leave packaging materials with your specialist tradesman or dealer.

Device disposal

The device must be disposed of separately from general household waste and sent to a collection point for separate disposal of electrical and electronic devices (European Directive on Waste Electrical and Electronic Equipment WEEE 2012/19/EU), or must be taken back by a dealer when purchasing a new device of the same type. The user is responsible for ensuring that the device is properly disposed of at the end of its life. For more information on the disposal options available, contact your local authority or the dealer from whom the device was purchased.

Appendix

Sensor resistance

Sensor resistance

In the adjacent table contains a list of values for all boiler sensors, and for the optional sensors that are contained in the accessory kits.

These tables show average values, since all sensors are subject to fluctuations.

When measuring resistance values, the boiler should always be switched off. Carry out measurements near to the sensor, so as to avoid deviations from the values.

Heating flow sensor Heating return sensor DHW sensor Flue gas sensor		Outdoor temperature sensor	
NTC10k (25°C)		NTC1k (25°C)	
Temperature [°C]	Resistance [Ohm]	Temperature [°C]	Resistance [Ohm]
-10	55.047	-10	4.574
0	32.555	-9	4.358
10	19.873	-8	4.152
12	18.069	-7	3.958
14	16.447	-6	3.774
16	14.988	-5	3.600
18	13.674	-4	3.435
20	12.488	-3	3.279
22	11.417	-2	3.131
24	10.449	-1	2.990
26	9.573	0	2.857
28	8.779	1	2.730
30	8.059	2	2.610
32	7.406	3	2.496
34	6.811	4	2.387
36	6.271	5	2.284
38	5.779	6	2.186
40	5.330	7	2.093
42	4.921	8	2.004
44	4.547	9	1.920
46	4.205	10	1.840
48	3.892	11	1.763
50	3.605	12	1.690
52	3.343	13	1.621
54	3.102	14	1.555
56	2.880	15	1.492
58	2.677	16	1.433
60	2.490	17	1.375
62	2.318	18	1.320
64	2.159	19	1.268
66	2.013	20	1.218
68	1.878	21	1.170
70	1.753	22	1.125
72	1.638	23	1.081
74	1.531	24	1.040
76	1.433	25	1.000
78	1.341	26	962
80	1.256	27	926
82	1.178	28	892
84	1.105	29	858
86	1.037	30	827
88	974	35	687
90	915	40	575

Appendix

Standard schemes

Scheme	Boiler group	Distribution group
1	Single boiler or cascade	One direct zone
Name and Description	ECU I/O	Note
Boiler flow sensor	NTC1	
Boiler return sensor	NTC2	
Outdoor sensor	NTC4	
Boiler pump (230 V)	P1	
Boiler pump (PWM)	PWM_P1	
Common flow sensor (T10)	MTS1	
HC1 pump	MO1_HV	Pumps managed in parallel
System pump*	MO1_HV	
Heat request zone 1	PADIN1 or EBUS2	
Alarm or sanitary pump	VFR1	Optional
LPG/ Room supply Fan	VFR3	

*System pump: optional electrical connection. To use depending on application.

Appendix

Standard schemes

Scheme	Boiler group	Distribution group																																													
2	Single boiler or cascade	Multiple direct zones																																													
<table border="1"> <thead> <tr> <th>Name and Description</th> <th>ECU I/O</th> <th>Note</th> </tr> </thead> <tbody> <tr> <td>Outdoor sensor</td> <td>NTC4</td> <td></td></tr> <tr> <td>Boiler pump (230 V)</td> <td>P1</td> <td></td></tr> <tr> <td>Boiler pump (PWM)</td> <td>PWM_P1</td> <td></td></tr> <tr> <td>Boiler flow sensor</td> <td>NTC1</td> <td></td></tr> <tr> <td>Boiler return sensor</td> <td>NTC2</td> <td></td></tr> <tr> <td>T10</td> <td>MTS1</td> <td></td></tr> <tr> <td>HC1 pump</td> <td>P_Z1</td> <td rowspan="3">Controlled with CLIP 3 ZONE MIX. CLIP 3 ZONE MIX needed!</td></tr> <tr> <td>HC2 pump</td> <td>P_Z2</td> </tr> <tr> <td>HC3 pump</td> <td>P_Z3</td> </tr> <tr> <td>System pump*</td> <td>MO1_HV</td> <td>ON/OFF Pump.</td></tr> <tr> <td>Heat request zone 1</td> <td>PADIN1 or EBUS2</td> <td></td></tr> <tr> <td>Heat request zone 2</td> <td>PADIN2 or EBUS2</td> <td></td></tr> <tr> <td>Heat request zone 3</td> <td>PADIN3 or EBUS2</td> <td></td></tr> <tr> <td>Alarm or sanitary pump</td> <td>VFR1</td> <td rowspan="2">Optional</td></tr> <tr> <td>LPG/ Room supply Fan</td> <td>VFR3</td> </tr> </tbody> </table>		Name and Description	ECU I/O	Note	Outdoor sensor	NTC4		Boiler pump (230 V)	P1		Boiler pump (PWM)	PWM_P1		Boiler flow sensor	NTC1		Boiler return sensor	NTC2		T10	MTS1		HC1 pump	P_Z1	Controlled with CLIP 3 ZONE MIX. CLIP 3 ZONE MIX needed!	HC2 pump	P_Z2	HC3 pump	P_Z3	System pump*	MO1_HV	ON/OFF Pump.	Heat request zone 1	PADIN1 or EBUS2		Heat request zone 2	PADIN2 or EBUS2		Heat request zone 3	PADIN3 or EBUS2		Alarm or sanitary pump	VFR1	Optional	LPG/ Room supply Fan	VFR3	
Name and Description	ECU I/O	Note																																													
Outdoor sensor	NTC4																																														
Boiler pump (230 V)	P1																																														
Boiler pump (PWM)	PWM_P1																																														
Boiler flow sensor	NTC1																																														
Boiler return sensor	NTC2																																														
T10	MTS1																																														
HC1 pump	P_Z1	Controlled with CLIP 3 ZONE MIX. CLIP 3 ZONE MIX needed!																																													
HC2 pump	P_Z2																																														
HC3 pump	P_Z3																																														
System pump*	MO1_HV	ON/OFF Pump.																																													
Heat request zone 1	PADIN1 or EBUS2																																														
Heat request zone 2	PADIN2 or EBUS2																																														
Heat request zone 3	PADIN3 or EBUS2																																														
Alarm or sanitary pump	VFR1	Optional																																													
LPG/ Room supply Fan	VFR3																																														

*System pump: optional electrical connection. To use depending on application.

Appendix

Standard schemes

Scheme	Boiler group	Distribution group																																												
3	Single boiler or cascade	One or multiple mixing zones																																												
<table border="1"> <thead> <tr> <th>Name and Description</th><th>ECU I/O</th></tr> </thead> <tbody> <tr> <td>Outdoor sensor</td><td>NTC4</td></tr> <tr> <td>Boiler pump (230 V)</td><td>P1</td></tr> <tr> <td>Boiler pump (PWM)</td><td>PWM_P1</td></tr> <tr> <td>Boiler flow sensor</td><td>NTC1</td></tr> <tr> <td>Boiler return sensor</td><td>NTC2</td></tr> <tr> <td>T10</td><td>MTS1</td></tr> <tr> <td>HC1 pump</td><td>P_Z1</td></tr> <tr> <td>HC1 mix valve</td><td>MV_Z1</td></tr> <tr> <td>HC1 flow sensor</td><td>NTC_Z1</td></tr> <tr> <td>HC2 pump</td><td>P_Z2</td></tr> <tr> <td>HC2 mix valve</td><td>MV_Z2</td></tr> <tr> <td>HC2 flow sensor</td><td>NTC_Z2</td></tr> <tr> <td>HC3 pump</td><td>P_Z3</td></tr> <tr> <td>HC3 mix valve</td><td>MV_Z3</td></tr> <tr> <td>HC3 flow sensor</td><td>NTC_Z3</td></tr> <tr> <td>System pump*</td><td>MO1_HV</td></tr> <tr> <td>Heat request zone 1</td><td>PADIN1 or EBUS2</td></tr> <tr> <td>Heat request zone 2</td><td>PADIN2 or EBUS2</td></tr> <tr> <td>Heat request zone 3</td><td>PADIN3 or EBUS2</td></tr> <tr> <td>Alarm or sanitary pump</td><td>VFR1</td></tr> <tr> <td>LPG/ Room supply Fan</td><td>VFR3</td></tr> </tbody> </table>		Name and Description	ECU I/O	Outdoor sensor	NTC4	Boiler pump (230 V)	P1	Boiler pump (PWM)	PWM_P1	Boiler flow sensor	NTC1	Boiler return sensor	NTC2	T10	MTS1	HC1 pump	P_Z1	HC1 mix valve	MV_Z1	HC1 flow sensor	NTC_Z1	HC2 pump	P_Z2	HC2 mix valve	MV_Z2	HC2 flow sensor	NTC_Z2	HC3 pump	P_Z3	HC3 mix valve	MV_Z3	HC3 flow sensor	NTC_Z3	System pump*	MO1_HV	Heat request zone 1	PADIN1 or EBUS2	Heat request zone 2	PADIN2 or EBUS2	Heat request zone 3	PADIN3 or EBUS2	Alarm or sanitary pump	VFR1	LPG/ Room supply Fan	VFR3	<p>Controlled with CLIP 3 ZONE MIX. CLIP 3 ZONE MIX needed!</p> <p>Optional</p>
Name and Description	ECU I/O																																													
Outdoor sensor	NTC4																																													
Boiler pump (230 V)	P1																																													
Boiler pump (PWM)	PWM_P1																																													
Boiler flow sensor	NTC1																																													
Boiler return sensor	NTC2																																													
T10	MTS1																																													
HC1 pump	P_Z1																																													
HC1 mix valve	MV_Z1																																													
HC1 flow sensor	NTC_Z1																																													
HC2 pump	P_Z2																																													
HC2 mix valve	MV_Z2																																													
HC2 flow sensor	NTC_Z2																																													
HC3 pump	P_Z3																																													
HC3 mix valve	MV_Z3																																													
HC3 flow sensor	NTC_Z3																																													
System pump*	MO1_HV																																													
Heat request zone 1	PADIN1 or EBUS2																																													
Heat request zone 2	PADIN2 or EBUS2																																													
Heat request zone 3	PADIN3 or EBUS2																																													
Alarm or sanitary pump	VFR1																																													
LPG/ Room supply Fan	VFR3																																													

*System pump: optional electrical connection. To use depending on application.

Combination of multiple zones (direct and/or mixed) can be done with CLIP 3 ZONE MIX. Final configuration can be created as a combination of scheme 2 and scheme 3.

Appendix

Standard schemes

Scheme	Boiler group	Distribution group
4	Single boiler or cascade	<ul style="list-style-type: none"> DHW tank downstream hydraulic separator From 1 to 3 mixing zone
	<p>The schematic diagram illustrates the system configuration for Scheme 4. On the left, a boiler is connected to a DHW tank. The tank has two sensors: NTC1 and NTC2. A pump P1 is connected to the tank. A system pump* is shown at the bottom. A temperature sensor T10 is located in the system. A pressure sensor P2 is positioned between the boiler and the distribution group. The distribution group on the right contains a heat pump HC1 and a heat request zone 1. An outdoor sensor is also indicated.</p>	

Name and Description	ECU I/O	Note
Outdoor sensor	NTC4	
Boiler pump (230 V)	P1	
Boiler pump (PWM)	PWM_P1	
Boiler flow sensor	NTC1	
Boiler return sensor	NTC2	
DHW tank sensor	NTC3	
DHW pump	P2	
T10	MTS1	
HC1 pump	VFR1	See note *1
System pump*	MO1_HV	
Heat request zone 1	PADIN1 or EBUS2	
Alarm or sanitary pump	VFR1	Optional; see note *1
LPG/ Room supply Fan	VFR3	Optional

*System pump: optional electrical connection. To use depending on application.

Note:

- If all the VFR are needed for other functions (alarm, flue gas dumper, LPG, ...), HC1 pump must be connected to P_Z1 of Controlled with CLIP 3 ZONE MIX. CLIP 3 ZONE MIX is needed!

CE DECLARATION OF CONFORMITY

Hereby declares ATAG Verwarming Nederland BV that,
the condensing boiler types: ATAG

XL75F XL105F XL125F XL150F XL180F XL210F

are in conformity with the following standards:

EU Gas Appliance Regulation	2016/426/EU	EN 15502-1: EN 15502-2-1: EN 60335-1: EN 60335-2-102: EN 298:	2012 2012 2011 2016 2013
Boiler Efficiency Directive	92/42/EEC	EN 15502-2-2:	2014
Low Voltage Directive	2014/35/EU	EN 60335-2-102: EN 60335-1:	2016 2011
EMC Directive	2014/30//EU	EN 60335-2-102: EN 61000-3-2: EN 61000-3-3: EN 55014-1: EN 55014-2:	2016 2013 2014 2011 2008
Ecodesign Directive	2009/125/EC 2017/1369/EU	EN 15036-1: EN 13203-2: EN 15502-1: regulation (EU) 811: regulation (EU) 813:	2006 2014 2012 2013 2013
Restriction of Hazardous Substances	2011/65/EU		


This product is designated with CE number:

CE – 0063CT3449

and that the products are in conformity with EC type-examination certificate number E0430, as stated by KIWA-Gastec Certification BV, Apeldoorn, The Netherlands.

Date : 11-06-2020

Signature :

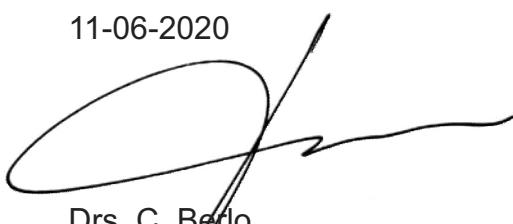

Full name : Drs. C. Berlo
CEO

ATAG
Verwarming

Adres: Galileïstraat 27, 7131 PE Lichtenvoorde • Postadres: Postbus 105, 7130 AC Lichtenvoorde
Telefoon: +31(0) 544 391777, Fax: +31(0) 544 391703
E-mail: info@atagverwarming.com Internet: http://www.atagverwarming.nl

Notes

Notes

Notes

ATAG

kiwa
approved
product



UK WATER SUPPLY
REGULATIONS

**energy
saving
trust**
endorsed
product



ATAG Commercial • 3 Juniper West Fenton Way • Southfields Business Park • SS15 6SJ Basildon, Essex
Phone: 0345 646 0373 • E-mail: info@atagcommercial.co.uk • Internet: www.atagcommercial.co.uk